

**9000 Series
Industrial
Gigabit Ethernet Switch**

**User Manual &
Installation
Guide**

Industrial Gigabit Ethernet Switch Installation Guide.....	7
Safety Warnings.....	8
INSTALLATION	10
SERVICING	10
CONNECTING THE UNIT	16
Overview of Advanced Features.....	18
Mode of Operation.....	18
Port Security.....	18
Port Mirroring.....	18
Port Trunking.....	18
Priority Tagging (QoS)	18
Virtual LAN.....	19
Rapid Spanning Tree Protocol.....	19
SNMP Traps.....	19
IGMP Snooping	20
N-Ring.....	20
Web Software Configuration	22
Web Management	22
Administration – SNMP	26
Administration – Slots	27
Ports – Configuration.....	28
Ports – Intrusion Log	31
Ports – Mirroring.....	32
Ports – Trunking	33
Statistics – Port Statistics.....	35
VLAN – Ingress Filter	37
VLAN – Port Based.....	38
Bridging – Aging Time.....	41
Bridging – Unicast Addresses.....	42
Bridging – Multicast Addresses.....	44
RSTP – RSTP Configuration.....	46
IGMP – Configuration	50
IGMP – Show Group and Show Router	51
IGMP – RFilter	52
N-Ring – Status.....	57
NView – Configuration.....	60
NView – Ports.....	61
EventLog – Log Statistics.....	63
EventLog – Show Events.....	64
Firmware/Config – TFTP	65
Firmware/Config – FTP.....	66
Support – Web Site and E-mail	67
BPCL – Broadcast Packet Count Limit Configuration.....	68
User Mgmt – Adding Users	69
User Mgmt – Removing Users	70
Logical View.....	71
Config – Save and Restore.....	72
Help – Overview	73
Help – Administration.....	74
Help – Ports.....	75

Help – Statistics	76
Help – VLAN.....	77
Help – BPCL.....	78
Help – IGMP.....	79
Help – Bridging.....	80
Help – RSTP	81
Help – Event Log.....	82
Help – Firmware/Config	83
Help – Logical View	84
Help – User Mgmt	85
Help – NView	86
Help – Others	87
CLI Commands	88
Clear.....	88
“?” (HELP).....	88
Top	89
Up.....	89
Logout.....	89
History.....	89
“!”	90
“\$”	91
Whoami.....	91
Ping	91
System Configuration Commands	92
Set Mode IP config	92
Set IP/Subnet/Gateway Addresses of the system.....	92
Get IP Address of the system.....	92
Set System Name	92
Get System Name	92
Get Gateway Address of the System	93
Get Mac Address of the System.....	93
Get Netmask of the System.....	93
Get System Contact.....	93
Set System Contact	93
Get System Location.....	93
Set System Location	94
Get System Uptime	94
Get Number of Ports present in the System.....	94
Set IP Address of the SNMP Manager	94
Set SNMP Get Community name	94
Set SNMP Set Community name.....	95
Set SNMP Trap Community name	95
Show all configuration parameters	95
Show all configuration parameters related to SNMP manager.....	96
System Restart	96
User Management Commands	97
Show System Users.....	97
Add a System User.....	97
Modify a User’s Access Permissions.....	97
Modify a User’s Password.....	97
Remove a System User	98

Download Image through COM port.....	99
TFTP Commands.....	99
Set the TFTP configuration parameter.....	99
Show TFTP configuration parameters.....	99
Download file from TFTP server.....	99
FTP Commands	100
Set Username	100
Set Password	100
Set IP Address of FTP server.....	100
Set Name of the Remote File	100
Display FTP related configuration parameters	101
Perform the configuration file transfer action.....	101
Perform the image file transfer action	101
Port Manager Commands	102
Get the link state of a given port.....	102
Get admin status of the port.....	102
Set admin status of a port.....	102
Show port statistics	103
Get total number of good frames received.....	103
Get port speed	103
Set Port Speed.....	103
Get the port duplex mode.....	103
Set the port duplex mode	104
Set the Lockstate of a given port.....	104
Get Lock State.....	104
Get Auto-negotiation State	104
Set Auto-negotiation State	105
Set Priority State	105
Set Flow Control	105
Set Name	105
Set PVID	105
Set Backpressure.....	106
Set Intruderstate	106
Set Priority Level	106
Show Configuration.....	106
Show Intruders.....	106
Show Link Utilization.....	106
Get Flow Control	107
Get Name	107
Get State Of Priority	107
Get Intruder State.....	107
Get Priority Level	107
Get STP Status	107
Get Back Pressure.....	108
Get PVID	108
Clear Counters	108
Clear Intruder Log.....	108
Trunk related commands.....	109
Enable or Disable Trunking.....	109
Modify Trunk.....	109
Create Trunk	109

Delete Trunk	110
Show Trunk Information.....	110
Mirroring related commands.....	111
Set Mirror config.....	111
Enable or Disable Port Mirroring	111
Show Mirror config.....	111
VLAN Related Commands	112
Add VLAN Entry.....	112
Show List of Configured VLANs	112
Display Information of a particular VLAN	112
Modify an existing VLAN	113
Delete VLAN.....	113
Set VLAN as management VLAN	113
Set VLAN to defaults.....	114
Set VLAN Ingress Filter	114
Get VLAN Ingress Filter	114
Get VLAN info	114
Eventlog Related Commands.....	115
Get Eventlog count	115
Get Eventlog level.....	115
Get Eventlog size	115
Set Eventlog level	115
Set Eventlog size.....	115
Show Eventlog events.....	116
Bridging Related Commands.....	117
Add Multicast MAC Address	117
Delete Multicast MAC Address.....	117
Add a Unicast MAC Address	117
Delete Unicast MAC Address.....	117
Display List of Configured Static MAC Addresses.....	118
Set Aging Time	118
Display Current Aging Time	118
Display Mac Address by port	118
Display port by Mac Address	118
Display Mac count	118
IGMP Related Commands	119
Enable IGMP	119
Disable IGMP	119
Show IGMP config	119
Show IGMP group	119
Show IGMP router.....	120
Set IGMP query mode	120
Set IGMP router port	120
Set IGMP router mode	120
Show IGMP rfilter mode	121
Set IGMP rfilter mode	121
N-Ring Related Commands	122
N-Ring get agingtime.....	122
N-Ring set agingtime	122
N-Ring get webfault.....	122
N-Ring set webfault	122

N-Ring get interval	122
N-Ring set interval.....	123
N-Ring get mode.....	124
N-Ring set mode	124
N-Ring show status.....	125
N-Ring show switch.....	125
Configuration Related Commands.....	126
Save Configuration	126
Load Default Configuration.....	126
Configuration Upload	126
Server-IpAddress	126
File-Name	126
Configuration Download	126
Server-IpAddress	126
File-Name	126
Rapid Spanning Tree Protocol Related Commands.....	127
Set RSTP Admin Edge.....	127
Get RSTP Admin Edge.....	127
Set RSTP Auto Edge.....	127
Get RSTP Auto Edge.....	127
Set RSTP Bridge Admin Status	128
Get RSTP Bridge Admin Status	128
Set RSTP Bridge Forward Delay	128
Get RSTP Bridge Forward Delay	128
Set RSTP Bridge Hello Time.....	129
Get RSTP Bridge Hello Time	129
Set RSTP Bridge Max Age.....	129
Get RSTP Bridge Max Age	129
Set RSTP Bridge Priority.....	130
Get RSTP Bridge Priority	130
Set RSTP Port Path Cost.....	130
Get RSTP Port Path Cost.....	130
Set RSTP Port Priority	131
Get RSTP Port Priority	131
Broadcast Packet Count Limit Commands	132
Get the Broadcast Packet Count Limit for one port.....	132
Get the Broadcast Packet Count Limit for all ports.....	132
Set the Broadcast Packet Count Limit	132
VLAN Configuration Examples	133
Example 1 – Basic understanding of port based VLANs	133
Example 2 – Basic understanding of tagged VLANs (Admit – Tagged Only)	133
Example 3 – Basic understanding of tagged VLANs (Admit – All)	134
Example 4 – Basic understanding of Hybrid VLANs	134
Example 5 – Basic understanding of Overlapping VLANs.....	135
Example 6 – Basic understanding of VLANs with Multicast Filtering.....	135
KEY SPECIFICATIONS.....	136
N-TRON Limited Warranty.....	138

Industrial Gigabit Ethernet Switch Installation Guide

9000 Series



The N-TRON 9000 Series Gigabit Ethernet Capable Industrial Ethernet Switch offers outstanding performance and ease of use. It is ideally suited for connecting Ethernet enabled industrial and or security equipment and is a fully managed switch.

PRODUCT FEATURES

- Full IEEE 802.3 Compliance
- Full IEEE 1613 Compliance (Electric Power Stations)
- NEMA TS1/TS2 Compliance (Traffic Control systems)
- ABS Type Approval (Maritime and Offshore Applications)
- Scaleable Switch with 4 I/O Slots
- Up to Twenty-four 10/100 BaseTX RJ-45 Ports
- Two Optional 1000BaseSX Ports, LC style
- Extended Environmental Specifications
- Autosensing 10/100BaseTX, Duplex, and MDIX
- Offers Rapid Spanning Tree Protocol
- Trunk with a 500 Series Switch over two or more ports
- Store & Forward Technology
- Plug and Play IGMP Support
- Rugged Din-Rail Enclosure
- Redundant Power Inputs (10-30 VDC)
- Full SNMP
- Web Browsing and N-View Switch Monitoring

MODULE / SLOT OPTIONS

- 9000 CPU Module – Standard CPU Module
- 9002 CPU Module – CPU Module with 2 Gigabit Fiber Ports
- 9006 TX – 6 Port 10/100 Base-TX Copper Module
- 9004 FX – 4 Port 100 Base-FX Fiber Module
- 9002 FX – 2 Port 100 Base-FX Fiber Module

MANAGEMENT FEATURES

- IGMP Snooping
- VLAN
- QoS
- Trunking
- Mirroring
- 802.1D-2004 Rapid Spanning Tree



All rights reserved. Reproduction, adaptation, or translation without prior written permission from N-Tron Corp. is prohibited, except as allowed under copyright laws.

Ethernet is a registered trademark of Xerox Corporation. All other product names, company names, logos or other designations mentioned herein are trademarks of their respective owners.

The information contained in this document is subject to change without notice. N-Tron Corp. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose. In no event shall N-Tron Corp. be liable for any incidental, special, indirect, or consequential damages whatsoever included but not limited to lost profits arising out of errors or omissions in this manual or the information contained herein.

Warning

Do not perform any services on the unit unless qualified to do so. Do not substitute unauthorized parts or make unauthorized modifications to the unit.

Do not operate the unit with the top cover removed, as this could create a shock or fire hazard.

Do not block the air vents on the sides or the top of the unit.

Do not operate the equipment in the presence of flammable gasses or fumes. Operating electrical equipment in such an environment constitutes a definite safety hazard.

Do not operate the equipment in a manner not specified by this manual.

Safety Warnings

GENERAL SAFETY

WARNING: If the equipment is used in the manner not specified by N-Tron Corp., the protection provided by the equipment may be impaired.

LASER SAFETY (FXE Models -40, -80 and 9002CPU-LX -40, -70)



WARNING: CLASS 1 Laser Product. Do not stare into the laser.

Contact Information

N-Tron Corp.
820 South University Blvd.
Suite 4E
Mobile, AL 36609
TEL: (251) 342-2164
FAX: (251) 342-6353
Website: www.n-tron.com
Email: support@n-tron.com

ENVIRONMENTAL SAFETY



WARNING: Disconnect the power and allow to cool 5 minutes before touching.

ELECTRICAL SAFETY



WARNING: Disconnect the power cable before removing any modules, or any enclosure panel.

WARNING: Do not operate the unit with the any cover removed.

WARNING: Do not work on equipment or cables during periods of lightning activity.

WARNING: Do not perform any services on the unit unless qualified to do so.

WARNING: Do not block the air vents.

WARNING: Observe proper DC Voltage polarity when installing power input cables. Reversing voltage polarity can cause permanent damage to the unit and void the warranty.

9000 Series Hazardous Location Installation Requirements

1. **WARNING:** Do not disconnect while circuit is live, unless area is known to be non-hazardous.
2. **WARNING:** Install only in accordance with Local & National Codes of Authorities Having Jurisdiction.
3. **WARNING:** This equipment is suitable for use in Class I, Div. 2, Groups A, B, C, D or Non-Hazardous Locations Only.
4. **WARNING:** Explosion Hazard – Substitution of Components May Impair Suitability For Class I, Div. 2.
5. Power must be supplied by an isolating source, and a 5.0 A max rated UL recognized fuse must be installed immediately before the unit.
6. Class I, Div 2 installations require that all devices connected to this product must be UL listed for the area in which it is installed.
7. Only UL listed wiring with temperature ratings greater than 90°C permitted for Class I, Div 2 installations operating at temperatures up to 70°C ambient.
8. Limited Operating Voltage: 12-30V for Class I, Div 2 installations.
9. Maximum operating voltage of power source shall not exceed 60 Vdc including battery charging float voltage.

PACKAGE CONTENTS

Please make sure the 9000 Series Gigabit Ethernet Switch package contains the following items:

1. 9000 Series Gigabit Ethernet Switch with modules or filler panels
2. Product CD

Contact your carrier if any items are damaged.

INSTALLATION

Read the following warning before beginning the installation:

WARNING

Never install or work on electrical equipment or cabling during periods of lightning activity. Never connect or disconnect power when hazardous gasses are present.



Disconnect the power cable before removing any enclosure panel.
Do not operate the unit with any covers removed

UNPACKING

Remove all the equipment from the packaging, and store the packaging in a safe place. File any damage claims with the carrier.

CLEANING

Clean only with a damp cloth.

SERVICING

The 9000 Series is a modular based Gigabit Ethernet Switch with up to 4 slots for ports and one slot for the CPU module. Please follow the steps below for adding, removing, or swapping modules in the 9000 series switch. Technicians performing the following steps should wear proper anti-static equipment to protect the circuit boards. **WARNING: The 9000 series switch is NOT hot swappable. Removing or adding modules while the power is still on can damage the equipment.**

Adding or Replacing a Module:

1. Remove power from the switch.
2. Unscrew the two thumb screws for the filler panel or module that you are replacing.
3. Using both hands pull on both thumb screws to slide the filler panel or module you are replacing off the 9000BP.
4. Align the new module such that it slides on the rails and firmly push it into the unit.
5. Screw both thumb screws down till they are finger tight.
6. Reapply the power and configure the slots on the 9000 either through the web management interface or the serial management interface.

NOTE: Modules should be installed in slot order (from left to right). So in a 2 slot configuration Slots A and B are populated. Empty slots must be covered with a 9000-FP to meet emission standards.


Replacing a CPU Module:

1. Remove power from the switch.
2. Unscrew the two thumb screws for the CPU module that you are replacing.
3. Using both hands pull on both thumb screws to slide the CPU module out of the 9000BP.
4. Align the new CPU Module such that it slides on the rails and firmly push it into the unit.
5. Screw both thumb screws down till they are finger tight.
6. Reapply the power to the switch.


NOTE: All configuration settings are saved to the NVRAM which is stored locally on the CPU Module. If you replace the CPU Module all settings will move with the CPU Module. You can save and download a custom configuration to a TFTP or an FTP server. The switch's MAC Address and IP Address will also move with the CPU Module.

DIN-Rail Mounting


Install the unit on a standard 35mm Din-Rail. Recess the unit to allow at least 5" of horizontal clearance for fiber cable bend radius.

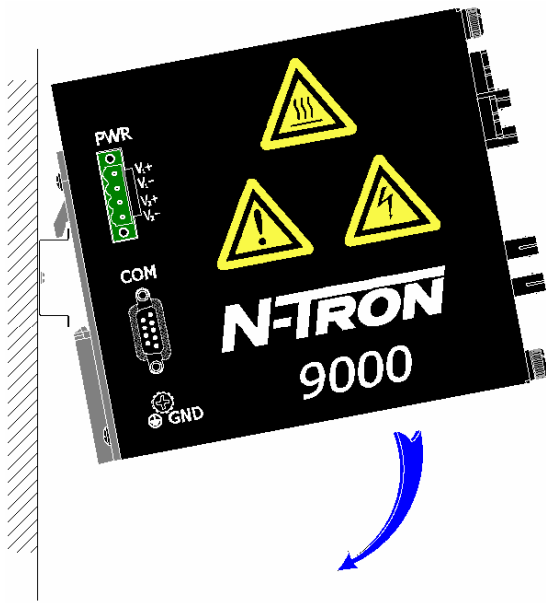

To mount the unit to the 35mm din-rail, place top edge of the bracket on the back of the unit against the din-rail at a 45° upward angle. Lower the bottom of the unit until it snaps into place.

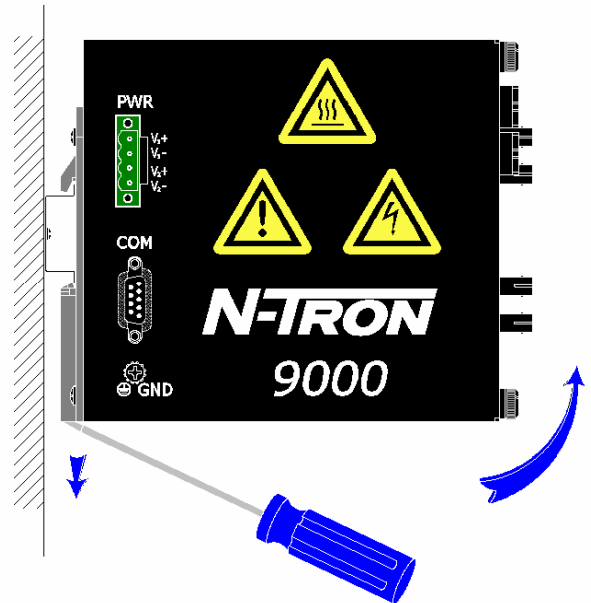


To remove the unit from the 35mm din-rail, place a flat head screwdriver into the release clip at the bottom of the unit, and push down on the clip until it disengages from the bottom of the unit from the din-rail. Lift the bottom of the unit up at an approximate 45° upward angle to completely remove the unit.

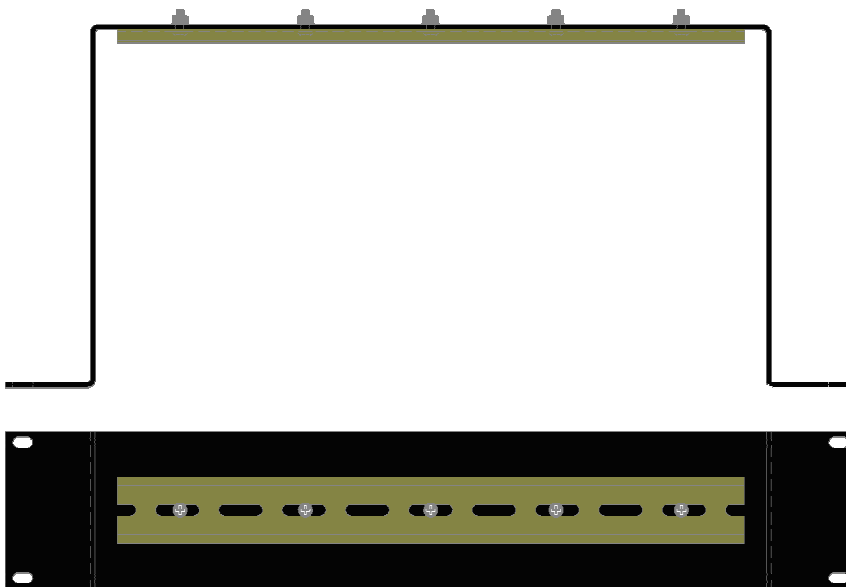


Most N-Tron™ products are designed to be mounted on industry standard 35mm DIN-Rail. However, DIN-Rail mounting may not be suitable for all applications. Our Rack Mount Assembly (P/N: 900-RM) may be used to mount the 9000 Series to standard 19" racks as an option.

Panel Mount Mounting

Install the unit directly on a wall or sturdy panel such as a bulkhead. Recess the unit to allow at least 5" of horizontal clearance for fiber cable bend radius.

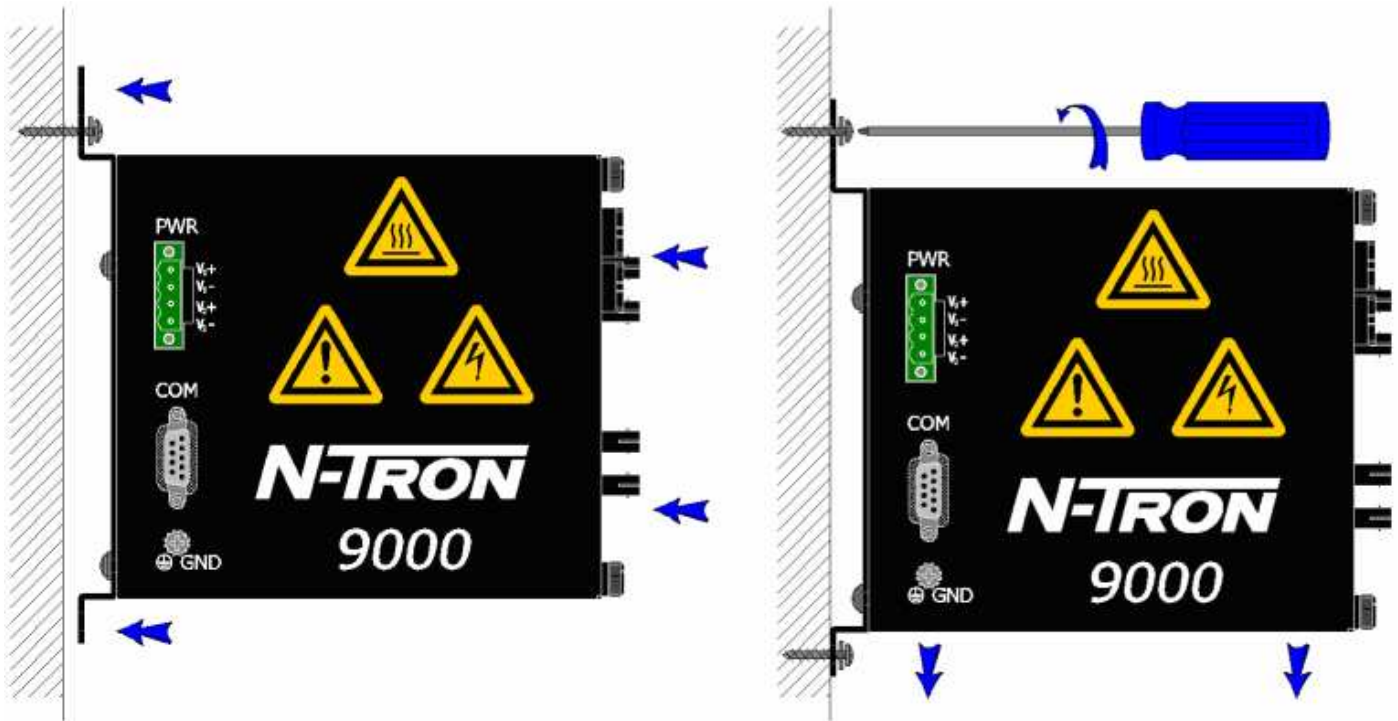


To bulkhead mount the unit, place top edge of the bracket on the back of the unit against two screws at a 45° upward angle. Lower the bottom of the unit until it is flush with the wall, and secure the bottom of the unit with two more screws.

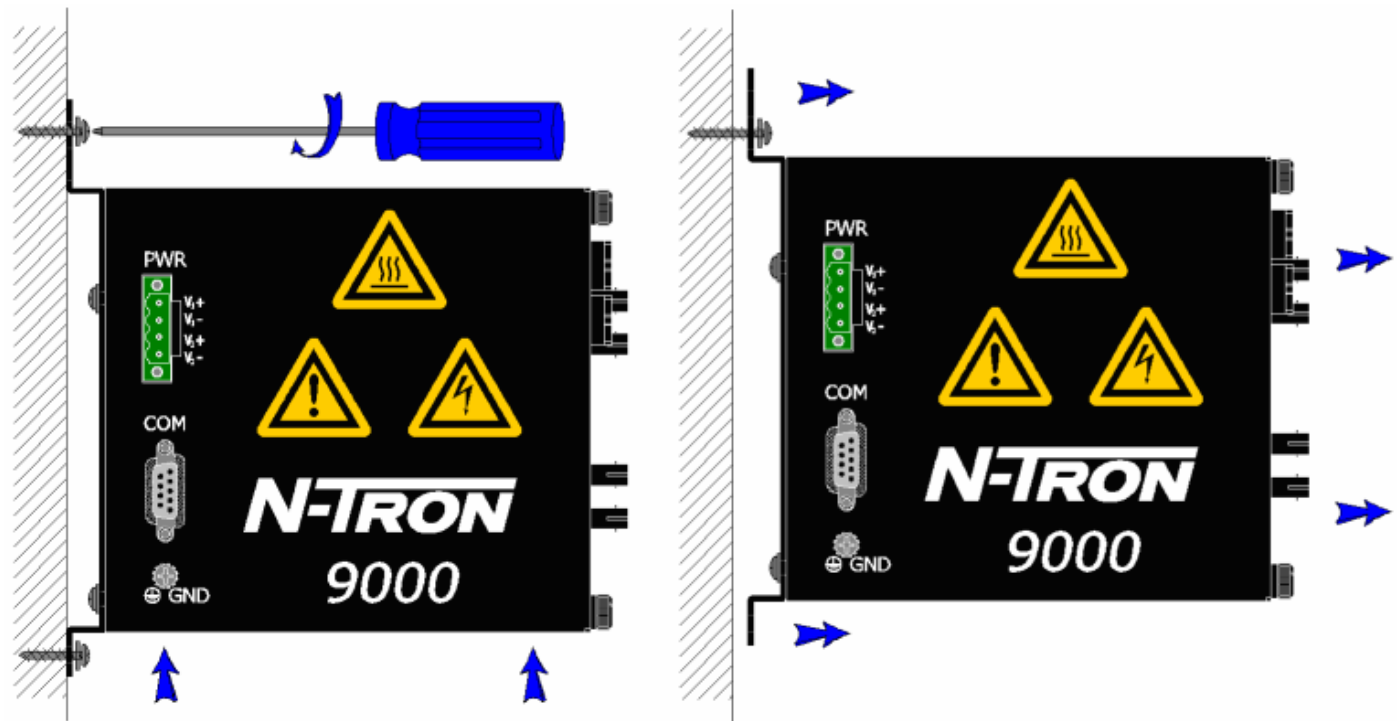


To remove the unit from a wall, remove the bottom two screws that secure it to the wall and slide the unit up until the top two screws will fit through the larger holes on the unit. The switch should then freely come away from the wall.

FRONT PANEL

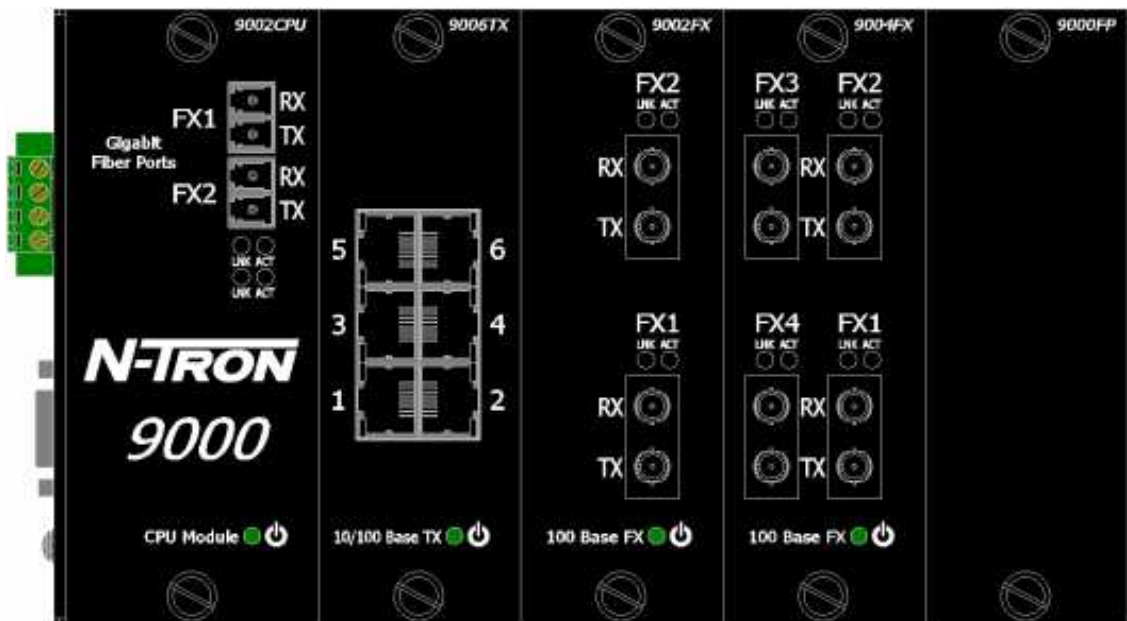


From Top to Bottom:


Gigabit Ports	1000 Base-SX Connections
Fiber Ports	100 Base-FX Connections
RJ45 Ports	Auto sensing 10/100 Base-TX Connections
	Green LED lights when Power is supplied to the module

NOTE: The RJ45 data port has two LED's located at the side of the connector. The bottom LED indicates LINK status, and the top LED indicates ACTIVITY.

LED's: The table below describes the operating modes:

LED	Color	Description
	GREEN	Power is Applied
	OFF	Power is OFF
LNK	GREEN	10/100/1000Mb Link between ports
	OFF	No Link between ports
ACT	GREEN	Data is active between ports
	OFF	Data is inactive between ports

APPLYING POWER (Side View)

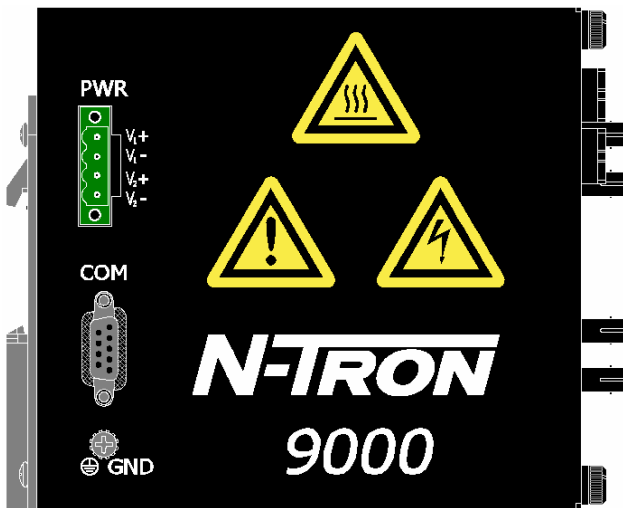

- Unscrew & Remove the DC Voltage Input Plug from the Power Input Header
- Install the DC Power Cables into the Plug (observing polarity).
- Plug the Voltage Input Plug back into the Power Input Header.
- Tightening torque for the terminal block power plug is **0.5 Nm/0.368 Pound Foot**.
- Verify the Power LED stays ON (GREEN).


Note: Only 1 power supply must be connected to power for minimal operation. For redundant power operation, V₁ and V₂ inputs must be connected to separate DC Voltage sources. This device will draw current from both sources simultaneously. Use 16-28 gauge wire when connecting to the power supply.

Recommended 24V DC Power Supplies, similar to: N-Tron's P/N **NTPS-24-5**

- | | |
|--------------------------------|--|
| • Input AC 100V...240V | • Power 120W |
| • Output DC 24V...28V | • Peak Power 180W (max 4 sec.) |
| • Output Current 5A | • 35 mm DIN-Rail Mountable |
| • Peak Current 7.5A for 4 sec. | • Dimensions: 1.57"W x 4.88"H x 4.61"D |

N-TRON SWITCH GROUNDING TECHNIQUES


The grounding philosophy of any control system is an integral part of the design. N-Tron switches are designed to be grounded, but the user has been given the flexibility to float the switch when required. The best noise immunity and emissions (i.e. CE) are obtained when the N-Tron switch chassis is connected to earth ground via a drain wire. Some N-Tron switches have metal din-rail brackets that can ground the switch if the din-rail is grounded. In some cases, N-Tron switches with metal brackets can be supplied with optional plastic brackets if isolation is required.

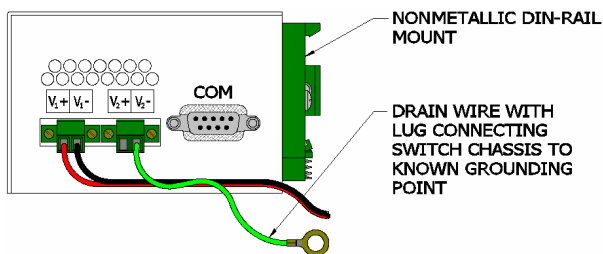

Both V- legs of the power input connector are connected to chassis internally on the PCB. Connecting a drain wire to earth ground from one of the V- terminal plugs as shown here will ground the switch and the chassis. The power leads from the power source should be limited to 3 meters or less in length.

As an alternate, users can run a drain wire & lug from any of the Din-Rail screws or empty PEM nuts on the enclosure. When using an unused PEM nut to connect a ground lug via a machine screw, care should be taken to limit the penetration of the outer skin by less than 1/4 in. Failure to do so may cause irreversible damage to the internal components of the switch.

Note: Before applying power to the grounded switch, you must use a volt meter to verify there is no voltage difference between the power supply's negative output terminal and the switch chassis grounding point.

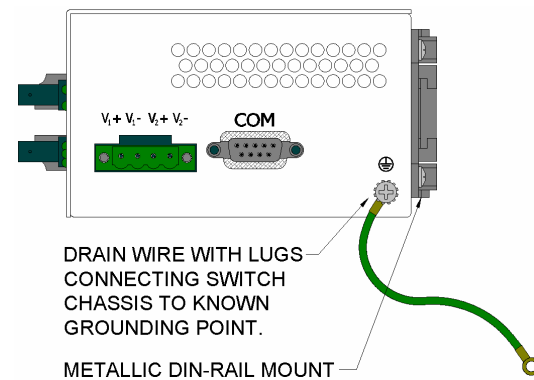

The use of shielded cables between devices is not required for most N-Tron devices (please consult the user manuals for specific details). If the use of shielded cables is required, it is generally recommended to only connect the shield at one end to prevent ground loops and interfere with low level signals (i.e. thermocouples, RTD, etc.). Cat5e cables manufactured to EIA-568A or 568B specifications are required for use with N-Tron Switches.




In the event all Cat5e patch cable distances are small (i.e. All Ethernet devices are located the same local cabinet and/or referenced to the same earth ground), it is permissible to use fully shielded cables terminated to chassis ground at both ends in systems void of low level analog signals.

CONNECTING THE UNIT

For FX/FXE units, remove the dust cap from the fiber optic connectors and connect the fiber optic cables. The TX port on the FX/FXE models should be connected to the RX port of the far end station. The RX port on the FX/FXE versions should be connected to the TX port of the far end station.


For 10/100 Base-TX ports, plug a Category 5E twisted pair cable into the RJ45 connector. Connect the other end to the far end station. Verify that the LNK LED's are ON once the connection has been completed. To connect any other port to another Switch or Repeater, use a standard Category 5 straight through or crossover cable.

N-Tron recommends the use of pre-manufactured Cat5E cables to ensure the best performance. If this is not an option and users must terminate their own ends on the Cat5E cables; one of the two color coded standards shown to the right should be utilized. If a user does not follow one of these two color code standards then the performance and maximum cable distance will be reduced significantly, and may prevent the switch from establishing a link.

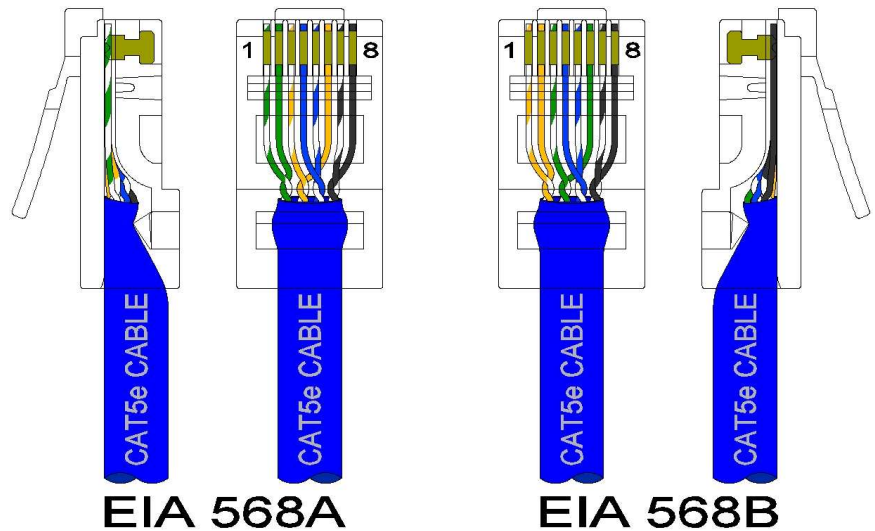

SERIAL INTERFACE

The 9000 series switches provide an EIA-232 interface accessed via a 9 pin female connector (labeled 'COM' on the unit). This is used to access the Command Line Interpreter (CLI). The pin-outs are shown below:

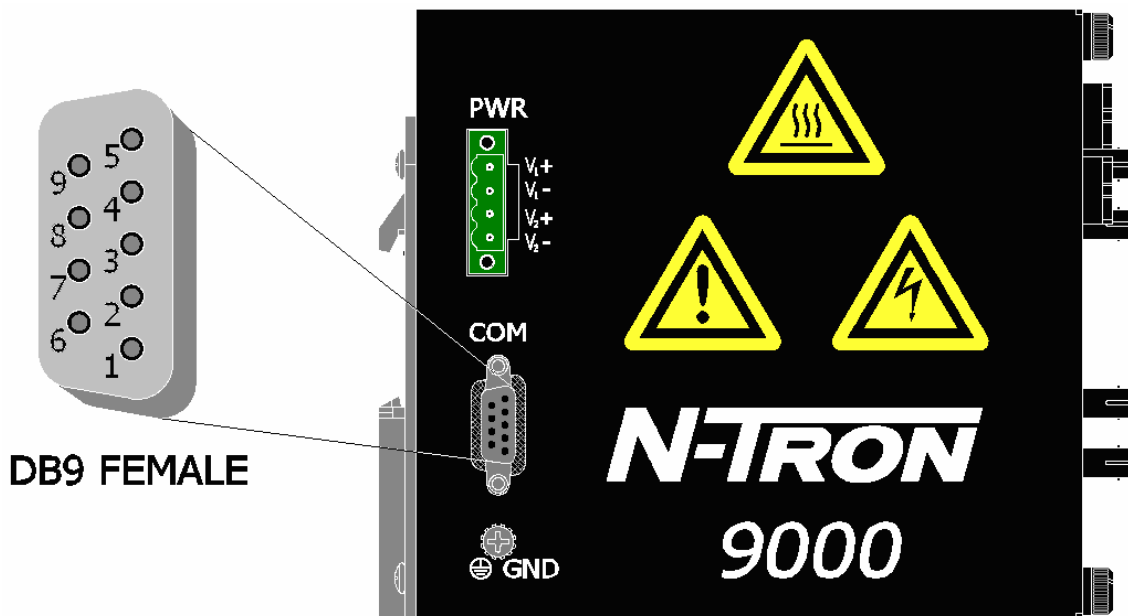

Serial Cable

Connect the serial COM port of your PC and the 9000 Series Switch using a standard straight through cable. You will require a cable with a 9-pin or 25-pin sub-D female connector for the PC end, and a 9-pin male sub-D connector for the 9000 Series end.

The following table shows the pin-out and the connections for both types of cable:

PC Port	25-Pin Female	9-Pin Female	9000 series 9-Pin Male	
Signal Name	Pin #	Pin #	Pin #	Signal Name
TXD	2	3	3	RXD
RXD	3	2	2	TXD
GND	7	5	5	GND

Shielded cables and null modems are readily available from Radio Shack or a variety of computer stores.

HyperTerminal

The following configuration should be used in HyperTerminal:

Port Settings: 115200
Data Bits: 8
Parity: None
Stop bits: 1
Flow Control: None

Overview of Advanced Features

Mode of Operation

Each port on the switch can be configured into different modes of operation as shown below:

Copper Ports:

- Half Duplex
- Full Duplex
- Auto Negotiation

100Base Fiber Ports:

- Full Duplex

1000Base Fiber Ports:

- Full Duplex

Half Duplex

In half duplex mode, the CSMA/CD media access method is the means by which two or more stations share a common transmission medium. To transmit, a station waits (defers) for a quiet period on the medium (that is, no other station is transmitting) and then sends the intended message in bit-serial form. If, after initiating a transmission, the message collides with that of another station, then each transmitting station intentionally transmits for an additional predefined period to ensure propagation of the collision throughout the system. The station remains silent for a random amount of time (backoff) before attempting to transmit again.

Full Duplex

Full duplex operation allows simultaneous communication between a pair of stations using point-to-point media (dedicated channel). Full duplex operation does not require that transmitters defer, nor do they monitor or react to receive activity, as there is no contention for a shared medium in this mode.

Auto Negotiation

In Auto Negotiation mode the port / hardware detects the mode of operation of the station that is connected to this port and sets its mode to match the mode that of the station.

Port Security

Port Security provides a mechanism to detect any intruder in the network. When security is enabled on the port, the port stops learning new MAC addresses on that port and if it receives any packet with a source MAC address that is not in the address table, the packet will be discarded.

Port Mirroring

A Mirroring Port is a dedicated port that is configured to receive the copies of Ethernet frames that are being transmitted out and also being received in from any other port that is being monitored.

Port Trunking

Port Trunking is the ability to group one or more network ports to increase the bandwidth between two machines (switch or any work station). This feature allows grouping of high-speed connectivity and provides redundant connection between switches, so that trunk can act as a single link between the switches.

Priority Tagging (QoS)

IEEE 802.1p priority tagging is supported for two classes of services along with bandwidth support per priority level. Transparent mode is supported through configuration wherein if the field is set, the tag bits are ignored. The User can configure up to 8 different priority levels per port. Also priority overriding (overriding the tagged field) can be enabled or disabled by the user.

Virtual LAN

The switch provides support for setting up both tagged Virtual LANs and port based Virtual LANs. A port may belong to any number of Virtual LANs. The VLAN membership of a station is determined by the VLAN(s) that have been defined for the port to which the station is connected. If a station should move from one port to another, it loses its current VLAN membership and inherits that of the new port it is connected to.

A Default Virtual LAN exists to which a port, which is not a member of any other Virtual LAN, will belong. This allows the switch to operate as a 'normal' Bridge when it is used in a network. A port is automatically removed from the Default VLAN when it is reconfigured to belong to another Virtual LAN.

Using Tagged VLANs the switch has the ability to take non-tagged packets in some ports, add a VLAN tag to the packet and send it out tagged ports on the switch. The VLANs can also be configured to accept tagged packets in tagged ports, strip the tags off the packets, and send the packets back out other untagged ports. This allows a network administrator to set up the switch so he can support devices on the network that do not support VLAN Tagged packets. The administrator can also set up the ports to discard any packets that are tagged or to discard any packets that are untagged based on a hybrid VLAN of both tagged and untagged ports, and using the VLAN Ingress Filter on the switch.

The 9000 Series switch also has the ability to allow overlapping VLANs. Overlapping VLANs gives the user the ability to have one or more ports share two or more VLAN groups. For more information and examples on how this could be implemented please see our website's technical documents.

Rapid Spanning Tree Protocol

The rapid spanning tree protocol as specified in IEEE 802.1D-2004 is supported. One Spanning Tree per a unit is supported. Besides a Spanning Tree per VLAN is also supported.

The Rapid Spanning Tree Protocol (RSTP) supersedes the Spanning Tree Protocol (STP) which was described in IEEE 802.1D-1998. The RSTP is used to configure a simply connected active network topology from the arbitrarily connected bridges of a bridged network. Bridges effectively connect just the LANs to which their forwarding ports are attached. Ports that are in a blocking state do not forward frames. The bridges in the network exchange sufficient information to automatically derive a spanning tree.

RSTP allows for much quicker learning of network topology changes than the older STP. RSTP supports new and improved features such as rapid transition to forwarding state. RSTP also sends out new BPDUs every hello time instead of just relaying them. RSTP interoperates with older STP switches by falling back to the older STP when the older BPDUs are detected on bridge ports. The user can also manually configure bridge ports to use the older STP when desired.

SNMP Traps

The 9000 Series switch supports up to 5 SNMP Trap Stations to which SNMP Traps will be sent. The switch supports three standard traps; Link Up, Link Down, and Cold Start. SNMP Traps will be sent to all the stations configured on the switch if a port Link goes up or down, and when the switch first powers up.

IGMP Snooping


IGMP Snooping is enabled by default, and the switch is *Plug and Play* for IGMP. IGMP snooping provides intelligent network support for multicast applications. In particular, unneeded traffic is reduced. IGMP Snooping is configured via the console and if enabled, then operates dynamically upon each power up. Also, there can be manual only or manual and dynamic operation. Note that “static multicast group address” can be used whether IGMP Snooping is enabled or not.

IGMP Snooping will function dynamically without user intervention. If some of the devices in the LAN do not understand IGMP, then manual settings are provided to accommodate them. The Internet Group Management Protocol (IGMP) is a protocol that provides a way for a computer to report its multicast group membership to adjacent ‘routers’. In this case N-Tron 9000 series switches provide *router-like functionality*. Multicasting allows one computer to send content to multiple other computers that have identified themselves as interested in receiving the originating computer's content. Multicasting can be used to transmit only to an audience that has joined (and not left) a multicast group membership. IGMP version 2 is formally described in the Internet Engineering Task Force (IETF) Request for Comments (RFC) 2236. IGMP version 1 is formally described in the Internet Engineering Task Force (IETF) Request for Comments (RFC) 1112. The 9000 series supports v1 and v2.

N-Ring

N-Ring is enabled by default, and the switch is *Plug and Play* for N-Ring except that initially one must enable an N-Ring enabled device to be the N-Ring Manager for a given N-Ring. Subsequently, N-Ring operates dynamically upon each power up. Using N-Tron's proprietary N-Ring technology offers expanded ring size capacity, detailed fault diagnostics, and a standard healing time of 30ms. The N-Ring Manager periodically checks the health of the N-Ring via health check packets. If the N-Ring Manager stops receiving the health check packets, it times out and converts the N-Ring to a backbone within 30ms. When using all N-Ring enabled switches in the ring, a detailed ring map and fault location chart is also provided on the N-Ring Manager's web browser. N-Ring status is also sent from the N-Ring Manager to the N-View OPC Server to identify the health status of the ring. Up to 250 N-Ring enabled switches can participate in one N-Ring topology. Switches that do not have N-Ring capability may be used in an N-Ring, however the ring map and fault location chart cannot be as detailed at these locations.

TROUBLESHOOTING

1. Make sure the  (Power LED) is ON.
2. Make sure you are supplying sufficient current for the version chosen. Note: The Inrush current will exceed the steady state current by ~ 2X.
3. Verify that Link LED's are ON for connected ports.
4. Verify cabling used between stations.
5. Verify that cabling is Category 5E or greater for 100Mbit Operation.

SUPPORT

Contact N-Tron Corp. at:
TEL: 251-342-2164
FAX: 251-342-6353
www.n-tron.com

FCC STATEMENT

This product complies with Part 15 of the FCC-A Rules.

Operation is subject to the following conditions:

- (1) This device may not cause harmful Interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Web Software Configuration

Web Management

Enter the switch's IP address in any web browser and login to the web management feature of the 9000 Series.




Default:

User Name: *admin*

Password: *admin*




When the administrator first logs onto a 9000 Series switch the default home page will be displayed. On the left hand side of the screen there is a list of configurable settings that the 9000 Series switch will support. This section of the manual will go through each and every choice listed on the left hand side of the screen and explain how to configure those settings. In the center of the main home page the administrator can see some basic information like what firmware revision the switch is running. The firmware can be upgraded at a later time in the field using TFTP or FTP.

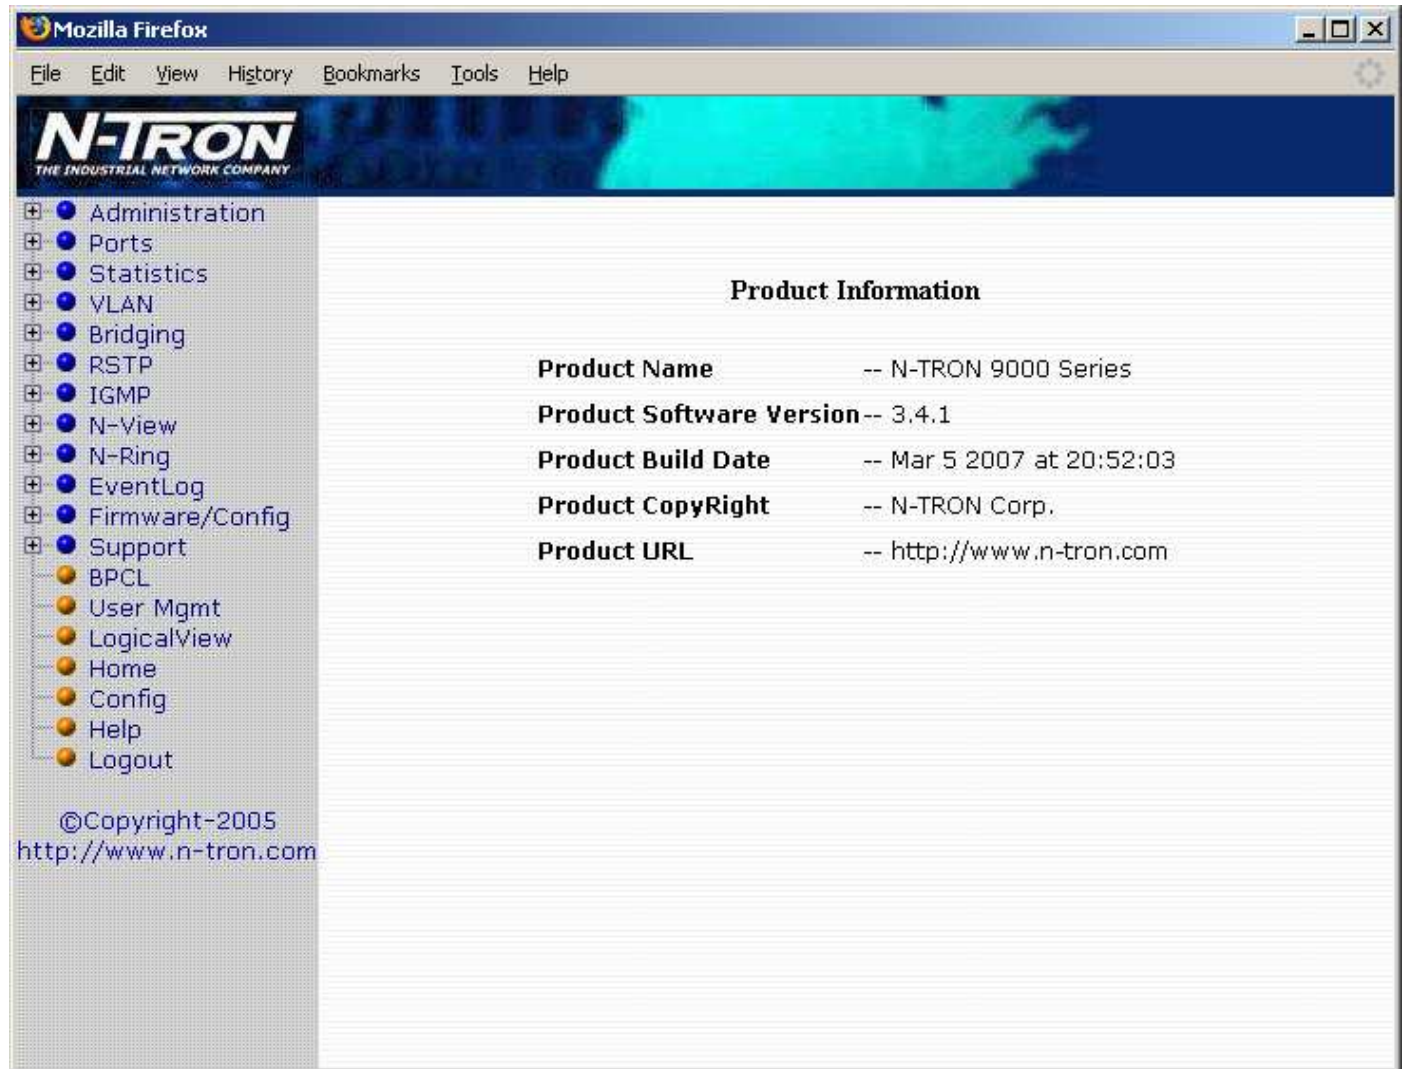

Web Management – Menu Structure

To the left, there is a menu which is shown fully opened below. The pages opened by each of the individual selections are described in the rest of this section. The use of each of these pages is also described in this section. In most of the descriptions, only the right side of the page is shown.

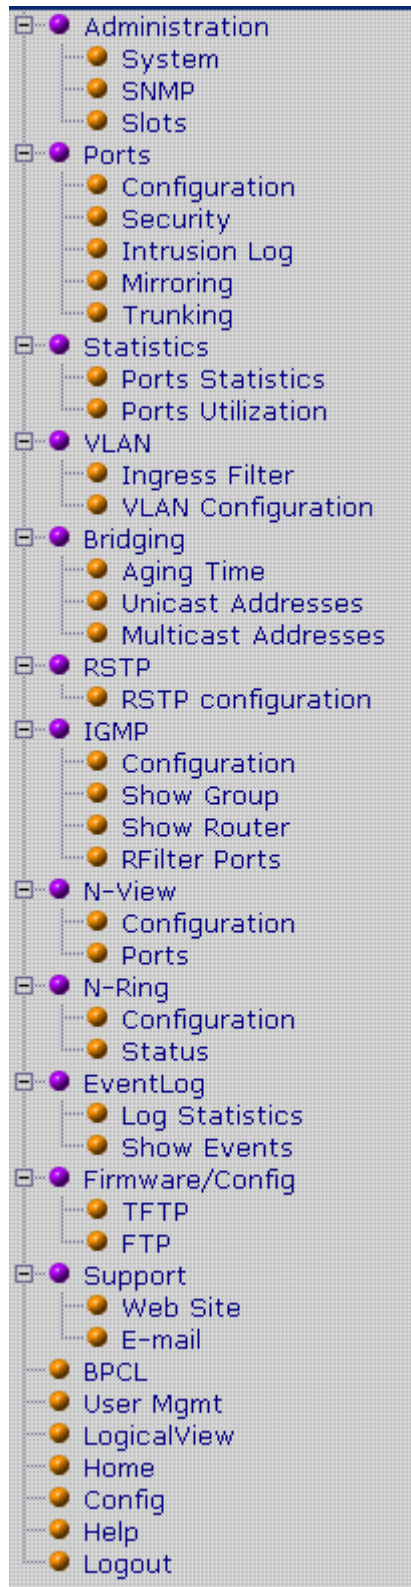

Administration – System

The System tab under the Administration category lists the following information about the switch:

- IP Address
- Subnet Mask
- Default Gateway
- MAC Address
- System Up Time
- Name
- Contact Information
- Location

System Configuration View	
IP Address	192.168.1.201
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
MAC Address	00:07:af:00:c2:00
Sys Up Time	0 days:1 hours:41 mins:20 secs
Name	N-TRON Switch
Contact	N-TRON Admin
Location	Mobile, AL 36609

By selecting the modify button you will be able to change the switch's IP Address, Subnet Mask, Default Gateway, Name, Contact information, and the Location of the switch through the web management features. It is recommended to change the TCP/IP information through the Command Line Interface (CLI) initially, but it defaults to the following:

- IP Address – 192.168.1.201
- Subnet Mask – 255.255.255.0
- Default Gateway – 192.168.1.1

System Configuration	
IP Address	<input type="text" value="192.168.1.201"/>
Net Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.1.1"/>
Name	<input type="text" value="N-TRON Switch"/>
Contact	<input type="text" value="N-TRON Admin"/>
Location	<input type="text" value="Mobile, AL 36609"/>

Administration – SNMP

The SNMP tab under the administration category shows a list of IP Addresses that act as SNMP Traps. The Get, Set, and Trap Community Names are also shown here.

Management Station Configuration View	
IP Address - Trap Stn.#1	192.168.1.2
IP Address - Trap Stn.#2	Value Not Configured
IP Address - Trap Stn.#3	Value Not Configured
IP Address - Trap Stn.#4	Value Not Configured
IP Address - Trap Stn.#5	Value Not Configured
Get Community Name	public
Set Community Name	private
Trap Community Name	public

By selecting the modify button you will be able to change any of the fields listed. This allows the user to set an IP address for an SNMP Trap or change the Community Names. Systems that are listed as an SNMP Trap will be sent basic networking changes made to the switch such as ports going down or being linked. To restore a Trap to “Value Not Configured”, enter ‘0.0.0.0’.

Management Station Configuration	
IP Address - Trap Stn.#1	<input type="text" value="192.168.1.2"/>
IP Address - Trap Stn.#2	<input type="text" value="Value Not Configured"/>
IP Address - Trap Stn.#3	<input type="text" value="Value Not Configured"/>
IP Address - Trap Stn.#4	<input type="text" value="Value Not Configured"/>
IP Address - Trap Stn.#5	<input type="text" value="Value Not Configured"/>
Get Community Name	<input type="text" value="public"/>
Set Community Name	<input type="text" value="private"/>
Trap Community Name	<input type="text" value="public"/>

Administration – Slots

The Slots tab under the administration category allows users to change the configuration of the slots that are populated in the 9000 Back Plane. The switch may not operate correctly if the slots are not configured properly. You must click Update if you wish to keep the changes.

System Slot Configuration

Slot A	9006TX ▾
Slot B	9004FX ▾
Slot C	9002FX ▾
Slot D	EMPTY ▾
CPU Slot E	CPU & GFX ▾

Following the Update button, the user may be prompted to Save and Restart the switch in order for changes to take effect. The switch will save the running configuration into the NVRAM and then cycle power automatically. Once the switch comes back online the settings will be updated.

Save and Restart

Click to save and restart for changes to take effect.

Ports – Configuration

The Configuration tab under the Ports category will show a detailed overview of all the active ports on the switch. The overview will display the following information:

- Port Number
- Port Name
- Admin Status
- Link Status
- Auto Negotiation State
- Port Speed
- Duplex Mode
- Flow Control State
- Back Pressure State
- Priority State
- Priority Level
- RSTP State
- PVID

Ports Configuration View												
Port No	Port Name	Admin Status	Link Status	Auto Nego	Port Speed	Duplex Mode	Flow Control	Back Pressure	Priority State	Priority Level	RSTP State	PVID
1	A1	Enable	Down	Enable	10	Half	Enable	Disable	Disable	1	Disabled	1
2	A2	Enable	Down	Enable	10	Half	Enable	Disable	Disable	1	Disabled	1
3	A3	Enable	Down	Enable	10	Half	Enable	Disable	Disable	1	Disabled	1
4	A4	Enable	Down	Enable	10	Half	Enable	Disable	Disable	1	Disabled	1
5	A5	Enable	Down	Enable	10	Half	Enable	Disable	Disable	1	Disabled	1
6	A6	Enable	Down	Enable	10	Half	Enable	Disable	Disable	1	Disabled	1
7	B1	Enable	Down	Disable	100	Full	Enable	Disable	Disable	1	Disabled	1
8	B2	Enable	Down	Disable	100	Full	Enable	Disable	Disable	1	Disabled	1
9	B3	Enable	Down	Disable	100	Full	Enable	Disable	Disable	1	Disabled	1
10	B4	Enable	Up	Disable	100	Full	Enable	Disable	Disable	1	Forwarding	1
11	--	--	--	--	--	--	--	--	--	--	--	--
12	--	--	--	--	--	--	--	--	--	--	--	--
13	C1	Enable	Down	Disable	100	Full	Enable	Disable	Disable	1	Disabled	1
14	C2	Enable	Down	Disable	100	Full	Enable	Disable	Disable	1	Disabled	1
15	--	--	--	--	--	--	--	--	--	--	--	--
16	--	--	--	--	--	--	--	--	--	--	--	--
17	--	--	--	--	--	--	--	--	--	--	--	--
18	--	--	--	--	--	--	--	--	--	--	--	--
19	--	--	--	--	--	--	--	--	--	--	--	--
20	--	--	--	--	--	--	--	--	--	--	--	--
21	--	--	--	--	--	--	--	--	--	--	--	--
22	--	--	--	--	--	--	--	--	--	--	--	--
23	--	--	--	--	--	--	--	--	--	--	--	--
24	--	--	--	--	--	--	--	--	--	--	--	--
25	E1	Enable	Down	Disable	1000	Full	Enable	Disable	Disable	1	Disabled	1
26	E2	Enable	Down	Disable	1000	Full	Enable	Disable	Disable	1	Disabled	1

Refresh

Ports – Configuration, Continued...

The User can click on the Port Number to configure each port individually. This will allow the user to change the port's settings for the following fields:

- Admin Status
- Speed and Duplex
- Flow Control
- Back Pressure
- State of Priority
- Priority Level
- PVID

Port Configuration for Port A1

Port Name	:	A1
Admin Status	:	Enable ▾
Speed and Duplex	:	Autonego ▾
Flow control	:	Autonego 10/Half 100/Half
Back Pressure	:	10/Full 100/Full
State of Priority	:	Disable ▾
Priority Level	:	1 ▾
PVID	:	1

Ports – Security

The Security tab under the Ports category will show a list of all the active ports and the security Lock State for each port.

Port Security Configuration View			
Port Name	Lock State	Port Name	Lock State
A1	Disable	C2	Disable
A2	Disable	--	--
A3	Disable	--	--
A4	Disable	--	--
A5	Disable	--	--
A6	Disable	--	--
B1	Disable	--	--
B2	Disable	--	--
B3	Disable	--	--
B4	Disable	--	--
--	--	--	--
--	--	E1	Disable
C1	Disable	E2	Disable

Refresh

Administrators can change the Port Security by a per port basis. If the Port is enabled through this the port will be locked and will only allow known MAC addresses to communicate through the port. Unknown MAC addresses will be logged in the Intrusion Log.

Port Security Configuration for Port A1	
Enable :	<input type="radio"/>
Disable :	<input checked="" type="radio"/>
Update	Cancel

Ports – Intrusion Log

The Intrusion Log tab under the Ports category will show a list of intruders along with their MAC addresses. The log will show what Port the intruder attempted to access your network on and log the system time when it occurred. The log can be easily cleared.

NOTE: This feature must first be enabled through the CLI before it will function in the web interface.

Intrusion Log		
Port Name	Intruder Address	System Time
No Intruder(s) Logged		
<input type="button" value="Clear Log"/>		

Ports – Mirroring

A mirroring port is a dedicated port that is configured to receive the copies of Ethernet frames that are being transmitted out and also being received in from any other port that is being monitored.

The Mirroring tab under the Ports category displays the status including the list of Source Ports and the Destination Port that the Sources are being mirrored to.

Port Mirroring Configuration View

Mirror Status	Not Configured
Source Port List	--
Destination Port	--

Following the Configure button, you can enable the status of port mirroring and select source ports and the destination port that the source ports will be mirrored to.

Configure Mirroring

Source Port List :

Destination Port : A1 ▼


- A1
- A2
- A3
- A4
- A5
- A6
- B1
- B2
- B3
- B4
- C1
- C2

NOTE: Since the gigabit ports cannot be destination ports, they are not available on the pulldown menu.

Ports – Trunking


The Trunking tab under the Ports category displays a list of trunks configured on the switch and the following details regarding each trunk:

- Trunk ID
- Trunk Name
- Trunk Ports
- Trunk State

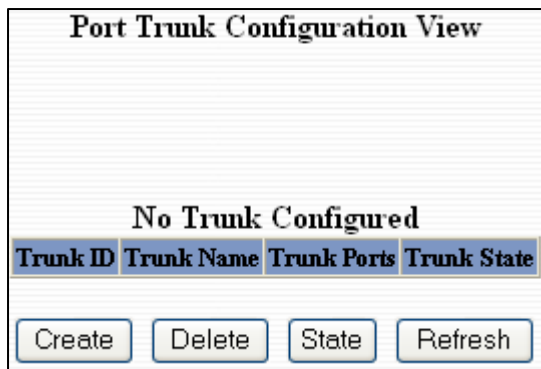

The screenshot shows a window titled "Port Trunk Configuration View". Inside, it says "No Trunk Configured". Below this is a table with four columns: "Trunk ID", "Trunk Name", "Trunk Ports", and "Trunk State". At the bottom of the window are four buttons: "Create", "Delete", "State", and "Refresh".

By selecting the Create button, you can add a trunk group.

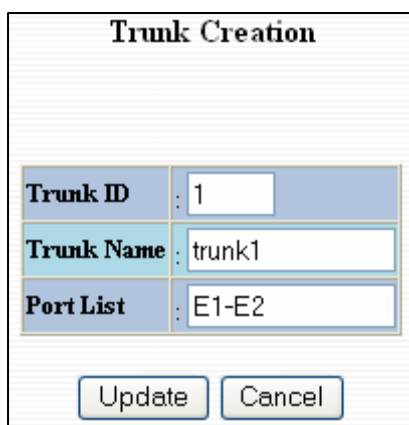

The screenshot shows a "Trunk Creation" form. It has three input fields: "Trunk ID" with the value "1", "Trunk Name" with the value "trunk1", and "Port List" with the value "E1-E2". At the bottom are two buttons: "Update" and "Cancel".

NOTE: *RSTP must be disabled in order to use the Trunking Feature.*

N-Ring Managers cannot have trunking enabled.

A maximum of 4 ports of the same speed can constitute a valid trunk.

Only 1 Trunk per switch can be created.

All trunk ports must be at the same speed and duplex mode. If a port is not linked, there could be difficulty as to similar speed and duplex mode. It is best to hard code speed and duplex mode for each trunking link, at both ends.

Ports – Trunking, Continued...

Once the Trunk Group is created you will see detailed information for that trunk group, but it should have a disabled state by default.

Port Trunk Configuration View

Trunk ID	Trunk Name	Trunk Ports	Trunk State
1	trunk1	E1-E2	Disable

Create Delete State Refresh

In order to enable the Trunk Group you need to click on the State Button above. The following page should load asking for the Trunk ID and what the Trunk State is.

Trunk State Configuration

Trunk ID	:	<input type="text" value="1"/>
Trunk State	:	<input type="text" value="Enable"/> ▼

Update Cancel

NOTE: *RSTP must be disabled in order to use the Trunking Feature.
N-Ring Managers cannot have trunking enabled.*

*A maximum of 4 ports of the same speed can constitute a valid trunk.
Only 1 Trunk per switch can be created.*

All trunk ports must be at the same speed and duplex mode. If a port is not linked, there could be difficulty as to similar speed and duplex mode. It is best to hard code speed and duplex mode for each trunking link, at both ends.


Statistics – Port Statistics

The Ports Statistics tab under the Statistics category displays a list of MIB Parameters. Each port has a separate counter for each parameter. This gives users the ability to see what kind of packets are going over which ports. At the bottom of each page for each port there are two buttons. Refresh will update the statistics for that port number and Clear will reset all the counters for that port number.

Port B4		
Statistics at Port no: B4		
S.No	Counter Type	Value
1	Tx Octets	5532011
2	Tx Dropped Packets	0
3	Tx Broadcast Packets	7
4	Tx Multicast Packets	22420
5	Tx Unicast Packets	4137
6	Tx Collisions	0
7	Tx Single Collision	0
8	Tx Multiple Collision	0
9	Tx Deferred Transmit	0
10	Tx Late Collision	0
11	Tx Excessive Collision	0
12	Tx Frame In Disc	0
13	Tx Pause Packets	0
14	64 Packets	5407
15	65 to 127 Packets	4737
16	128 to 255 Packets	18628
17	256 to 511 Packets	816
18	512 to 1023 Packets	562
19	1024 to 1522 Packets	809
20	Rx Octets	567638
21	Rx Dropped Packets	0
22	Rx Broadcast Packets	478
23	Rx Multicast Packets	81
24	Rx Unicast Packets	3836
25	Rx Undersize Packets	0
26	Rx Oversize Packets	0
27	Rx Jabbers	0
28	Rx Alignment Errors	0
29	Rx Good Octets	567638
30	Rx SA Changes	0
31	Rx FCS Errors	0
32	Rx Pause Packets	0
33	Rx Fragments	0
34	Rx Excessive Disc Size	0
35	Rx Symbol Error	0
<div>RefreshClear</div>		

Statistics – Ports Utilization

The Ports Utilization tab under the Statistics category shows all the ports on the switch and will display a bar graph showing the percentage of bandwidth being used. These figures and bars are for a general feeling of what the bandwidth usage is. N-Tron recommends the use of N-View in order to get a precise bandwidth usage figure.

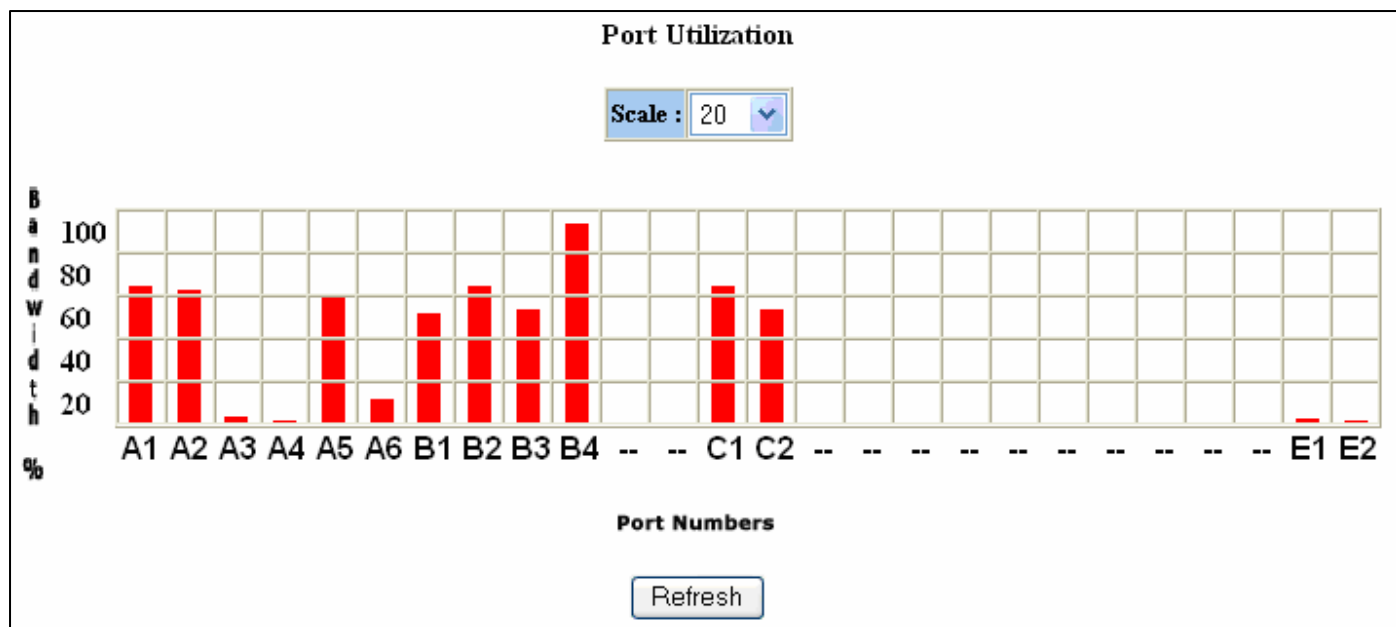

VLAN – Ingress Filter

The Ingress Filter tab under the VLAN category shows all the ports on the switch and if the Ingress Filter Rule is enabled or disabled for each port.

VLAN Ingress Filter Configuration View			
Port Name	Ingress Filter Rule	Port Name	Ingress Filter Rule
A1	Disable	C2	Disable
A2	Disable	--	--
A3	Disable	--	--
A4	Disable	--	--
A5	Disable	--	--
A6	Disable	--	--
B1	Disable	--	--
B2	Disable	--	--
B3	Disable	--	--
B4	Disable	--	--
--	--	--	--
--	--	E1	Disable
C1	Disable	E2	Disable

Modify Refresh

To change the Ingress Filter Rule simply click on the Modify button on the page above, select the port number from the pull down menu that you wish to modify and then choose to either enable or disable the Ingress Filter Rule.

VLAN Ingress Filter Configuration

Port Name

ALL

Ingress Filter Rule

ALL

Update

A1
A2
A3
A4
A5
A6
B1
B2
B3
B4
C1
C2
E1
E2

NOTE: *The Ingress Filter will automatically be turned on for respective ports when tagged VLANs are created, but may not automatically turn off if you change a tagged VLAN to a port based VLAN.*

VLAN – Port Based

The Port Based tab under the VLAN category shows all the VLANs that are configured on the switch and details about the VLANs such as port numbers and tagged VLAN settings.

VLAN Configuration View

("Click on VLAN ID number to modify the existing values ")

VLAN Status : Enable						
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port
1	Default VLAN	A1-A6,B1-B4,C1-C2,E1-E2	--	YES	All	0

Total Number of vlans configured : 1

To add a VLAN simply click on the Add button on the page above and fill in the desired fields. The example below would set up a basic port based VLAN for ports A1-A6.

VLAN Creation

VLAN ID	<input type="text" value="2"/>
VLAN Name	<input type="text" value="vlan2"/>
Untagged Port List	<input type="text" value="A1-A6"/>
Tagged Port List	<input type="text"/>
Management Port	YES <input type="button" value="v"/>
Admit	All <input type="button" value="v"/>
Mirror Port	NA <input type="button" value="v"/>

(See VLAN Configuration Examples on Page 133)

Note: When implementing overlapping VLANs, RSTP can only be enabled on one of the VLANs that is overlapping others. RSTP can not be implemented on a VLAN that contains other VLANs within that one. Changing anything on a VLAN will turn on RSTP on all VLANs as a precautionary measure.

VLAN – Port Based, Continued...

Now the page will display the new VLAN and moved ports A1-A6 from the default VLAN down to vlan2 that was just created.

VLAN Configuration View

("Click on VLAN ID number to modify the existing values ")

VLAN Status : Enable						
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port
1	Default VLAN	B1-B4,C1-C2,E1-E2	--	YES	All	0
2	vlan2	A1-A6	--	YES	All	0

Total Number of vlans configured : 2

To delete or remove VLANs that are no longer wanted simply click on the Delete button on the main Port Based VLAN page. That button will load the page where the user can enter the VLAN ID that he or she wishes to delete.

VLAN Deletion

VLAN ID

2

(See VLAN Configuration Examples on Page 133)

Note: *When implementing overlapping VLANs, RSTP can only be enabled on one of the VLANs that is overlapping others. RSTP can not be implemented on a VLAN that contains other VLANs within that one. Changing anything on a VLAN will turn on RSTP on all VLANs as a precautionary measure.*

VLAN – Port Based, Continued...

Once the VLAN is deleted it will no longer appear on the main page and all the ports are now back under the default VLAN. When a port based VLAN is created the PVID (Port VLAN ID) will change automatically to be members of the new VLAN they are a part of. If you delete this VLAN the PVIDs will not automatically return to the default VLAN. Users should keep this in mind when removing VLANs, and may need to manually change the PVIDs for any affected ports.

VLAN Configuration View

("Click on VLAN ID number to modify the existing values ")

VLAN Status : Enable						
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port
1	Default VLAN	A1-A6,B1-B4,C1-C2,E1-E2	--	YES	All	0

Total Number of vlans configured : 1

Add

Delete


Refresh

(See VLAN Configuration Examples on Page 133)

Note: *When implementing overlapping VLANs, RSTP can only be enabled on one of the VLANs that is overlapping others. RSTP can not be implemented on a VLAN that contains other VLANs within that one. Changing anything on a VLAN will turn on RSTP on all VLANs as a precautionary measure.*


Bridging – Aging Time

The Aging Time tab under the Bridging category will display the currently configured Aging Time. This page allows users to modify this variable to meet their needs.

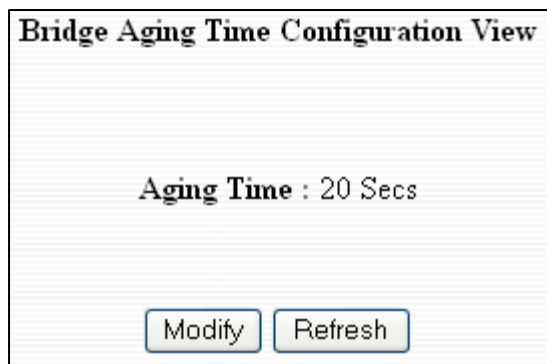

A screenshot of a web interface titled "Bridge Aging Time Configuration View". The interface has a light gray background with a thin black border. In the center, the text "Aging Time : 20 Secs" is displayed. Below this text, there are two buttons: "Modify" and "Refresh", both with a light blue gradient and a thin black border.

After selecting the Modify button the user will be presented with a page that allows the number to be entered into and updated. The default aging time is 20 seconds.

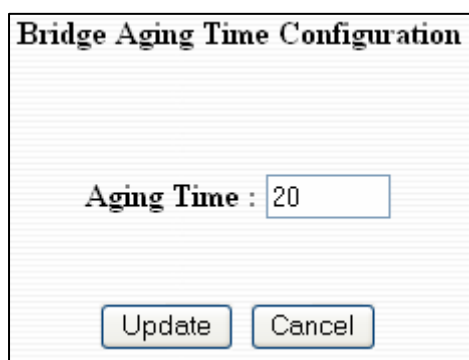

A screenshot of a web interface titled "Bridge Aging Time Configuration". The interface has a light gray background with a thin black border. In the center, the text "Aging Time :" is followed by a text input field containing the number "20". Below this, there are two buttons: "Update" and "Cancel", both with a light blue gradient and a thin black border.

Bridging – Unicast Addresses

The Unicast Addresses tab under the Bridging category will display a list of MAC addresses that are associated with each respective port number. This can be used to statically assign a MAC address access to a single port on the switch.

Display Static Unicast MAC Address(es)

MAC Address	Port Name	Mirroring
-------------	-----------	-----------

Number of Static Unicast MAC Address(es) is **0**

Following the Add button on the page above, the administrator must enter a valid MAC address and associate it with a port number on the switch. Once the administrator hits the Update button the changes will take effect instantly.

Add Static Unicast MAC Address

MAC Address :	<input type="text" value="00:07:AF:00:00:00"/>
Port Name :	<input type="text" value="A1"/>
Mirroring :	<input type="text" value="Enable"/>

Once a static MAC address has been added, it will be displayed in a list on the main page under Unicast MACs tab.

Display Static Unicast MAC Address(es)

MAC Address	Port Name	Mirroring
00:07:af:00:00:00	A1	Enable

Number of Static Unicast MAC Address(es) is **1**

Bridging – Unicast Addresses, Continued...

Following the Delete button on the page above, an administrator can select a static MAC address from the list using a pull down menu. After selecting the MAC address the administrator needs to press the Delete button on this page to remove the entry

Delete Static Unicast MAC Address

MAC Address : 00:07:af:00:00:00 ▼

Number of MAC Address(es) is 1

Bridging – Multicast Addresses


The Multicast Addresses tab under the Bridging category will display a list of Multicast Group Addresses that are associated with respective port numbers. This may be used to statically assign a Multicast Group Address access to a group of ports on the switch.



Multicast Address	Port List
-------------------	-----------

Total Number of Static Multicast Group Address(es) is 0

Following the Add button on the page above, the administrator must enter a valid Multicast Group Address and associate it with a port number or list on the switch. Once the administrator clicks on the Update button, the changes will take effect instantly.

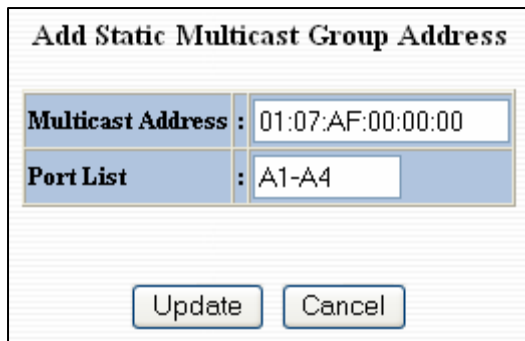


Multicast Address :	01:07:AF:00:00:00
Port List :	A1-A4

Note: *If there are multiple ports on different VLANs, the 9000 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. So if the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.*

Bridging – Multicast Addresses, Continued...


After adding a Multicast Group Address it will appear on the main list and will show the associated ports that go along with that address.

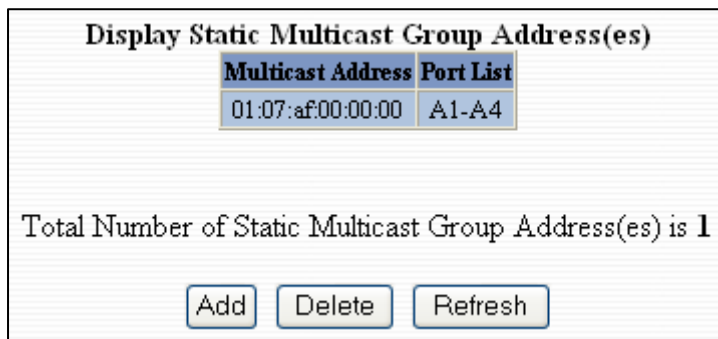

Multicast Address	Port List
01:07:af:00:00:00	A1-A4

Total Number of Static Multicast Group Address(es) is 1

Following the Delete button on the page above, the administrator will be presented with a list of Multicast Group Addresses that are configured on the switch. Using the pull down menu the administrator should select the desired port to be removed. Then click on the Delete button at the bottom of the page.

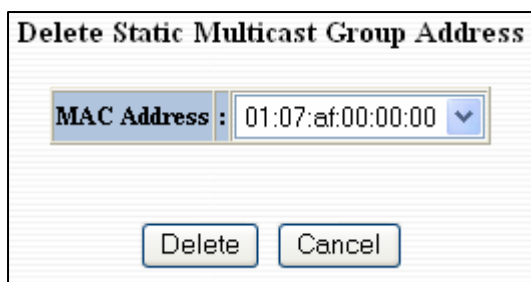

MAC Address : 01:07:af:00:00:00 ▼

Note: *If there are multiple ports on different VLANs, the 9000 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. So if the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.*

RSTP – RSTP Configuration

The RSTP Configuration tab under the RSTP category will display the RSTP information for the first VLAN. Using the pull down menu at the top of the page an administrator can choose which VLAN to configure RSTP on. Once the VLAN is selected the administrator may configure the bridge by clicking on the Configuration button in the middle of the page.

RSTP on VLAN

1

RSTP Root Bridge Configuration

Root Priority	Designated Root	Path Cost	Port	Max Age	Hello Time	Forward Delay
32768	80:00:00:07:af:00:c2:07	0	0	16	1	13

This Bridge [Configuration](#)

Hello Time (Sec)	Forward Delay (Sec)	Max Age (Sec)	Priority	RSTP Status	Topology Change	Topology Count
1	13	16	32768	Fast	False	0

Refresh

The configuration screen for the VLAN that was previously selected will look like the example below. Here the administrator can make changes such as the Hello Time, the Forward Delay, the Max Age, the priority, and the Status of RSTP on that VLAN. Following the link for the view RSTP Port Configuration at VLAN# the administrator or user can see the current RSTP status of the ports on that VLAN.

Bridge RSTP Configuration for VLAN 1

Hello Time

:

1

Forward Delay

:

13

Max age

:

16

Priority

:

32768

Status

:

Fast

Click [here](#) to view the RSTP port Configuration at VLAN 1


Update

Cancel


NOTES:

1. *Trunking must be disabled in order to use RSTP.*
2. *N-Ring Manager cannot have RSTP enabled.*
3. *RSTP & N-Ring are different modes and cannot have redundant links along those lines. See the examples on the following sheet.*

RSTP – RSTP Configuration, Continued...

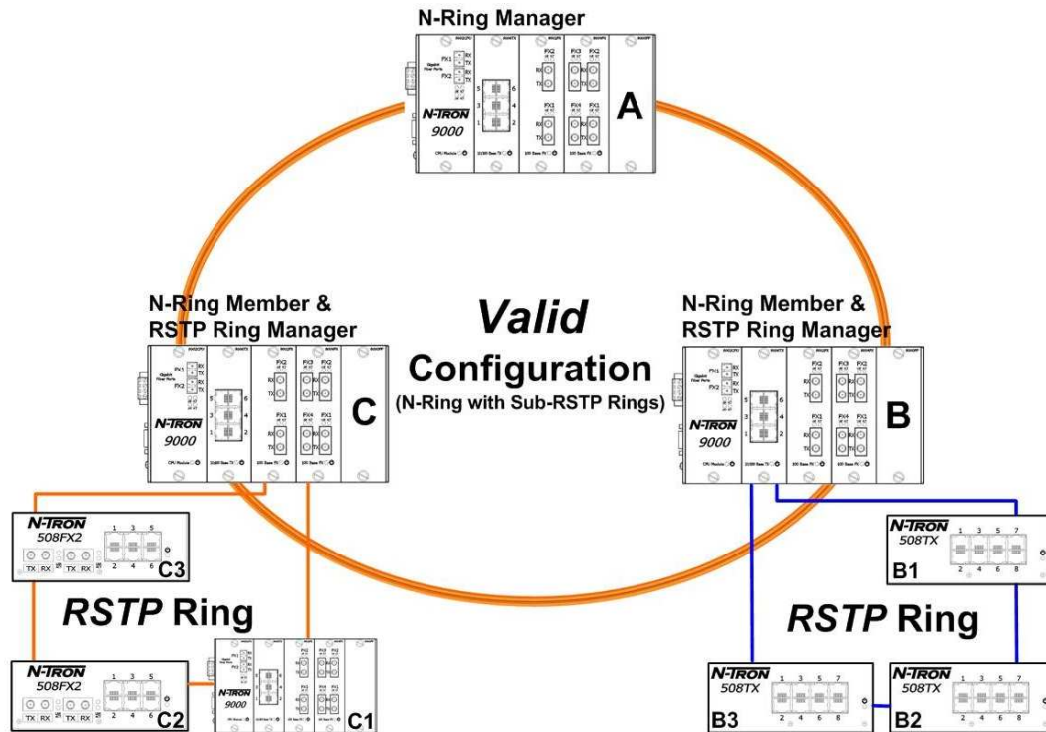

It is valid to have RSTP rings linked to non-N-Ring ports of active N-Ring Members, as above.

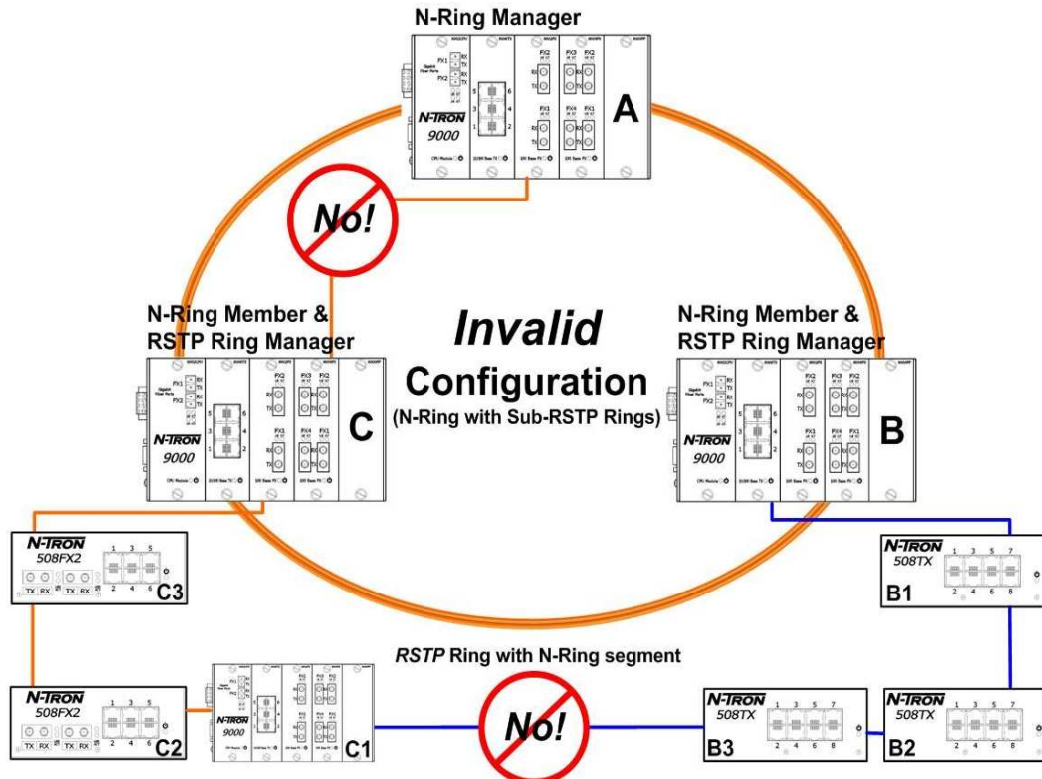

As marked above, it is not valid to expect RSTP to block redundant N-Ring links nor for N-Ring to block redundant RSTP links.

RSTP – RSTP Configuration, Continued...

Following the link for the view RSTP Port Configuration at VLAN# the administrator or user can see the current RSTP status of the ports on that VLAN. This will show information such as the Path Cost and the Port State. If the switch sees a redundant path it will put the port with the highest Path Cost into Blocking mode where it will discard packets coming in on that port. In the below example, B1 is a redundant port with port A2, therefore A2 is forwarding and B1 is discarding.

RSTP Port Configuration View for VLAN 1

Port No	Port Name	Port State	Path Cost	Priority	STP BPDU	AutoEdge	AdminEdge	Designated Bridge	Designated Port
1	A1	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:01
2	A2	Forwarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:00:c2:01	00:02
3	A3	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:03
4	A4	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:04
5	A5	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:05
6	A6	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:06
7	B1	Discarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:00:c2:01	00:02
8	B2	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:08
9	B3	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:09
10	B4	Forwarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:00:c2:01	00:0a
11	--	--	--	--	--	--	--	--	--
12	--	--	--	--	--	--	--	--	--
13	C1	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:0d
14	C2	Disabled	200000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:0e
15	--	--	--	--	--	--	--	--	--
16	--	--	--	--	--	--	--	--	--
17	--	--	--	--	--	--	--	--	--
18	--	--	--	--	--	--	--	--	--
19	--	--	--	--	--	--	--	--	--
20	--	--	--	--	--	--	--	--	--
21	--	--	--	--	--	--	--	--	--
22	--	--	--	--	--	--	--	--	--
23	--	--	--	--	--	--	--	--	--
24	--	--	--	--	--	--	--	--	--
25	E1	Disabled	20000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:19
26	E2	Disabled	20000	128	No	Enabled	Disabled	00:00:00:00:00:00:00:00	00:1a

<<Back

Refresh

RSTP – RSTP Configuration, Continued...

If the administrator selects one of the ports on the previous screen he or she can change the Port's Path Cost, Port's Priority and the status of Admin Edge and Auto Edge.

Port RSTP Configuration for Port A1 on VLAN 1

Port Path Cost :

2000000

Port priority :

128

Admin Edge :

Disable

▼

Auto Edge :

Enable

▼

Update

Cancel

IGMP – Configuration

The Configuration tab under the IGMP category will display the IGMP basic configuration settings. By default IGMP is enabled.

IGMP Configuration View

IGMP Status	Enabled
Query Mode	Auto
Router Mode	Auto
Manual Router Ports	

Following the Modify button on the previous page, the administrator will see a list of configurable fields for the IGMP configuration. Once these fields are filled in to meet the needs of the administrator's network the changes may be saved by clicking the Update button at the bottom of the page.

IGMP Configuration

IGMP Status	Enable <input type="button" value="v"/>
Query Mode	Auto <input type="button" value="v"/>
Router Mode	Auto <input type="button" value="v"/>
Manual Router Ports	<input type="text"/>
Router Add/Delete	Add <input type="button" value="v"/>

IGMP – Show Group and Show Router

The Show Group tab under the IGMP category will display a list of IGMP groups based on the Group IP and the port number that it is associated with.

IGMP Group View

Group IP	Port Name	VLAN ID
The Group List is empty		

Refresh

The Show Router tab under the IGMP category will display a list of Auto-detected Router IPs and the port numbers that they are associated with.

Auto-Detected Routers View

Router IP	Port Name
The Router Group List is empty	

Refresh

IGMP – RFilter

The ‘rfilter’ (**Router Multicast Data Filter**) function allows you to choose whether or not DATA frames with KNOWN group multicast addresses are sent to the ‘router’ ports (links to other switches). Control packets (Join, Leave) will be sent to the router(s) regardless of this setting. “KNOWN” is known from dynamic IGMP Snooping operations. The factory default is that the Router Multicast Data Filter is disabled for all ports, so any router ports do get DATA frames with KNOWN multicast destination addresses. If rfilter is enabled router ports do NOT get DATA frames with KNOWN multicast destination addresses unless a join to a specific multicast address has been received on that port. (Joins over-ride rfilter.) Rfilter can be set for individual ports: any, all, or none. For each port rfilter will have an impact only if that port is manually or dynamically chosen as a router port.

Default configuration:

IGMP RFilter Configuration View

Port Name	RFilter State	Port Name	RFilter State
A1	Disabled	C2	Disabled
A2	Disabled	C3	Disabled
A3	Disabled	C4	Disabled
A4	Disabled	C5	Disabled
A5	Disabled	C6	Disabled
A6	Disabled	D1	Disabled
B1	Disabled	D2	Disabled
B2	Disabled	D3	Disabled
B3	Disabled	D4	Disabled
B4	Disabled	D5	Disabled
B5	Disabled	D6	Disabled
B6	Disabled	E1	Disabled
C1	Disabled	E2	Disabled

Modify

Refresh

Modifying rfilter port settings:

IGMP RFilter Configuration

Port Name	RFilter Enabled?	Port Name	RFilter Enabled?
A1	<input type="checkbox"/>	C2	<input type="checkbox"/>
A2	<input type="checkbox"/>	C3	<input type="checkbox"/>
A3	<input type="checkbox"/>	C4	<input type="checkbox"/>
A4	<input type="checkbox"/>	C5	<input type="checkbox"/>
A5	<input checked="" type="checkbox"/>	C6	<input type="checkbox"/>
A6	<input type="checkbox"/>	D1	<input type="checkbox"/>
B1	<input type="checkbox"/>	D2	<input type="checkbox"/>
B2	<input type="checkbox"/>	D3	<input type="checkbox"/>
B3	<input type="checkbox"/>	D4	<input type="checkbox"/>
B4	<input type="checkbox"/>	D5	<input type="checkbox"/>
B5	<input type="checkbox"/>	D6	<input type="checkbox"/>
B6	<input type="checkbox"/>	E1	<input type="checkbox"/>
C1	<input type="checkbox"/>	E2	<input type="checkbox"/>

Update

Cancel

N-Ring – Configuration

The Configuration tab under the N-Ring category will display the N-Ring basic configuration settings. By default N-Ring is in AutoMember mode and the N-Ring agingtime is 20 seconds.

N-Ring Configuration View

N-Ring Mode	AutoMember
N-Ring Agingtime	20 Seconds

Following the Modify button on the previous page, the administrator will see a list of configurable fields for the N-Ring configuration, as below.

The N-Ring Agingtime has a default of 20 seconds and is separate from the Bridging Aging Time. N-Ring Aging time is used for the whole switch if the switch is an N-Ring Manager or becomes an active N-Ring Member, and in either case N-Ring status includes for example:

“Switch is currently using N-Ring Aging Time = 20 Seconds”

Once these fields are filled in to meet the needs of the administrator’s network the changes may be saved by clicking the Update button at the bottom of the page.

Modify N-Ring Configuration

N-Ring Mode	AutoMember ▾
Port Set	A1/A2 ▾
Show Faults	On N-Ring Pages Only ▾
Agingtime	20

NOTES:

1. *N-Ring Manager cannot have RSTP or Trunking enabled.*
2. *RSTP & N-Ring are different modes and cannot have redundant links along those lines. See the examples in the RSTP configuration section.*

The “N-Ring Mode” is one of three, as below:

Modify N-Ring Configuration	
N-Ring Mode	AutoMember
Port Set	Manager AutoMember
Show Faults	Disable Only Ring Pages Only
Agingtime	20
<div>Update Cancel</div>	

If N-Ring Mode is “Manager”, then a pulldown allows selection as available of ports A1 and A2, or E1 and E2 as N-Ring ports.

Modify N-Ring Configuration	
N-Ring Mode	Manager
Port Set	A1/A2
Show Faults	A1/A2 E1/E2 Pages Only
Agingtime	20
<div>Update Cancel</div>	

NOTE: *N-Ring Manager cannot have RSTP or Trunking enabled.*

If N-Ring Mode is “Manager”, then a pulldown allows selection of displaying N-Ring Summary Status on all web pages or on N-Ring pages only:

Modify N-Ring Configuration

N-Ring Mode	Manager
Port Set	A1/A2
Show Faults	On N-Ring Pages Only
Agingtime	On N-Ring Pages Only On All Web Pages

UpdateCancel

Once these fields are filled in to meet the needs of the administrator’s network the changes may be saved by clicking the Update button at the bottom of the page.

NOTE: *N-Ring Manager cannot have RSTP or Trunking enabled.*

N-Ring – Status

The Status tab under the N-Ring category will display the N-Ring status.

Below is an example of N-Ring Status from a switch in defaults (N-Ring Auto Member) that is not an N-Ring Manager and has not become an “Active” N-Ring Member:

N-Ring Status View
Switch is in Auto Member Detection Mode

Below is an example of N-Ring Status from an “Active” N-Ring Member:

N-Ring Status View
Switch is an N-Ring Member

N-Ring Manager Address	
00:07:af:ff:f6:c0	

Active N-Ring Ports	
A1	A2

Switch is currently using N-Ring Aging Time = 20 Seconds

Below is an example of N-Ring Status from an N-Ring Manager with a healthy N-Ring:

Ring Status View					
Switch is in Ring Manager Mode					
Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports
RM	00:07:af:ff:f6:e0	192.168.1.136	255.255.255.0	N-TRON Switch	A2 A1
1	00:07:af:ff:f6:40	192.168.1.131	255.255.255.0	N-TRON Switch	A1 A2
2	00:07:af:ff:f6:60	192.168.1.132	255.255.255.0	N-TRON Switch	A2 A1
3	00:07:af:ff:f6:80	192.168.1.133	255.255.255.0	N-TRON Switch	A1 A2
4	00:07:af:ff:f6:a0	192.168.1.134	255.255.255.0	N-TRON Switch	A2 A1
5	00:07:af:ff:f6:c0	192.168.1.135	255.255.255.0	N-TRON Switch	A1 A2

Below is an example of N-Ring Status from an N-Ring Manager with a faulted N-Ring:
(The red fields on the N-Ring Map show where the break is.)

N-Ring Fault!!					
Ring Status View					
Switch is in Ring Manager Mode					
Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports
RM	00:07:af:ff:f6:e0	192.168.1.136	255.255.255.0	N-TRON Switch	A2 A1
1	00:07:af:ff:f6:40	192.168.1.131	255.255.255.0	N-TRON Switch	A1 A2
2	00:07:af:ff:f6:60	192.168.1.132	255.255.255.0	N-TRON Switch	A2 A1
3	00:07:af:ff:f6:80	192.168.1.133	255.255.255.0	N-TRON Switch	A1 A2
4	00:07:af:ff:f6:a0	192.168.1.134	255.255.255.0	N-TRON Switch	A2 A1
5	00:07:af:ff:f6:c0	192.168.1.135	255.255.255.0	N-TRON Switch	A1 A2

Below is an example of N-Ring Status from an N-Ring Manager that had a faulted N-Ring, and just achieved a healthy N-Ring:

N-Ring OK!!					
Ring Status View					
Switch is in Ring Manager Mode					
Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports
RM	00:07:af:ff:f6:e0	192.168.1.136	255.255.255.0	N-TRON Switch	A2 A1
1	00:07:af:ff:f6:40	192.168.1.131	255.255.255.0	N-TRON Switch	A1 A2
2	00:07:af:ff:f6:60	192.168.1.132	255.255.255.0	N-TRON Switch	A2 A1
3	00:07:af:ff:f6:80	192.168.1.133	255.255.255.0	N-TRON Switch	A1 A2
4	00:07:af:ff:f6:a0	192.168.1.134	255.255.255.0	N-TRON Switch	A2 A1
5	00:07:af:ff:f6:c0	192.168.1.135	255.255.255.0	N-TRON Switch	A1 A2

In rare cases an N-Ring can have a “Partial Fault”. An example of this is to have a break in just one fiber in a duplex channel fiber pair. The screenshot below shows N-Ring Manager Status when a ‘Higher’ N-Ring Port (A2 or E2) is not receiving self health frames all the way around the N-Ring, though the other (low A1/E1) N-Ring port is:


N-Ring Partial Fault (Error on high port)!!					
N-Ring Status View					
Switch is an N-Ring Manager					
Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports
RM	00:07:af:00:b1:40	192.168.1.135	255.255.255.0	N-TRON Switch	A2 A1

The screenshot below shows N-Ring Manager Status when a ‘Lower’ N-Ring Port (A1 or E1) is not receiving self health frames all the way around the N-Ring, though the other (high A2/E2) N-Ring port is:

N-Ring Partial Fault (Error on low port)!!					
N-Ring Status View					
Switch is an N-Ring Manager					
Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports
RM	00:07:af:00:b1:40	192.168.1.135	255.255.255.0	N-TRON Switch	A2 A1

NView – Configuration

The Configuration tab under the NView category will display two basic variables for NView, the status and the interval between packets.

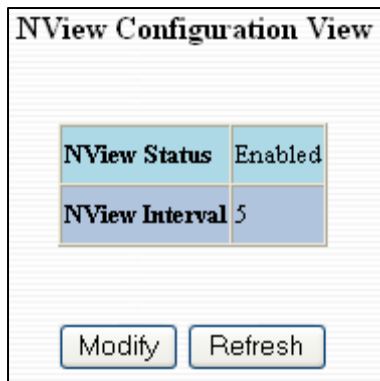


The screenshot shows a window titled "NView Configuration View". Inside, there is a table with two rows. The first row has "NView Status" in the left column and "Enabled" in the right column. The second row has "NView Interval" in the left column and "5" in the right column. Below the table, there are two buttons: "Modify" and "Refresh".

NView Configuration View	
NView Status	Enabled
NView Interval	5

Modify Refresh

Following the Modify button on the above example, the administrator can modify the variable to change the frequency with which NView reports information. Increasing the interval will slow the update rate. Decreasing the interval will allow NView to report more frequently. Additionally, you may Disable or Enable NView altogether.

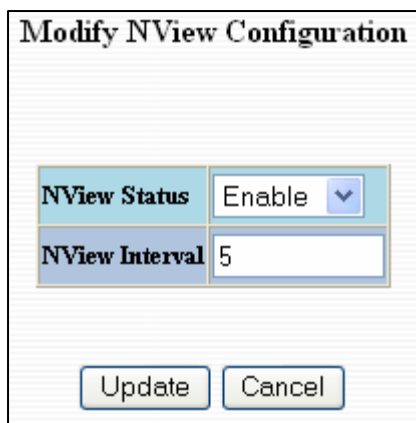

The screenshot shows a window titled "Modify NView Configuration". Inside, there is a table with two rows. The first row has "NView Status" in the left column and a dropdown menu with "Enable" selected in the right column. The second row has "NView Interval" in the left column and a text input field containing "5" in the right column. Below the table, there are two buttons: "Update" and "Cancel".

Modify NView Configuration	
NView Status	Enable ▼
NView Interval	5

Update Cancel

NView – Ports

The Ports tab under the NView category will display a list of all the configured ports on the 9000 unit along with the ports transmitting multicast packets and MIB stats respectively.

NView Ports View		
Port Name	Multicast on Port?	Send MIB Stats?
A1	YES	YES
A2	YES	YES
A3	YES	YES
A4	YES	YES
A5	YES	YES
A6	YES	YES
B1	YES	YES
B2	YES	YES
B3	YES	YES
B4	YES	YES
--	--	--
--	--	--
C1	YES	YES
C2	YES	YES
--	--	--
--	--	--
--	--	--
--	--	--
--	--	--
--	--	--
--	--	--
--	--	--
--	--	--
E1	YES	YES
E2	YES	YES

Modify Refresh

NView – Ports, Continued...

Following the Modify button on the previous example, the administrator can modify these two variables to enable or disable multicast out of the port and if MIB stats are sent out for those ports.

Port Name	Multicast on Port?	Send MIB Stats?
A1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
A2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
A3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
A4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
A5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
A6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
B1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
B2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
B3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
B4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
C1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
C2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
--	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
E1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
E2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

EventLog – Log Statistics

The Log Statistics tab under the EventLog category will show a list of how many times a type of event took place. On the bottom of the page it should also list the maximum log size which can be modified. There are 5 types of events that the 9000 will categorize messages in. If the log level is set to 1, the 9000 will log all 5 types of events. If the log level is set to 5 it will only record the Critical types (the 5th level).

Event Log Configuration View

Total No of Events :9	
Event Type	Count
Informational	5
Warning	1
Minor	0
Severe	3
Critical	0

Log Size	100
Log Level	1

Following the Modify button on the previous example, the administrator can modify these two variables to adjust for how large he or she wants the log file to be and the log level.

Event Log Configuration

Event Log Size :

Event Log Level :

EventLog – Show Events

The Show Events tab under the EventLog category will show a list of events that have occurred in the order in which they occurred. There is a time stamp for each event and they are categorized by the severity of the event.

Events View					
S.No	Code No	Source Name	Severity	Event Description	Time Stamp
1	98	Network/Ports	Informational	Port10 Link Up	00:00:00:00:26:05
2	99	Network/Ports	Severe	Port10 Link Down	00:00:00:00:26:01
3	27	Bridging	Warning	Entry does not exists in the AET	00:00:00:00:18:35
4	98	Network/Ports	Informational	Port10 Link Up	00:00:00:00:00:04
5	116	Image Loader	Severe	Error connecting to control socket	00:00:00:00:53:09
6	98	Network/Ports	Informational	Port10 Link Up	00:00:00:00:12:00
7	99	Network/Ports	Severe	Port12 Link Down	00:00:00:00:11:57
8	98	Network/Ports	Informational	Port12 Link Up	00:00:00:00:00:05
9	98	Network/Ports	Informational	Port12 Link Up	00:00:00:00:00:05

Total Number of Events Logged:9

Firmware/Config – TFTP

The TFTP tab under the Firmware/Config category gives the administrator the ability to upload or download a config file for a 9000 Series switch. This gives administrators the ability to backup their configurations to a server offsite in case they need to reload their custom configurations at a later time. Administrators are also given the ability to flash the switch in the field allowing them to update the firmware in the field without losing their current configurations and without having to send the unit back in to N-Tron for updates in the future. It is important not to cycle power on the switch or interrupt the data connection between the TFTP server and the switch while you are flashing or uploading or downloading a config file. The switch will not stop working if this does occur, but the administrator will have to retransfer the file.

Firmware Download/Config Upload/Download - TFTP	
Server IP Address	<input type="text" value="192.168.1.2"/>
File Name	<input type="text" value="config"/>
Transfer Type	<input type="text" value="Image Download"/> ▾
<input type="button" value="Action"/>	

Firmware/Config through TFTP Status
Downloading the image through TFTPPlease wait..
The Image has been downloaded successfully.....
Click to restart for changes to take effect.
<input type="button" value="Restart"/>

Firmware/Config – FTP

The FTP tab under the Firmware/Config category gives the administrator the ability to upload or download a config file for a 9000 Series switch. This gives administrators the ability to backup their configurations to a server offsite in case they need to reload their custom configurations at a later time. Administrators are also given the ability to flash the switch in the field allowing them to update the firmware in the field without losing their current configurations and without having to send the unit back in to N-Tron for updates in the future. It is important not to cycle power on the switch or interrupt the data connection between the FTP server and the switch while you are flashing or uploading or downloading a config file. The switch will not stop working if this does occur, but the administrator will have to retransfer the file.

Firmware Download/Config Upload/Download - FTP	
User Name	<input type="text" value="anonymous"/>
Password	<input type="password"/>
Server IP	<input type="text" value="192.168.1.2"/>
File Name	<input type="text" value="config"/>
Mode	<input type="text" value="Binary"/>
Transfer Type	<input type="text" value="Image Download"/>
<input type="button" value="Action"/>	

Firmware/Config through FTP Status
Downloading the image through FTPPlease wait..
The Image has been downloaded successfully

Support – Web Site and E-mail

If at any point in time you get confused or would like additional support directly from N-Tron, you may visit N-Tron's web site, or e-mail N-Tron directory with the links provided for more information.

N-TRON
THE INDUSTRIAL NETWORK COMPANY

Support & Service

All N-TRON products carry a 1 year limited warranty that includes cross-shipment of a replacement product to minimize downtime. Products are available directly from N-TRON, our network of Systems Integrators, Value Added Resellers, and our Catalog and Internet Partners.

[Click here to download our RMA Warranty Service Request form](#) in PDF format.

For additional information, contact us at the address, email or phone number below:

N-TRON Corp.	
820 S. University Blvd.	
Suite 4E	
Mobile, AL 36609	
phone:	251-342-2164
fax:	251-342-6353
E-Mail	support@n-tron.com

©Copyright-2005
<http://www.n-tron.com>

BPCL – Broadcast Packet Count Limit Configuration

The BPCL link will display all the ports that are installed in the 9000 Series unit and will list the BPCL Percentage for each port. A modify button is provided to change these fields.

Broadcast Packet Count Limit Configuration View

Port Name	BPCL [%]	Port Name	BPCL [%]
A1	100	C2	100
A2	100	--	--
A3	100	--	--
A4	100	--	--
A5	100	--	--
A6	100	--	--
B1	100	--	--
B2	100	--	--
B3	100	--	--
B4	100	--	--
--	--	--	--
--	--	E1	100
C1	100	E2	100

Following the Modify button on the previous example, the administrator can modify the BPCL Percentage for each port.

Broadcast Packet Count Limit Configuration

Port Name : ▼

BPCL Percentage :

User Mgmt – Adding Users

The User Management link will display a list of all the users who have access to the management features of the switch and their access permissions.

Authorised Users		
Serial No	User Name	Access Permission
1	admin	admin
<div>Add Remove Refresh</div>		

Following the Add button on the previous example, the administrator can add another user and assign the user a username, a password, and the user's permissions (user/administrator).

Add New User	
User Name	<input type="text" value="user"/>
Password	<input type="password" value="••••••"/>
Access Permission	User <input type="button" value="v"/>
<div>Add Cancel</div>	

A page should display after the administrator clicks the Add button stating that the user was successfully added.

Status of Adding a New User
New User Added Successfully
<div><<Back</div>

NOTE: *There is a maximum number of 5 users per switch. User permissions have the right to view switch configurations and to view current port settings, but cannot make any changes to these settings. Admin permissions have the right to change and view any switch configuration and to change and view any current port settings.*

User Mgmt – Removing Users

In order to remove a user, simply click on the Remove button at the bottom of the page.

Authorised Users		
Serial No	User Name	Access Permission
1	admin	admin
2	user	user

Following the Remove button on the last page, the administrator can remove a user by entering in the user's name and clicking the Remove button.


Remove an Existing User	
User Name	<input type="text" value="user"/>
<input type="button" value="Cancel"/> <input type="button" value="Remove"/>	

A page should follow stating that the user was successfully removed from the list.

Status of Removing an Existing User
User Removed from Existing List Successfully.
<input type="button" value=" <<Back"/>

Logical View

The 9000 Web Management offers a logical view of the switch. Here a user or administrator can see a graphical depiction of the 9000 switch with the installed modules that have been configured in it. Ports that are linked will turn green, while ports that are not linked will show up as black. The example below shows only port 4 on the 9006TX module is linked. The other ports are currently in the down state (not being used).

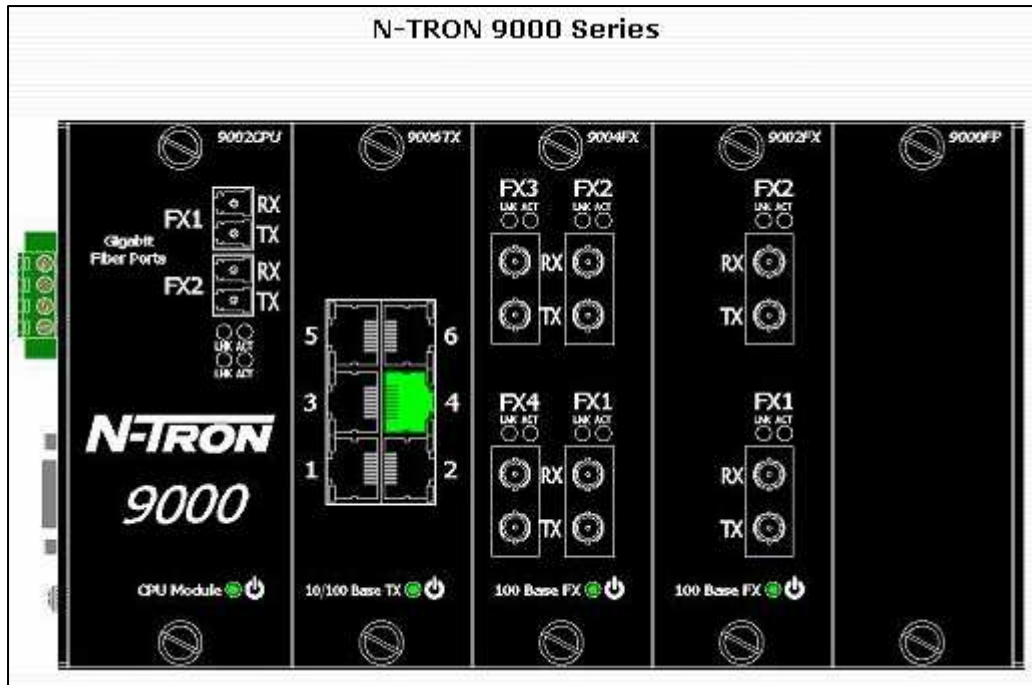

Config – Save and Restore

The Config section of the web management gives an administrator the ability to save a running config into the NVRAM. This step is needed in order for the switch to remember any changes after a power cycle. The Reset factory default button will reload N-Tron's factory default configuration settings. Doing so will re-configure the 9000 Series switch to factory defaults.

In many cases it is desirable to restore factory defaults except retaining IP, Slot Configuration, Subnet Mask, and Gateway Address. A choice is provided to this end.

Configuration Save or Reset

Click "Save" button to configure the data.

Save


Click "KeepIP & Slots" button to reset switch to factory defaults except for Slots and IP, Subnet and Gateway addresses.

KeepIP & Slots

Click "Reset" button to reset switch to factory defaults.


Reset

Help – Overview

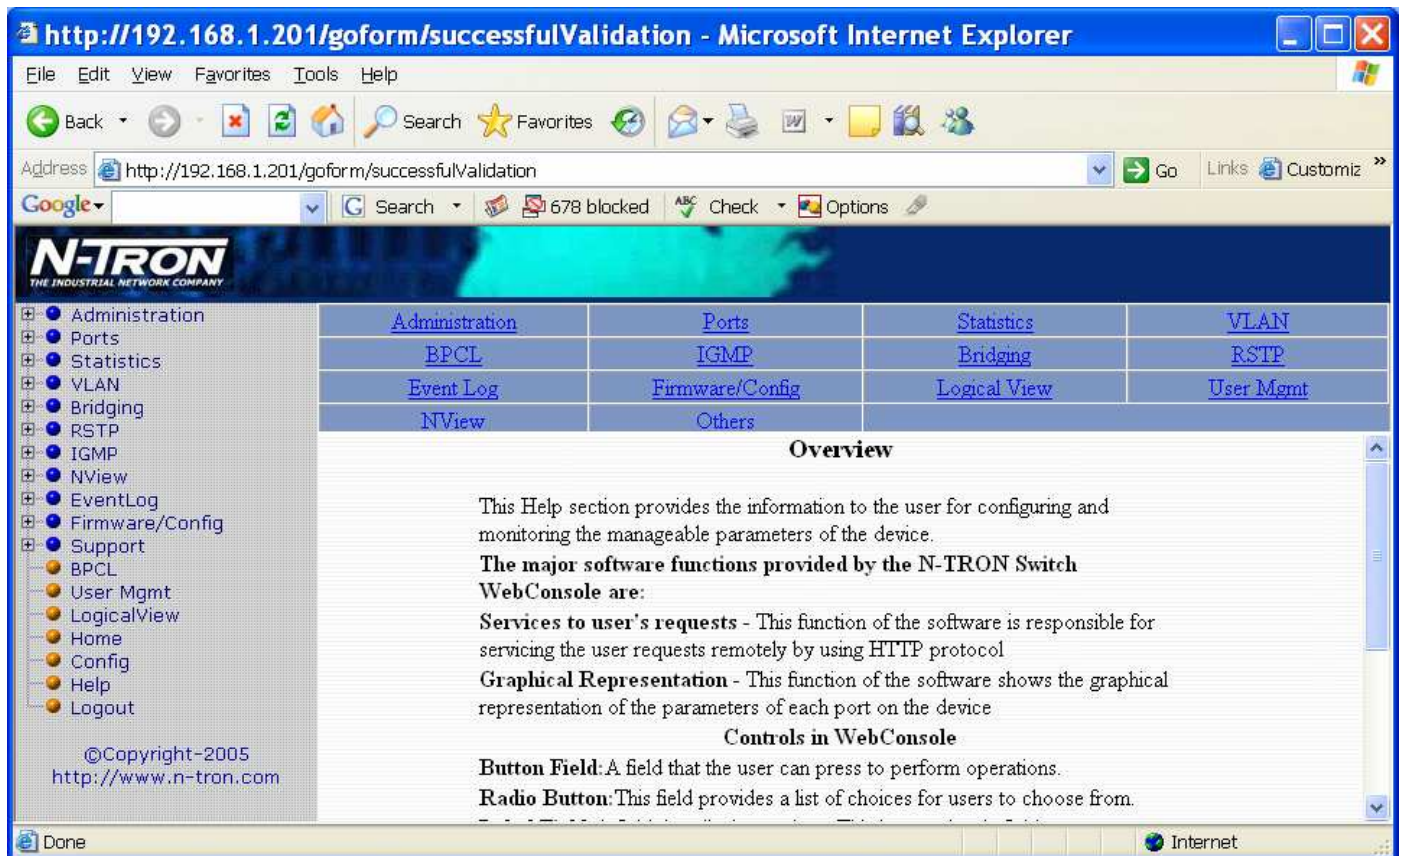


When the Help link is clicked on, you will see the Overview page that will have some basic definitions and more specific choices at the top of the screen. Although this page is not as detailed as the manual is, it gives you a basic feel for different features the 9000 offers.

Help – Administration

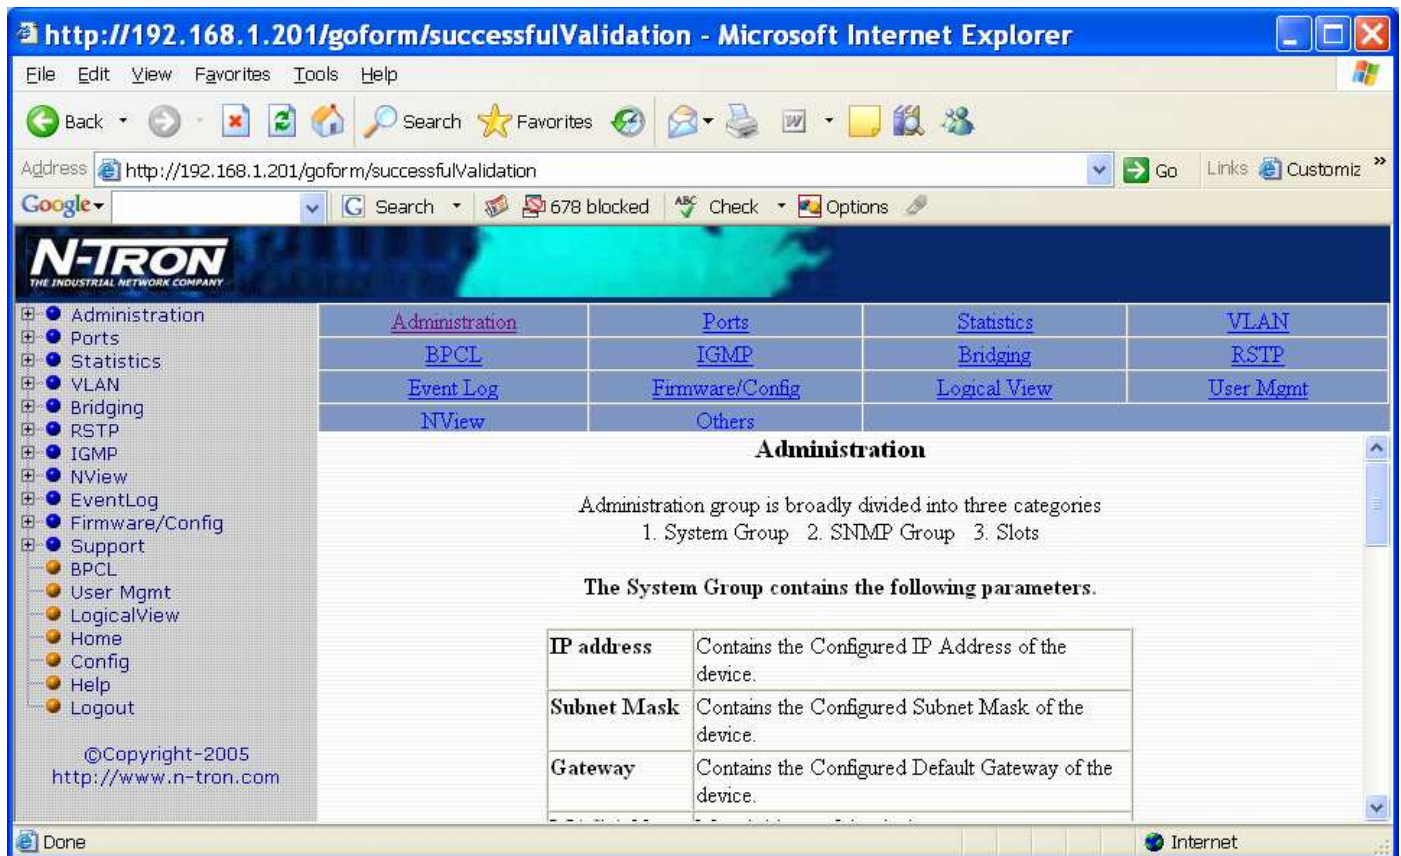


Selecting the Administration link on the help page, the administrator or user can see some information regarding the configuration options in the Administration category on the left side of the web management.

Help – Ports

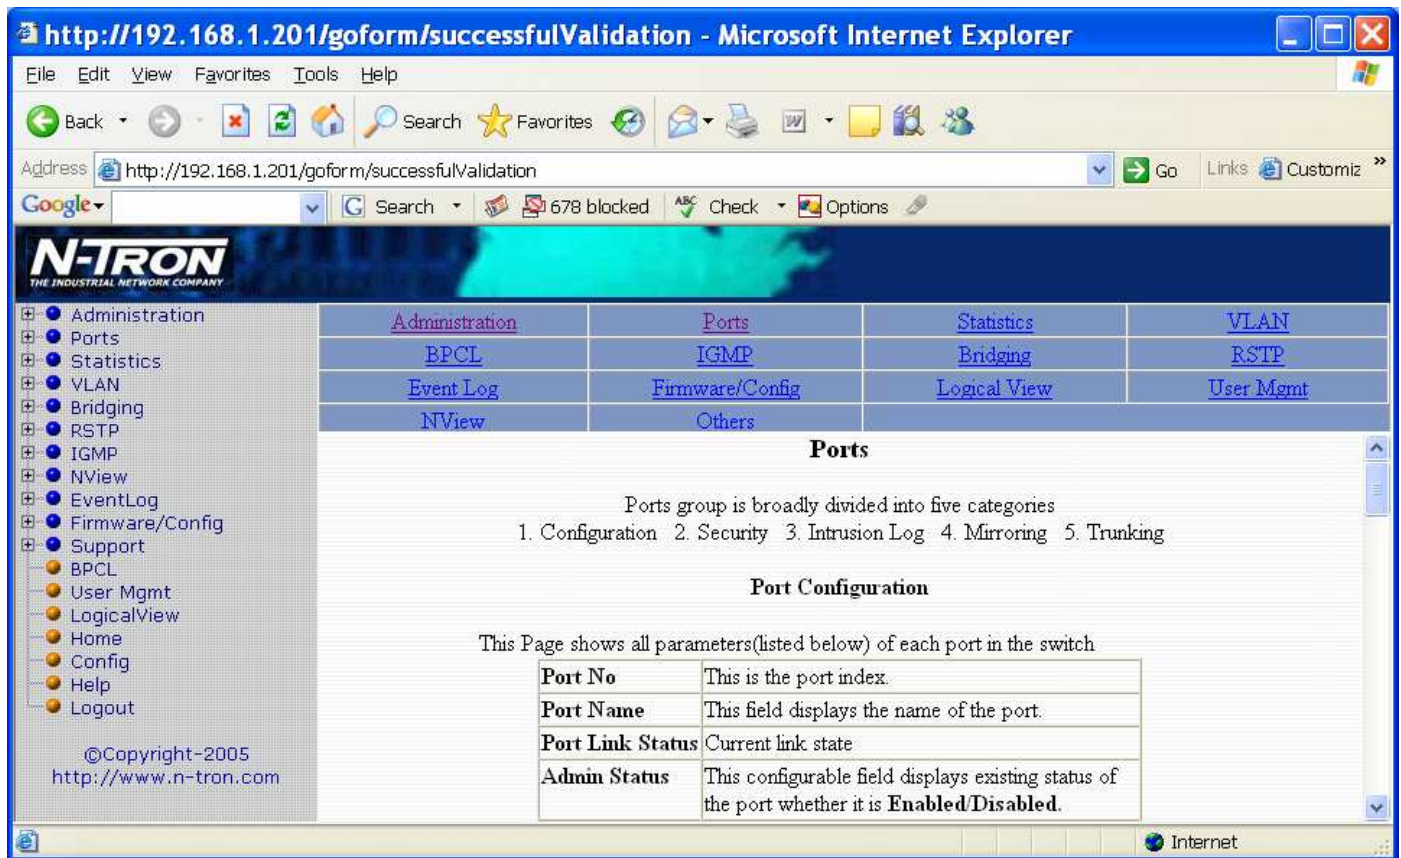

Following the Ports link on the help page, the administrator or user can see some information regarding the configuration options in the Ports category on the left side of the web management.

Help – Statistics

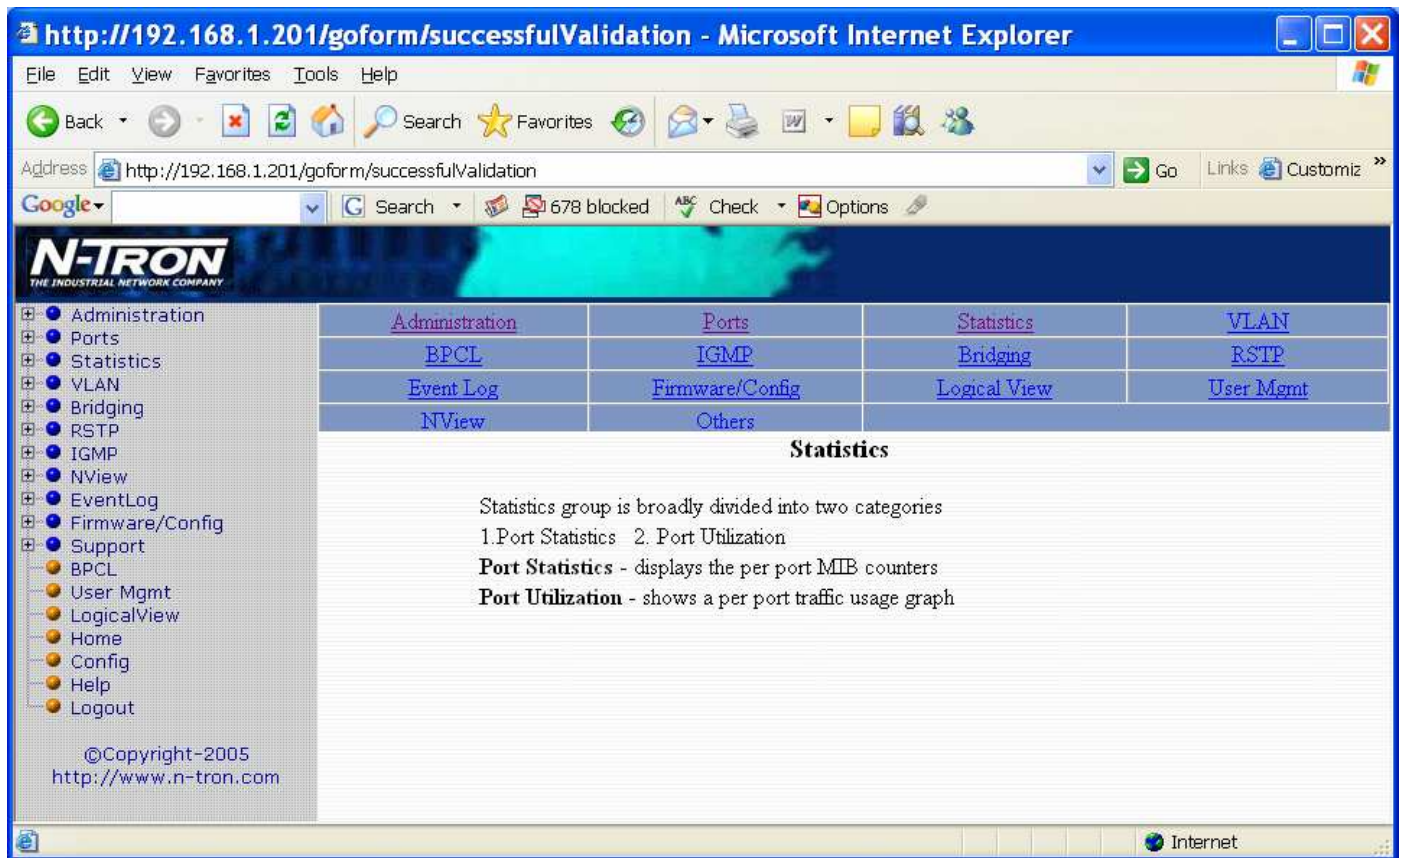

Following the Statistics link on the help page, the administrator or user can see some information regarding the configuration options in the Statistics category on the left side of the web management.

Help – VLAN

The screenshot shows a Microsoft Internet Explorer browser window with the address bar displaying `http://192.168.1.201/goform/successfulValidation`. The page title is "N-TRON THE INDUSTRIAL NETWORK COMPANY". The left sidebar contains a navigation menu with the following items: Administration, Ports, Statistics, VLAN, Bridging, RSTP, IGMP, NView, EventLog, Firmware/Config, Support, BPCL, User Mgmt, LogicalView, Home, Config, Help, and Logout. The main content area displays the "VLAN" help page. At the top, there is a navigation bar with links: Administration, Ports, Statistics, VLAN, BPCL, IGMP, Bridging, RSTP, Event Log, Firmware/Config, Logical View, and User Mgmt. The "VLAN" link is highlighted. Below the navigation bar, the text reads: "VLAN group is broadly divided in to two categories 1.Ingress Filter 2. Port Based VLAN". Under "Ingress Filter", there is a table with two columns: "Ingress Filter Rule" and "Ingress Filter Rule Applies status for that port." The status text is: "Ingress Filtering can be Enabled / Disabled for a Selected port / ALL ports based on the Port Name Selection." Under "Port Based VLAN", there is a table with two columns: "VLAN ID" and "VLAN Name". The "VLAN ID" row states: "This field display VLAN ID No.The range should be 1-4094". The "VLAN Name" row states: "This configurable field displays the name of". The footer of the page shows the copyright information: "©Copyright-2005 http://www.n-tron.com".

Administration	Ports	Statistics	VLAN
BPCL	IGMP	Bridging	RSTP
Event Log	Firmware/Config	Logical View	User Mgmt
NView	Others		

VLAN

VLAN group is broadly divided in to two categories
1.Ingress Filter 2. Port Based VLAN

Ingress Filter

Ingress Filter Rule	Ingress Filter Rule Applies status for that port.
	Ingress Filtering can be Enabled / Disabled for a Selected port / ALL ports based on the Port Name Selection.

Port Based VLAN

VLAN ID	VLAN Name
This field display VLAN ID No.The range should be 1-4094	This configurable field displays the name of

©Copyright-2005
http://www.n-tron.com

Using the VLAN link on the help page, the administrator or user can see some information regarding the configuration options in the VLAN category on the left side of the web management.

Help – BPCL

The screenshot shows a Microsoft Internet Explorer browser window with the address bar displaying `http://192.168.1.201/goform/successfulValidation`. The page title is "N-TRON THE INDUSTRIAL NETWORK COMPANY". The left sidebar contains a navigation menu with the following items: Administration, Ports, Statistics, VLAN, Bridging, RSTP, IGMP, NView, EventLog, Firmware/Config, Support, BPCL, User Mgmt, LogicalView, Home, Config, Help, and Logout. The main content area displays a table of links for various configuration categories:

Administration	Ports	Statistics	VLAN
BPCL	IGMP	Bridging	RSTP
Event Log	Firmware/Config	Logical View	User Mgmt
NView	Others		

Below the table, the page is titled "Broadcast Packet Count Limit" and "BPCL". It states: "This Page shows the percentage of broadcast packets that will be accepted and forwarded."

Port Name	Descriptive name for the port
BPCL [%]	This configurable field displays the Broadcast traffic rate. The range should be 0-100 , the default is 100%.

The user can Modify the percentage on a particular port by clicking the **Modify** button.

At the bottom left, the copyright notice reads: ©Copyright-2005 <http://www.n-tron.com>. The bottom right shows the status bar with "Internet" and a globe icon.

Using the BPCL the link on the help page, the administrator or user can see some information regarding the configuration options in the BPCL category on the left side of the web management.

Help – IGMP

http://192.168.1.201/goform/successfulValidation - Windows Internet Explorer

http://192.168.1.201/goform/successfulValidation

File Edit View Favorites Tools Help

Google Go RS Bookmarks Check AutoLink Send to Settings

Norton Fraud monitoring is on Options

N-TRON
THE INDUSTRIAL NETWORK COMPANY

- Administration
- Ports
- Statistics
- VLAN
- Bridging
- RSTP
- IGMP
- N-View
- N-Ring
- EventLog
- Firmware/Config
- Support
- BPCL
- User Mgmt
- LogicalView
- Home
- Config
- Help
- Logout

©Copyright-2005
http://www.n-tron.com

Administration	Ports	Statistics	VLAN
BPCL	IGMP	Bridging	RSTP
Event Log	Firmware/Config	Logical View	User Mgmt
N-View	N-Ring	Others	

Internet Group Management Protocol (IGMP)

IGMP group consists of three categories

1. Configuration
2. Show Group
3. Show Router

Configuration

IGMP Status	Whether IGMP is enabled or disabled.
Query Mode	Can be Auto, On or Off
Router Mode	Can be Auto, None or Manual
Manual Router Ports	Port or ports that are specified as router ports manually.
Router Add/Delete	Either adds or deletes router ports to/from the port lists

IGMP Group Displays the group information

The table contains the Multicast Groups, which represents Group IP (Address), Port Name and VLAN ID

Auto-Detected Router View

The table contains the auto-detected routers, represented by its Router IP Address and Port Name

RFilter Ports

If IGMP is enabled and a port is a 'router port', then rfilter enabled stops IGMP group data from egressing on the port unless a join to that specific IGMP group has come into the port. IGMP Controls (Join, Leave, Query) are still sent.

Internet 100%

Following the IGMP link on the help page, the administrator or user can see some information regarding the configuration options in the IGMP category on the left side of the web management.

Help – Bridging

The screenshot shows a Microsoft Internet Explorer browser window with the address bar displaying <http://192.168.1.201/goform/successfulValidation>. The page title is "N-TRON THE INDUSTRIAL NETWORK COMPANY". The left sidebar contains a navigation menu with the following items: Administration, Ports, Statistics, VLAN, Bridging, RSTP, IGMP, NView, EventLog, Firmware/Config, Support, BPCL, User Mgmt, LogicalView, Home, Config, Help, and Logout. The main content area displays the "Bridging" help page. At the top, there is a table of links:

Administration	Ports	Statistics	VLAN
BPCL	IGMP	Bridging	RSTP
Event Log	Firmware/Config	Logical View	User Mgmt
NView	Others		

Below the table, the text reads: "Bridging group is broadly divided into three categories" followed by a list: "1. Aging Time 2. Unicast Addresses 3. Multicast Addresses". The "Aging Time" section is highlighted, and a text box provides the following information:

Aging Time This Configurable field displays the Aging Time for Dynamically Learned MAC Addresses. The inactive members will be removed from the Hardware Address Entry Table after this time period. The Aging Time range should be 10-1000000. The default aging time is 20 Sec.

At the bottom of the page, there is a copyright notice: "©Copyright-2005 http://www.n-tron.com".

Using the Bridging link on the help page, the administrator or user can see some information regarding the configuration options in the Bridging category on the left side of the web management.

Help – RSTP

The screenshot shows a Microsoft Internet Explorer browser window with the address bar displaying `http://192.168.1.201/goform/successfulValidation`. The page title is "N-TRON THE INDUSTRIAL NETWORK COMPANY". The left sidebar contains a navigation menu with the following items: Administration, Ports, Statistics, VLAN, Bridging, RSTP, IGMP, NView, EventLog, Firmware/Config, Support, BPCL, User Mgmt, LogicalView, Home, Config, Help, and Logout. The main content area displays a table of links for various network functions, including Administration, Ports, Statistics, VLAN, BPCL, IGMP, Bridging, RSTP, Event Log, Firmware/Config, Logical View, User Mgmt, NView, and Others. Below this table, the heading "Rapid Spanning Tree Protocol (RSTP)" is shown. Underneath, the section "RSTP root bridge information" contains a table with the following details:

Root Priority	Priority of the Root Bridge
Designated root	The unique Bridge Identifier of the Bridge recorded as the Root in the Root Identifier parameter of Configuration BPDUs transmitted by the Designated Bridge for the LAN to which the Port is attached.
Path Cost	The cost of the path to the root offered by the Designated Port on the LAN to which this Port is attached.
Port No	The Port Identifier of the Bridge Port believed to

At the bottom of the page, the copyright information is displayed: ©Copyright-2005 <http://www.n-tron.com>.

Using the RSTP link on the help page, the administrator or user can see some information regarding the configuration options in the RSTP category on the left side of the web management.

Help – Event Log

N-TRON
THE INDUSTRIAL NETWORK COMPANY

Administration Ports Statistics VLAN
BPCL IGMP Bridging RSTP
Event Log Firmware/Config Logical View User Mgmt
NView Others

Eventlog

Eventlog is divided in two categories
1. Log Statistics 2. Show Events

Log Statistics

Event Type	Description
Informational	Displays type of Event ie.. Informational, Warning, Minor, Severe and Critical Total Count of Logged Informational Events. Informational Events reports normal operation.
Warning	Total Count of Logged Warning Events. This type of event provides suspicious behavior that may or may not affect the system.

©Copyright-2005
http://www.n-tron.com

Using the Event Log link on the help page, the administrator or user can see some information regarding the configuration options in the Event Log category on the left side of the web management.

Help – Firmware/Config

N-TRON
THE INDUSTRIAL NETWORK COMPANY

- Administration
- Ports
- Statistics
- VLAN
- Bridging
- RSTP
- IGMP
- NView
- EventLog
- Firmware/Config
- Support
- BPCL
- User Mgmt
- LogicalView
- Home
- Config
- Help
- Logout

©Copyright-2005
http://www.n-tron.com

Administration	Ports	Statistics	VLAN
BPCL	IGMP	Bridging	RSTP
Event Log	Firmware/Config	Logical View	User Mgmt
NView	Others		

Firmware Download/ Config Upload/ Config Download - TFTP/FTP


FTP

The firmware image can be downloaded onto the device (switch) using the FTP protocol. The configuration data can be uploaded from or downloaded onto the device (switch) using the FTP protocol.

User Name	Used to login to the FTP site (FTP Server IP).
Password	Password for the login user at FTP site.
Server IP	IP Address of the FTP Server to which the connection is to be established in order to get the Firmware / Configuration data.

Using the Firmware/Config link on the help page, the administrator or user can see some information regarding the configuration options in the Firmware/Config category on the left side of the web management.

Help – Logical View

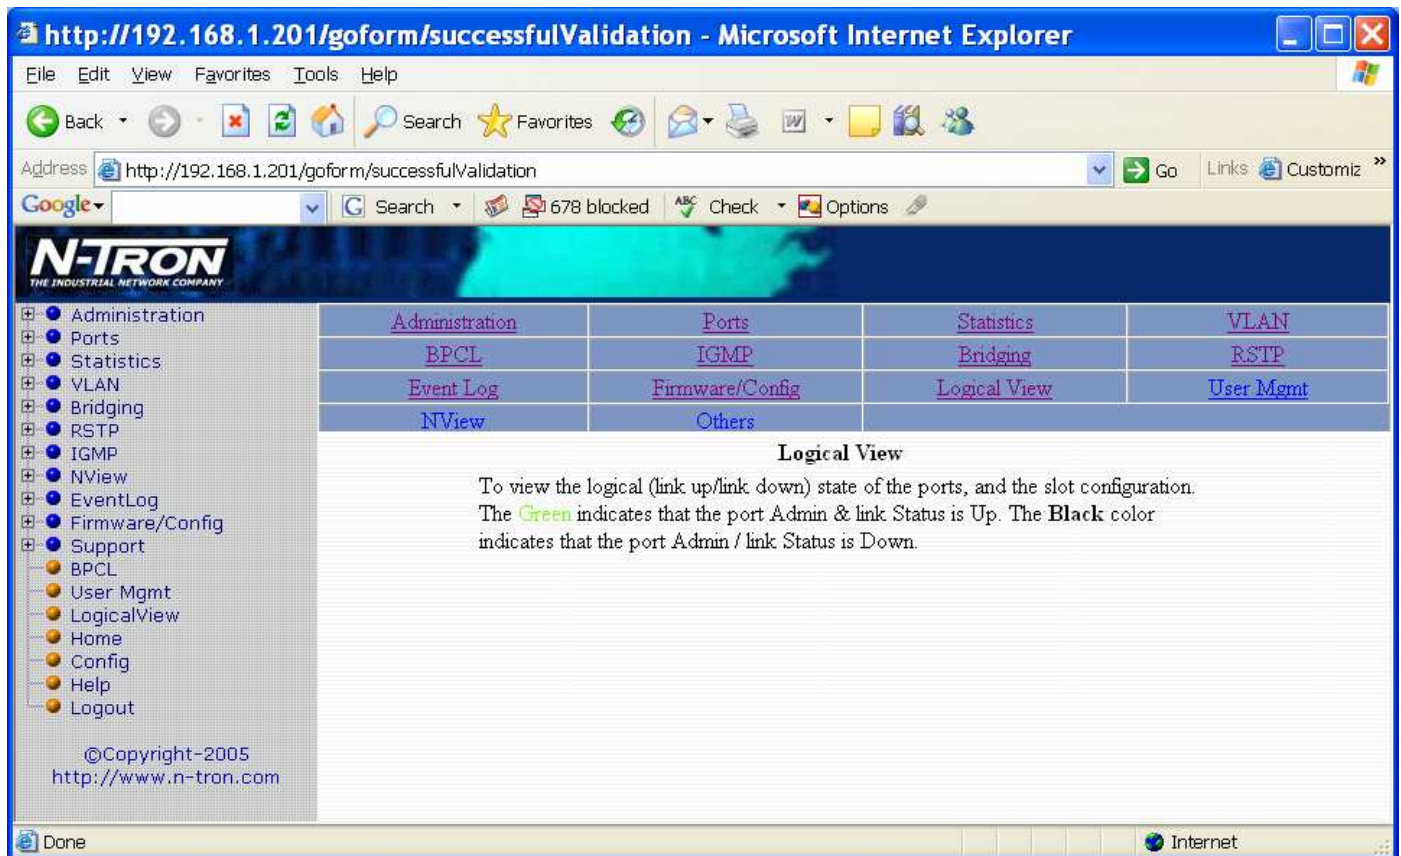

Using the Logical View link on the help page, the administrator or user can see some information regarding the configuration options in the Logical View category on the left side of the web management.

Help – User Mgmt

http://192.168.1.201/goform/successfulValidation - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Reload Home Search Favorites RSS Mail News Groups Shopping

Address http://192.168.1.201/goform/successfulValidation Go Links Customiz »

Google Search 678 blocked Check Options

N-TRON
THE INDUSTRIAL NETWORK COMPANY

- Administration
- Ports
- Statistics
- VLAN
- Bridging
- RSTP
- IGMP
- NView
- EventLog
- Firmware/Config
- Support
- BPCL
- User Mgmt
- LogicalView
- Home
- Config
- Help
- Logout

©Copyright-2005
http://www.n-tron.com

Administration	Ports	Statistics	VLAN
BPCL	IGMP	Bridging	RSTP
Event Log	Firmware/Config	Logical View	User Mgmt
NView	Others		

User Management

User management screen allows users to view, add and remove system user accounts.

Authorized Users

Serial No	User table index
User Name	User name string
Access Permission	A user can have admin (read/write) or user (read-only) privileges.

Done Internet

Using the User Mgmt link on the help page, the administrator or user can see some information regarding the configuration options in the User Mgmt category on the left side of the web management.

Help – NView

http://192.168.1.201/goform/successfulValidation - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Reload Home Search Favorites RSS Mail News Groups Feeds

Address: http://192.168.1.201/goform/successfulValidation Go Links Customiz »

Google Search 678 blocked Check Options

N-TRON
THE INDUSTRIAL NETWORK COMPANY

- Administration
- Ports
- Statistics
- VLAN
- Bridging
- RSTP
- IGMP
- NView
- EventLog
- Firmware/Config
- Support
- BPCL
- User Mgmt
- LogicalView
- Home
- Config
- Help
- Logout

©Copyright-2005
http://www.n-tron.com

Administration	Ports	Statistics	VLAN
BPCL	IGMP	Bridging	RSTP
Event Log	Firmware/Config	Logical View	User Mgmt
NView	Others		

NView

NView is divided in two categories
1. Configuration 2. Ports


Configuration

NView Status	Global NView enable or disable
NView Interval	Global interval in seconds for autocasting MIB counters

Done Internet

Using the NView link on the help page, the administrator or user can see some information regarding the configuration options in the NView category on the left side of the web management.

Help – Others

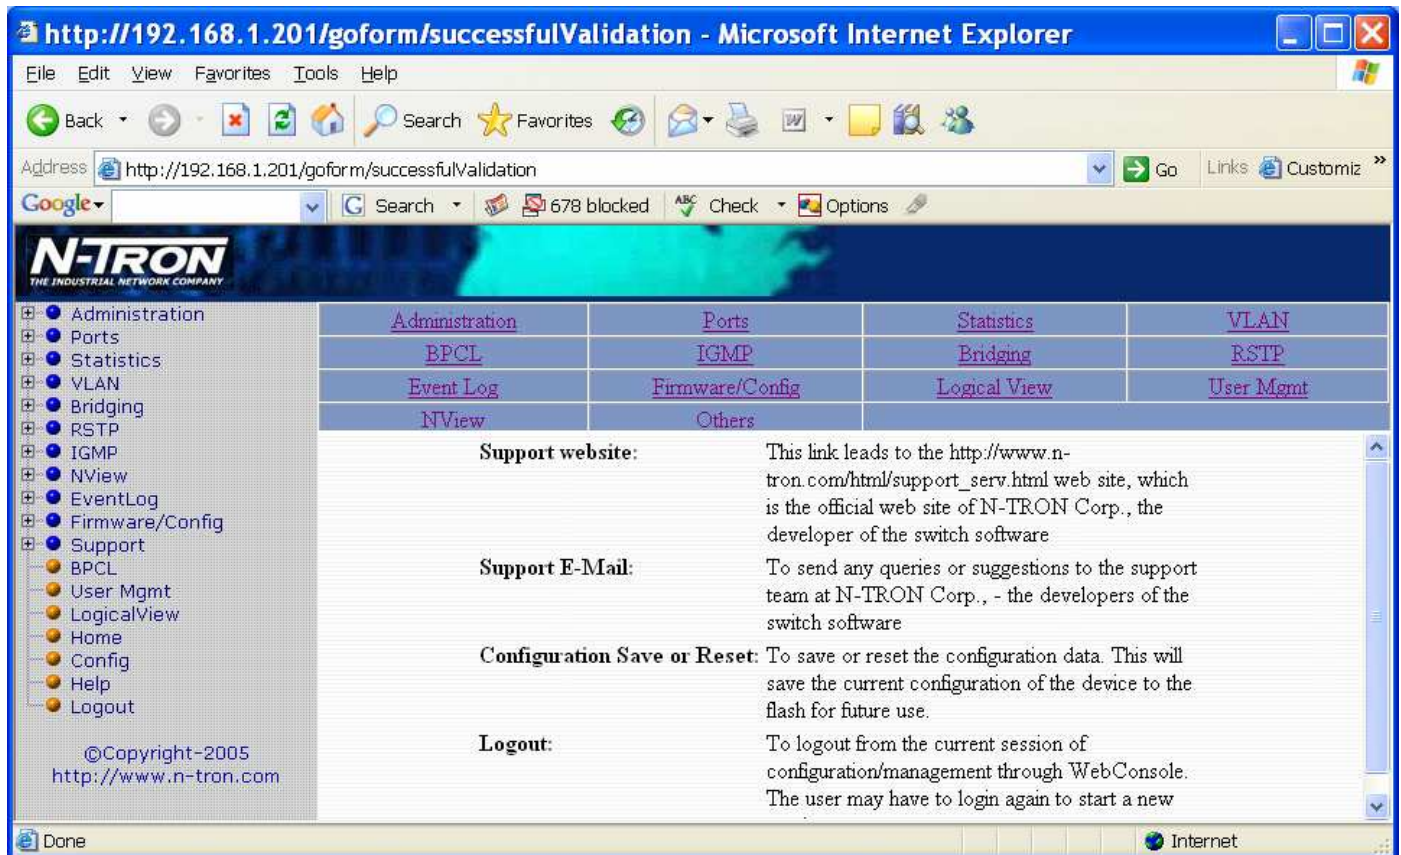

Following the Others link on the help page, the administrator or user can see some information regarding other links or categories on the left hand side of the web manager, as above.

CLI Commands

Clear

Command Name	clear
Description	Clears the screen. The cleared screen shows only the command-line prompt and the cursor.
Syntax	clear
Parameters	None
Examples	N-TRON/Admin#[1]> clear <i>The entire screen will be cleared...</i> N-TRON/Admin#[2]>
NOTES	

“?” (HELP)

Command Name	“?”
Description	Without <keywords>, this command will list all the available commands. This is the same as the default behavior of the help command. If <keywords> is specified and if they match a specific command, the usage of the command will be displayed; otherwise, if <keywords> matches the prefix of a command(s), the name of the command(s) will be listed. If ? is preceded by another ?, the usage and description of this command will be displayed.
Syntax	? <matched keywords> ? <command> ?
Parameters	matched keywords Prefixes of the command. command Name of the any command supported by CLI
Examples	N-TRON/Admin#[1]> ? <i>The above command displays all the available commands.</i> N-TRON/Admin#[2]> abcd ? Unknown command supplied as parameter. N-TRON/Admin#[3]> clear ? Usage: clear N-TRON/Admin#[4]> system ? System/ N-TRON/Admin#[5]> ? ? <i>This displays the usage of “?” as shown below</i> [<keywords>] ?
NOTES	

Top

Command Name	top
Description	Changes the context to the topmost (global) level. If already at the topmost context, the command is simply ignored
Syntax	top
Parameters	None
Examples	N-TRON/Admin#[1]system> show N-TRON/Admin#[2]system/show> top N-TRON/Admin#[3]> top N-TRON/Admin#[4]>
NOTES	

Up

Command Name	up
Description	Changes the context to the next higher level. If already at the topmost context, the command is simply ignored
Syntax	up
Parameters	None
Examples	N-TRON/Admin#[1]> system show N-TRON/Admin#[2]system/show> up N-TRON/Admin#[3]system> up N-TRON/Admin#[4]> up N-TRON/Admin#[5]>
NOTES	

Logout

Command Name	logout
Description	Logs out the user from a CLI session. In case of a remote session, the session will be terminated after the user is logged out.
Syntax	logout
Parameters	None
Examples	N-TRON/Admin#[1] logout Hit <ENTER> to login:
NOTES	

local

History

Command Name	history
Description	Lists all the commands in the history list for the current session, identifying each command with a reference number.
Syntax	history
Parameters	-reverse reverse the order of display to be the most recent entry first. -maxsize set the maximum no. of entries that will be maintained in the list to the given value. -clear remove all entries in the command history list.
Examples	N-TRON/Admin#[1]> history <i>The above command displays previously entered commands.</i>
NOTES	

“!”

Command Name	!
Description	<p>Repeats the command in the history list identified by <command-reference>.</p> <p>!! – repeats the last command executed.</p> <p>!<n> – repeats the command in the history list associated with reference number <n>.</p> <p>!<str> – repeats the most recent command that begins with the string <str>.</p> <p>Any non-whitespace characters that follow are appended to the referenced command prior to its execution.</p>
Syntax	<p>!<n></p> <p>!<str></p>
Parameters	<p>N</p> <p>It is the reference number of the command from history list that has to be repeated.</p> <p>str</p> <p>The most recent command from the history list that begins with keyword str.</p>
Examples	<p>N-TRON/Admin#[1]> !! Referenced command is not in the history list.</p> <p>N-TRON/Admin#[2]> !1 Referenced command is not in the history list.</p> <p>N-TRON/Admin#[3]> !s Referenced command is not in the history list.</p> <p>N-TRON/Admin#[4]> whoami admin with privilege of Administrator</p> <p><i>here comes the usage of “!” command</i></p> <p>N-TRON/Admin#[5]> !w whoami admin with privilege of Administrator</p> <p>N-TRON/Admin#[6]> !2 <i>The above command will execute the second command, which is available in history list.</i></p> <p>N-TRON/Admin#[7]> !system <i>The above command will execute the latest command in the history list that starts with system.</i></p>
NOTES	

“\$”

Command Name	\$
Description	This command copies the command identified by reference number <command no> from the history list into the next command line allowing the user to edit the command for corrections or changes.
Syntax	\$<n>
Parameters	n The reference number of the command in the history list that has to be edited.
Examples	N-TRON/Admin#[1]> whoaim <i>As shown above the command whoaim was entered instead of whoami. To edit the already entered command do as follows.</i> N-TRON/Admin#[2]> \$1 N-TRON/Admin#[2]> whoaim <i>Now we can edit the command at the command prompt.</i>
NOTES	After entering ‘\$1’ at the prompt, it displays the previously entered command.

Whoami

Command Name	whoami
Description	This command displays the current operating mode of the user.
Syntax	whoami
Parameters	None
Examples	<i>eg.1</i> N-TRON/Admin#[5]>whoami admin with privilege of Administrator <i>eg.2</i> N-TRON/User#[5]> whoami user with privilege of User
NOTES	

Ping

Command Name	ping
Description	To issue the ping request to a specified host.
Syntax	ping <hostip-address> [count]
Parameters	hostip-address IP Address of the host to give the ping request. count Count the number of times to give the ping request (range 5-50).
Example	ping 10.1.6.15 ping 10.1.6.15 10
Notes	

System Configuration Commands

Set Mode IP config

Command Name	system set modeipconfig
Description	To set the IP address mode of the system
Syntax	system set modeipconfig <manual/dhcp/bootp>
Parameters	manual Uses a static IP address scheme (default mode) dhcp Pulls an IP address from a DHCP server on the LAN bootp Pulls an IP address from a Bootp server on boot up
Example	N-TRON/Admin#[1]> system set modeipconfig dhcp
NOTES	Bootp is an older version of DHCP, DHCP is recommended for a dynamic address scheme.

Set IP/Subnet/Gateway Addresses of the system

Command Name	system set ip
Description	To set the IP address of the system
Syntax	system set ip <IP-address> <subnet>[<gateway>]
Parameters	IP Address The IP address of the system in dotted decimal notation Subnet The subnet of the above specified IP Address Gateway The gateway address of the system.
Example	N-TRON/Admin#[1]> system set ip 10.1.1.158 255.0.0.0 N-TRON/Admin#[2]> system set ip 10.1.6.150 255.255.255.0 10.1.6.150
NOTES	The IP address should be a valid IP address (excluding Class D & Class E type)

Get IP Address of the system

Command Name	system get ip
Description	To display the IP/Subnet/Gateway addresses of the device
Syntax	system get ip
Parameters	None
Example	N-TRON/Admin#[1]> system get ip
NOTES	

Set System Name

Command Name	system set sysname
Description	To set the system name
Syntax	system set sysname <Name-of-the-system>
Parameters	Name-of-the-system The system name to be used
Example	N-TRON/Admin#[1]> system set sysname N-Tron N-TRON/Admin#[2]> system set sysname "N-Tron Switch"
Notes	Please ensure to use "" for supplying arguments with spaces

Get System Name

Command Name	system get sysname
Description	To display the name of the system
Syntax	system get sysname
Parameters	None
Example	N-TRON/Admin#[1]> system get sysname
Notes	System Name : N-TRON Switch

Get Gateway Address of the System

Command Name	system get gateway
Description	To display the gateway address of the system
Syntax	system get gateway
Parameters	None
Example	N-TRON/Admin#[4]> system get gateway System Gateway Address : 192.168.1.1
Notes	

Get Mac Address of the System

Command Name	system get sysmac
Description	To display the mac address of the device
Syntax	system get sysmac
Parameters	None
Example	N-TRON/Admin#[1]> system get sysmac System MAC Address : 00:07:af:00:00:00
Notes	

Get Netmask of the System

Command Name	system get netmask
Description	To display the netmask/subnet of the device
Syntax	system get netmask
Parameters	None
Example	N-TRON/Admin#[8]> system get netmask System Subnet : 255.255.255.0
Notes	

Get System Contact

Command Name	system get syscontact
Description	To get the contact person name of the device.
Syntax	system get syscontact
Parameters	None
Example	N-TRON/Admin#[10]> system get syscontact System Contact : N-TRON Admin
Notes	

Set System Contact

Command Name	system set syscontact
Description	To set the contact details for the system
Syntax	system set syscontact <Contact-for-the-system>
Parameters	Contact-for-the-system The details of the person to be contacted for this system in case of any queries or problems
Example	N-TRON/Admin#[1]> system set syscontact admin@N-Tron.com N-TRON/Admin#[2]> system set syscontact "Support Team"
Notes	Please ensure to use “ ” for supplying arguments with spaces

Get System Location

Command Name	system get syslocation
Description	To display the system location details.
Syntax	system get syslocation
Parameters	None
Example	N-Tron/Admin#[1]> system get syslocation
Notes	

Set System Location

Command Name	system set syslocation
Description	To set the location details of the system
Syntax	system set syslocation <Location-of-the-system>
Parameters	Location-of-the-system The details of where the system is located
Example	N-TRON/Admin#[1]> system set syslocation "San Jose" N-TRON/Admin#[2]> system set syslocation Hyderabad
Notes	Please ensure to use "" for supplying arguments with spaces

Get System Uptime

Command Name	system get sysuptime
Description	To get the uptime of the device.
Syntax	system get sysuptime
Parameters	None
Example	N-TRON/Admin#[1]> system get sysuptime System Up Time : 9 days:17 hours:8 mins:40 secs
Notes	

Get Number of Ports present in the System

Command Name	system get portcount
Description	To get the number of ports present in the device.
Syntax	system get portcount
Parameters	None
Example	N-TRON/Admin#[1]> system get portcount
Notes	

Set IP Address of the SNMP Manager

Command Name	system set snmpmgmtip
Description	To set the IP address of the SNMP manager
Syntax	system set snmpmgmtip <IP-address>
Parameters	IP Address The IP address of the SNMP manager in dotted decimal notation
Example	N-TRON/Admin#[1]> system set snmpmgmtip 10.1.5.100 N-TRON/Admin#[2]> system set snmpmgmtip 10.1.6.150
NOTES	The IP address should be a valid IP address (excluding Class D & Class E type). To restore a Trap to "Value Not Configured", enter '0.0.0.0'.

Set SNMP Get Community name

Command Name	system set snmpgetcommunity
Description	To set the community name for performing snmpget operation
Syntax	system set snmpgetcommunity <Community-Name>
Parameters	Community-Name The name of the community to be used for performing snmpget operation
Example	N-TRON/Admin#[1]> system set snmpgetcommunity public N-TRON/Admin#[1]> system set snmpgetcommunity "N-Tron Systems"
Notes	Please ensure to use "" for supplying arguments with spaces

Set SNMP Set Community name

Command Name	system set snmpsetcommunity
Description	To set the community name for performing snmpset operation
Syntax	system set snmpsetcommunity <Community-Name>
Parameters	Community-Name The name of the community to be used for performing snmpset operation
Example	N-TRON/Admin#[1]> system set snmpsetcommunity private N-TRON/Admin#[1]> system set snmpsetcommunity "N-Tron_Systems"
Notes	Arguments cannot have spaces. You can use an underscore ('_') instead of a space.

Set SNMP Trap Community name

Command Name	system set snmptrapcommunity
Description	To set the community name for raising snmp trap
Syntax	system set snmptrapcommunity <Community-Name>
Parameters	Community-Name The name of the community to be used for raising snmp trap
Example	N-TRON/Admin#[1]> system set snmptrapcommunity private N-TRON/Admin#[1]> system set snmptrapcommunity "N-Tron_Systems"
Notes	Arguments cannot have spaces. You can use an underscore ('_') instead of a space.

Show all configuration parameters

Command Name	system show config
Description	Displays the software version, the mac address, and status of gigabit ports.
Syntax	system show config
Parameters	None
Example	N-TRON/Admin#[32]system/show> config System Configuration : IP Configuration Mode: manual System IP Address : 192.168.1.201 Subnet Mask : 255.255.255.0 Gateway Address : 192.168.1.1 System Name : N-TRON Switch System Contact : N-TRON Admin System Location : Mobile, AL 36609 System Up Time : 9 days:17 hours:15 mins:2 secs Model Description : Value Not Configured --- --- Software Version: 2.3.12 Loader Version : LOADER1.20 MAC Address : 00:07:af:00:b1:20 Uplink port#25 : No Transceiver Installed port#26 : No Transceiver Installed
Notes	

Show all configuration parameters related to SNMP manager

Command Name	system show snmpinfo
Description	To show all the configuration parameters related to snmp manager
Syntax	system show snmpinfo
Parameters	None
Example	N-TRON/Admin#[33]system/show> snmpinfo System SNMP Configuration : IP Address - Trap Station#1 : 192.168.1.2 IP Address - Trap Station#2 : Value Not Configured IP Address - Trap Station#3 : Value Not Configured IP Address - Trap Station#4 : Value Not Configured IP Address - Trap Station#5 : Value Not Configured SNMP Get Community Name : public SNMP Set Community Name : private SNMP Trap Community Name : public
Notes	

System Restart

Command Name	system restart
Description	To restart (reboot) the device
Syntax	system restart
Parameters	None
Example	N-TRON/Admin#[1]> system restart Do you Want to Restart the System Now: [y/n]y Do you Want to Save the Configuration: [y/n]y
Notes	

User Management Commands

Show System Users

Command Name	system show users
Description	Shows a list of users and their permissions on the system
Syntax	system show users
Parameters	None
Example	N-TRON/Admin#[1]> system show users <pre> Serial Username Access Permissions ----- - 1 admin admin 2 ntron user </pre>
NOTES	

Add a System User

Command Name	system add user
Description	To add a user to the system
Syntax	system add user <username> [access permission]
Parameters	Username A string of at least 3 characters and no more then 15 characters Access permission “user” or “admin” permission rights Password Administrator will be prompted for a password of 3 to 15 characters in length.
Example	N-TRON/Admin#[1]> system add user ntron user Enter User Password :****
NOTES	Users with User permissions can not make changes to the switch, but can view configuration settings and port settings. Users with admin permissions have the ability to change settings on the switch and can add more users. There is a limit of 5 users per switch with any combination of permissions.

Modify a User’s Access Permissions

Command Name	system modify useraccess
Description	To change a user’s permissions
Syntax	system modify useraccess <username> <access permission>
Parameters	Username The user’s username that is to be modified. Access permission “user” or “admin” permission rights
Example	N-TRON/Admin#[1]> system modify useraccess ntron admin
NOTES	User must have admin permissions to use this command

Modify a User’s Password

Command Name	system modify userpassword
Description	To change a user’s password
Syntax	system modify userpassword <username>
Parameters	Username The user’s username that is to be modified Password The new password for the user
Example	N-TRON/Admin#[1]system/modify> userpassword ntron Enter New Password :***** Confirm New Password :***** Password has been modified successfully
Notes	A user with user permissions can operate this command, but will be prompted for the old password before being prompted for the new password.

Remove a System User

Command Name	system remove user
Description	To remove a user from the users list
Syntax	system remove user <username>
Parameters	username The user's username that is to be removed
Example	N-TRON/Admin#[1]> system remove user ntron Do you really want to delete the above user: [y/n]y User successfully deleted
Notes	Only users with admin permissions can operate this command.

Image Loader Commands

Download Image through COM port

Command Name	image download
Description	To download new firmware image through the serial port on the switch.
Syntax	image download
Parameters	None
Examples	N-TRON/Admin#[1]> image download
NOTES	Uses XModem protocol when transferring the file. N-Tron recommends that you use TFTP or FTP when updating the firmware. TFTP and FTP are both much faster.

TFTP Commands

Set the TFTP configuration parameter

Command Name	tftp set
Description	To set the TFTP configuration parameters TFTP Server IP Address and Remote File name.
Syntax	tftp set serverparam <ip-address> <remote-file-name>
Parameters	ip-address TFTP Server IP Address in dotted decimal notation for establishing the connection to transfer the file. remote-file-name Name of the remote file (<i>including complete path</i>) to be retrieved from the TFTP Server.
Examples	<i>eg.1</i> N-TRON/Admin#[1]> tftp set serverparam 10.1.1.151 flash <i>eg.2</i> N-TRON/Admin#[1]> tftp set serverparam 10.1.1.151 /usr/local/tftp/flash
NOTES	Please ensure that TFTP ServerIP is a valid IP Address by pinging it.

Show TFTP configuration parameters

Command Name	tftp show
Description	To display the present values of all the TFTP related configuration parameters.
Syntax	tftp show
Parameters	None
Examples	N-TRON/Admin#[1]> tftp show
NOTES	Displays the Server IP Address and Filename.

Download file from TFTP server

Command Name	tftp action get
Description	To download a specified file from the TFTP server.
Syntax	tftp action get
Parameters	None
Examples	N-TRON/Admin#[1]> tftp action get
NOTES	Check whether the server is up or not Check that the connection is established. Check if the file exists or not. Check the number of bytes downloaded

FTP Commands

Set Username

Command Name	ftp set username
Description	To set the user name which will be used to log into the FTP server
Syntax	ftp set username <Username>
Parameters	Username The user name for logging on to the FTP server
Example	<i>eg.1</i> N-TRON/Admin#[1]> ftp set username ntron <i>eg.2</i> N-TRON/Admin#[1]> ftp set username admin
Notes	The user name should be a valid one; else logging into FTP server will fail.

Set Password

Command Name	ftp set password
Description	To set the password for the above user name
Syntax	ftp set password
Parameters	Password Password for the above user required to log into the FTP server
Example	N-TRON/Admin#[1]> ftp set password Enter the password : *****
Notes	The password should be a valid one for the user; else logging into the FTP server will fail.

Set IP Address of FTP server

Command Name	ftp set serverip
Description	To set the IP address of the FTP server to be used for establishing the FTP connection for transfer of files/data
Syntax	ftp set serverip <Server-IP-address>
Parameters	Server-IP-address The IP address of the FTP server in decimal dotted notation for establishing a FTP connection
Example	<i>eg.1</i> N-TRON/Admin#[1]> ftp set serverip 10.1.1.100 <i>eg.2</i> N-TRON/Admin#[1]> ftp set serverip 15.1.1.150
Notes	The IP address of the FTP server should be a valid IP address (excluding Class D & Class E types). The IP address should also be a valid FTP server IP in order to ensure successful connection establishment.

Set Name of the Remote File

Command Name	ftp set remotefile
Description	To set the name of the remote file which has to be retrieved from the FTP server
Syntax	ftp set remotefile <Remote-file-name>
Parameters	Remote-file-name Name of the file to retrieved from the FTP server including the complete path
Example	<i>eg.1</i> N-TRON/Admin#[1]> ftp set remotefile Flash <i>eg.2</i> N-TRON/Admin#[1]> ftp set remotefile /usr/local/ftp/flash
Notes	The file name (including the complete path) should be a valid name else retrieval of the file would fail.

Display FTP related configuration parameters

Command Name	ftp show
Description	To display the present value of all the FTP related configuration parameters
Syntax	ftp show
Parameters	None
Example	N-TRON/Admin#[1]> ftp show
Notes	

Perform the configuration file transfer action

Command Name	ftp <get put> config
Description	To perform the desired File Transfer action (either get or put). Get retrieves a remote file from the FTP server and put stores a local file at the FTP server
Syntax	ftp get config ftp put config
Parameters	Action-command The desired File transfer action (either get or put)
Example	<i>eg.1</i> N-TRON/Admin#[1]> ftp get config <i>eg.2</i> N-TRON/Admin#[1]> ftp put config
Notes	The action name should be either get or put

Perform the image file transfer action

Command Name	ftp get image
Description	To perform the desired File Transfer action. Get retrieves a remote file from the FTP server
Syntax	ftp get image
Parameters	None
Example	N-TRON/Admin#[1]> ftp get image
Notes	Can only get an image from a server

Port Manager Commands

Get the link state of a given port

Command Name	port get linkstate
Description	This command is used to get the present link state of a given port. Whenever there is an active connection, link state (operational state) is up; else link state is down.
Syntax	port get linkstate <port-no>
Parameters	port-no Port number. (1 ~ 26).
Examples	N-TRON/Admin#[1]> port get linkstate 3 Link state of [3] port is: [down] N-TRON/Admin#[2]> port get linkstate 1 Link state of [1] port is: [up]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Get admin status of the port

Command Name	port get adminstatus
Description	This command is used to the get present adminstatus of a given port. Adminstatus is used to enable or disable the port operations even though there are active connections.
Syntax	port get adminstatus <port-no>
Parameters	port-no Port number. (1 ~ 26).
Examples	N-TRON/Admin#[1]> port get adminstatus 4 Admin state of [4] port is: [enable] N-TRON/Admin#[2]> port get adminstatus 9 Admin state of [9] port is: [disable]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Set admin status of a port

Command Name	port set adminstatus
Description	This command is used to set the adminstatus of a given port to enable or disable. If the adminstatus is disabled, the port cannot process the received packets.
Syntax	port set adminstatus <port-no><enable / disable>
Parameters	1. port-no Port number. (1 ~ 26). 2. adminstatus adminstatus is either enable or disable.
Examples	N-TRON/Admin#[1]> port set adminstatus 4 enable N-TRON/Admin#[2]> port set adminstatus 8 disable
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 24)

Show port statistics

Command Name	port show stats
Description	This command is used to get the port statistics of a given port for all available counters.
Syntax	port show stats <port-no>
Parameters	port-no Port number. (1 ~ 26).
Examples	N-TRON/Admin#[1]> port show stats 5 ----- COUNTER TYPE :[] ----- COUNTER NAME COUNTER VALUE ----- byteFrames 28072 64 byte Frames 272 64-127 byte Frames 24 128-255 byte Frames 43 256-511 byte Frames 43 512-1023 byte Frames 0 1024-1518 byte Frames 0 1519-1522 byte Frames 0
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Get total number of good frames received

Command Name	port get totalgoodframes
Description	Gets the total number of good frames received on the switch.
Syntax	port get totalgoodframes
Parameters	None
Examples	<i>eg.1</i> N-TRON/Admin#[1]> port get totalgoodframes Total no of good frames: [12456]
NOTES	

Get port speed

Command Name	port get speed
Description	Gets the port speed in megabits.
Syntax	port get speed <port-no>
Parameters	port-no Port number. (1 ~ 26).
Examples	N-TRON/Admin#[1]> port get speed 4 port speed of port no [4] is : [10] N-TRON/Admin#[2]> port get speed 5 port speed of port no [5] is : [100]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Set Port Speed

Command Name	port set speed
Description	Sets the port speed of a given port.
Syntax	port set speed <port-no><speed>
Parameters	port-no Port number. (1 ~ 26) speed Speed of the port. Speed must either 10, 100, 1000 megabits per sec.
Examples	N-TRON/Admin#[1]> port set speed 5 10 N-TRON/Admin#[2]> port set speed 9 100
NOTES	

Get the port duplex mode

Command Name	port get duplexmode
Description	Gets the port Duplex mode (FULL_DUPLEX / HALF_DUPLEX) for a given port number .
Syntax	port get duplexmode <port-no>

Parameters	port-no Port number. (1 ~ 26)
Examples	N-TRON/Admin#[1]> port get duplexmode 4 Duplex mode of [4] port is: [half] N-TRON/Admin#[2]> port get duplexmode 23 Duplex mode of [23] port is: [full]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Set the port duplex mode

Command Name	port set duplexmode
Description	Sets the port duplex mode (HALF_DUPLEX / FULL_DUPLEX) for a given port number.
Syntax	port set duplexmode <port-no> <full / half>
Parameters	port-no Port number. (1~24) full half Duplex mode of the port. Duplex mode must be either FULL_DUPLEX or HALF_DUPLEX.
Examples	N-TRON/Admin#[1]> port set duplexmode 4 full N-TRON/Admin#[2]> port set duplexmode 4 half
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 24)

Set the Lockstate of a given port

Command Name	port set lockstate
Description	Sets the lock state of a given port to either enable or disable. If the port lock is enabled, the switch can process the data packets only from locked MAC addresses. Other data packets will not be processed.
Syntax	port set lockstate <port-no> <enable / disable>
Parameters	port-no port number (1 ~ 26) enable disable Lock enable or disable
Examples	N-TRON/Admin#[1]> port set lockstate 5 disable N-TRON/Admin#[2]> port set lockstate 8 enable
NOTES	Once the port is locked, all the MACs that are learned on that port are treated as static MACs. This means the switch can process the packets from those MACs only. It will discard all packets from other MACs. Because the MAC is set for that port, it will only be addressable via that port.

Get Lock State

Command Name	port get lockstate
Description	Gets the lock state for a given port.
Syntax	port get lockstate <port-no>
Parameters	port-no port number (1 ~ 26).
Examples	N-TRON/Admin#[1]> port get lockstate 6 LockState : [enable] N-TRON/Admin#[2]> port get lockstate 24 LockState : [disable]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Get Auto-negotiation State

Command Name	port get autonego
Description	Gets the auto negotiation mode for a given port.
Syntax	port get autonego <port-no>
Parameters	port-no Port number (1 ~ 24).
Examples	N-TRON/Admin#[1]> port get autonego 6 Auto negotiation mode is : [enabled] N-TRON/Admin#[2]> port get autonego 24

	Auto negotiation mode is : [disabled]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 24)

Set Auto-negotiation State

Command Name	port set autonego
Description	Sets the auto negotiation mode of a given port to either enable or disable. If the port auto negotiation mode is enabled, the switch can automatically adjust its speed and duplex mode to the incoming speed and duplex mode.
Syntax	port set autonego <port-no><enable / disable>
Parameters	port-no port number (1 ~ 24) enable disable Auto negotiation enable or disable
Examples	N-TRON/Admin#[1]> port set autonego 6 enable Auto negotiation mode of port[6] is : [enabled] N-TRON/Admin#[2]> port set autonego 24 disable Auto negotiation mode of port[6] is : [disabled]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 24)

Set Priority State

Command Name	port set prioritystate
Description	Enables or Disables the Priority State on a per port basis.
Syntax	port set prioritystate <enable / disable><port-no>
Parameters	port-no port number (1 ~ 26) enable disable Priority State enable or disable
Examples	N-TRON/Admin#[1]> port set prioritystate enable 6
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Set Flow Control

Command Name	port set flowcontrol
Description	Enable or Disable flow control (typically refers to 100Base). When enabled a pause frame will be sent to help control the flow.
Syntax	port set flowcontrol <port-no><enable / disable>
Parameters	port-no port number (1 ~ 24) enable disable Flow Control enable or disable
Examples	N-TRON/Admin#[1]> port set flowcontrol 6 enable
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 24)

Set Name

Command Name	port set name
Description	Changes the name of the port. This change will only be visible in the CLI.
Syntax	port set name <port-no><name>
Parameters	port-no port number (1 ~ 26) name A string that describes the port
Examples	N-TRON/Admin#[1]> port set name 6 waterplant
NOTES	This will be reset if you change a slot configuration.

Set PVID

Command Name	port set pvid
Description	Set a port's VLAN-ID.
Syntax	port set pvid <port-no><pvid-number>
Parameters	port-no port number (1 ~ 26) pvid-number The VLAN-ID number of the VLAN that this port will be a member of
Examples	N-TRON/Admin#[1]> port set pvid 6 2

NOTES	A port can be a member to several VLANs, but can only have one PVID
-------	---

Set Backpressure

Command Name	port set backpressure
Description	Enables or disables backpressure on a given port. This is normally used on 10Base setups and is controlled by the hardware.
Syntax	port set backpressure <port-no><enable / disable>
Parameters	port-no port number (1 ~ 24) enable disable Backpressure enable or disable
Examples	N-TRON/Admin#[1]> port set backpressure 6 enable
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 24)

Set Intruderstate

Command Name	port set intruderstate
Description	Enables or Disables the intruder log.
Syntax	port set intruderstate <enable / disable>
Parameters	enable disable Enable or disable the intruder log
Examples	N-TRON/Admin#[1]> port set intruderstate enable
NOTES	This must be enabled for the intruder log to log anything.

Set Priority Level

Command Name	port set prioritylevel
Description	Sets the priority level of a given port.
Syntax	port set prioritylevel <port-no><level>
Parameters	port-no port number (1 ~ 26) level priority level (0 ~ 7)
Examples	N-TRON/Admin#[1]> port set prioritylevel 6 7
NOTES	Priority State should be enabled to use this feature.

Show Configuration

Command Name	port show config
Description	Displays basic configuration settings on given ports.
Syntax	port show config <port-no / all>
Parameters	port-no all port number (1 ~ 26), you may enter all to see all the ports at once.
Examples	N-TRON/Admin#[1]> port show config all
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Show Intruders

Command Name	port show intruder
Description	Displays a list of MAC addresses that were not allowed on the network.
Syntax	port show intruder
Parameters	None
Examples	N-TRON/Admin#[1]> port show intruder
NOTES	Intruder log must be enabled before this will log anything.

Show Link Utilization

Command Name	port show linkutilization
Description	Shows the utilization statistics for all the ports including %bandwidth, %in, %out, RX bytes, and TX bytes for each port.
Syntax	port show linkutilization
Parameters	None
Examples	N-TRON/Admin#[1]> port show linkutilization
NOTES	%Bandwidth is the %in or %out value that is higher, not the average value.

Get Flow Control

Command Name	port get flowcontrol
Description	Displays the current flow control settings on a given port.
Syntax	port get flowcontrol <port-no>
Parameters	port-no port number (1 ~ 24)
Examples	N-TRON/Admin#[1]> port get flowcontrol 6
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 24)

Get Name

Command Name	port get name
Description	Displays the name of a given port.
Syntax	port get name <port-no>
Parameters	port-no port number (1 ~ 26)
Examples	N-TRON/Admin#[1]> port get name 6
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Get State Of Priority

Command Name	port get stateofpriority
Description	Displays the priority state of a given port number.
Syntax	port get stateofpriority <port-no>
Parameters	port-no port number (1 ~ 26)
Examples	N-TRON/Admin#[1]> port get stateofpriority 6 Priority State of Port[6] is : [disabled]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Get Intruder State

Command Name	port get intruderstate
Description	Displays whether the intruder log is enabled or disabled.
Syntax	port get intruderstate
Parameters	None
Examples	N-TRON/Admin#[1]> port get intruderstate Intruder Log : Disabled
NOTES	

Get Priority Level

Command Name	port get prioritylevel
Description	Displays the priority level on a given port.
Syntax	port get prioritylevel <port-no>
Parameters	port-no port number (1 ~ 26)
Examples	N-TRON/Admin#[1]> port get prioritylevel 6 Priority Level of Port[6] is : [1]
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Get STP Status

Command Name	port get STP Status
Description	Displays the Spanning Tree Protocol Status on a given port.
Syntax	port get stpstatus <port-no>
Parameters	port-no port number (1 ~ 26)
Examples	N-TRON/Admin#[1]> port get stpstatus 6 Stp state of [6] port is : [Forward]
NOTES	STP states include: Listening, Learning, Blocking, & Forwarding

Get Back Pressure

Command Name	port get backpressure
--------------	------------------------------

Description	Displays the backpressure information on a given port number (enabled or disabled).
Syntax	port get backpressure <port-no>
Parameters	port-no port number (1 ~ 24)
Examples	N-TRON/Admin#[1]> port get backpressure 6 Back Pressure is DISABLED
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 24)

Get PVID

Command Name	port get pvid
Description	Displays a given port's VLAN-ID.
Syntax	port get pvid <port-no>
Parameters	port-no port number (1 ~ 26)
Examples	N-TRON/Admin#[1]> port get pvid 6 PVID of port 6 is 4.
NOTES	Check whether <i>port-no</i> is in the valid range. (1 ~ 26)

Clear Counters

Command Name	port clear counters
Description	Clears all the numbers in the counters for a given port. These are counters for RX bytes and TX bytes and so on.
Syntax	port clear counters <port-no>
Parameters	port-no port number (1 ~ 24)
Examples	N-TRON/Admin#[1]> port clear counters 6 Counters of Port[6] are : [cleared]
NOTES	This will clear all data in the port specific counters. This data cannot be recovered after this step.

Clear Intruder Log

Command Name	port clear intruderlog
Description	This command will clear all intruders out of the intruder log.
Syntax	port clear intruderlog
Parameters	None
Examples	N-TRON/Admin#[1]> port clear intruderlog
NOTES	This will clear all data from the intruder log. This data can not be recovered after this step.

Trunk related commands

Enable or Disable Trunking

Command Name	trunk set <enable disable> <trunk-id>
Description	To enable or disable the trunk that is already created.
Syntax	trunk set enable <trunk-id> trunk set disable <trunk-id>
Parameters	trunk-id Unique number given to a trunk for recognition.
Examples	N-TRON/Admin#[1]> trunk set enable 5 Trunk with Id [5] has been activated. N-TRON/Admin#[1]> trunk set disable 5 Trunk with Id [5] has been deactivated.
NOTES	RSTP must be disabled in order to use Trunking. All trunk ports must be at the same speed and duplex mode. It is best to hard code speed and duplex mode for each trunking link, at both ends.

Modify Trunk

Command Name	trunk modify
Description	To add new required ports to the trunk in order to withstand high traffic.
Syntax	trunk modify <trunk-id> <trunk-name> <port-list>
Parameters	trunk-id Unique number given to a trunk for recognition. trunk-name Name given to a trunk port-list Port numbers to be in the trunk.
Examples	N-TRON/Admin#[1]> trunk modify 1 trunk1 1-4
NOTES	Maximum number of 4 ports can be in a trunk. All trunk ports must be at the same speed and duplex mode. If a port is not linked, there could be difficulty as to similar speed and duplex mode. It is best to hard code speed and duplex mode for each trunking link, at both ends.

Create Trunk

Command Name	trunk create
Description	To create a trunk we use this command. In order to get more bandwidth to withstand high traffic onto ports we create trunks.
Syntax	trunk create <port-list> <trunk-type> [-id <trunk-id>] [-name <trunk-name>]
Parameters	trunk-id ID is unique number given to a trunk for recognition. trunk-name. Name given to a trunk port-list Port numbers to be added to the trunk.
Examples	N-TRON/Admin#[1]> trunk create 4-7 -name trunk1 -id 5
NOTES	RSTP must be disabled in order to use Trunking. Only 1 trunk can be created per switch. Maximum number of 4 ports can be in a trunk. All trunk ports must be at the same speed and duplex mode. If a port is not linked, there could be difficulty as to similar speed and duplex mode. It is best to hard code speed and duplex mode for each trunking link, at both ends.

Delete Trunk

Command Name	trunk delete
Description	To delete the trunk .
Syntax	trunk delete <trunk-id>
Parameters	trunk-id Unique number given to a trunk for recognition.
Examples	N-TRON/Admin#[1]> trunk delete 5 Trunk with Id [5] has been deleted.
NOTES	

Show Trunk Information

Command Name	trunk show
Description	To show all the trunks information.
Syntax	trunk show
Parameters	None
Examples	N-TRON/Admin#[1]> trunk show ----- TRUNK ID TRUNK NAME TRUNK PORTS TRUNK STATE ----- 5 trunk1 2-4 DISABLE -----
NOTES	

Mirroring related commands

Set Mirror config

Command Name	mirror set config
Description	To the mirroring feature of the switch, for specified ports.
Syntax	mirror set config <dest-port> <src-ports>
Parameters	dest-port Destination port is the snoop port onto which the selected source ports traffic is to be mirrored. The gigabit ports cannot be destination ports. src-ports List of ports to be monitored.
Examples	N-TRON/Admin#[1]> mirror set config 1 2-5
NOTES	A mirroring port is a dedicated port that is configured to receive the copies of Ethernet frames that are being transmitted out and also being received in from any other port that is being monitored.

Enable or Disable Port Mirroring

Command Name	mirror set <enable disable>
Description	Enables or disables network monitoring or port mirroring. It treats source port as the Ethernet port and the destination port as a monitoring port.
Syntax	mirror set enable
Parameters	None
Examples	N-TRON/Admin#[1]> mirror set enable mirror enabled N-TRON/Admin#[1]> mirror set disable mirror disabled
NOTES	

Show Mirror config

Command Name	mirror show
Description	To show all the mirror information.
Syntax	mirror show
Parameters	None
Examples	N-TRON/Admin#[1]> mirror show ----- DEST PORT SOURCE PORTS MIRROR STATE ----- 5 2-4 ENABLED -----
NOTES	

VLAN Related Commands

Add VLAN Entry

Command Name	vlan add
Description	To create a Port based Virtual LAN
Syntax	vlan add <vlan id> <mgmt port> [-name <vlan name>] [-untagged <port mask>] [-tagged <port mask>] [-admit <tagged-only/all>] [-mirror <port-no>]
Parameters	<p>vlan-id Unique vlan id (2 ~ 4094).</p> <p>mgmt port Either 1 or 0. '1' sets this vlan as management vlan.</p> <p>-name Unique vlan name, which can be used to identify the group. The name may include characters and numbers, but should start with an alphabetic. Maximum number of characters must not exceed 25.</p> <p>-untagged port-list List of ports that are to be included under this VLAN. Commas can be used to separate individual ports (2,5,9) and the range can be specified using a hyphen (10-15). The port numbers cannot exceed the maximum number of ports on the board.</p> <p>-tagged port-list Optional parameters. Tagged port list values can be specified in the similar way as that of <port-list>.</p> <p>-admit Allow tagged-only or all (untagged and tagged) packets.</p> <p>-mirror Optional parameter. Port number that data should be mirrored to.</p>
Examples	<pre>N-TRON/Admin#[1]> vlan add 2 1 -name vlan2 -untagged 1-12 -admit all N-TRON/Admin#[2]> vlan add 3 1 -name "vlan 3" -tagged 13-24 -admit tagged-only</pre>
NOTES	Ensure that the ports included in the tagged port list do not exist in the untagged ports-list field. Changing anything on a VLAN will turn on RSTP on all VLANs as a precautionary measure.

Show List of Configured VLANs

Command Name	vlan show config
Description	Displays the list of configured VLANs
Syntax	vlan show config
Parameters	None
Examples	N-TRON/Admin#[1]> vlan show config
NOTES	It displays the information of the default vlan if no vlan is configured.

Display Information of a particular VLAN

Command Name	vlan get info
Description	Displays the details of a particular VLAN.
Syntax	vlan get info <vlan-id>
Parameters	<p>vlan-id Vlan id of the existing vlan whose individual configuration is required.</p>
Examples	<pre>N-TRON/Admin#[1]> vlan get info 2 vlan ID : 2 vlan Name : "vlan 2" port list : 1-4,11 tagged port mask: 10-15 management port : NO</pre>
NOTES	

Modify an existing VLAN

Command Name	vlan modify
Description	Modifies an existing VLAN.
Syntax	vlan modify <vlan id> <mgmt port> [-name <vlan name>] [-untagged <port mask>] [-tagged <port mask>] [-admit <tagged-only all>] [-mirror <port-no>]
Parameters	<p>vlan-id unique vlan id (2 ~ 4094).</p> <p>mgmt port Management Port, yes or no (1 or 0).</p> <p>vlan name unique clan name, which can be used to identify.</p> <p>port mask List of ports that are to be included under this VLAN. Commas can be used to separate individual ports (2,5,9) and the range can be specified using a hyphen (10-15). The port numbers cannot exceed the maximum number of port on the board.</p> <p>admit tagged-only or all. Type of packets can enter the port.</p> <p>tagged port-list Optional parameters. Tagged port list values can be specified in the similar way as that of <port-list>.</p>
Examples	<pre>N-TRON/Admin#[1]> vlan modify 2 1 -name "newvlan2" - tagged 11-12</pre> <pre>N-TRON/Admin#[2]> vlan modify 3 1 -name "vlan 3" - untagged 1-10 -admit all</pre>
NOTES	Changing anything on a VLAN will turn on RSTP on all VLANS as a precautionary measure.

Delete VLAN

Command Name	vlan delete
Description	Removes an existing VLAN from the list of configured VLANs.
Syntax	vlan delete <vlan-id>
Parameters	<p>vlan-id Vlan id of the existing vlan which has to be deleted</p>
Examples	<pre>N-TRON/Admin#[1]> vlan delete 2</pre>
NOTES	Please ensure that a port based vlan with the given vlan id exists. Changing anything on a VLAN will turn on RSTP on all VLANS as a precautionary measure.

Set VLAN as management VLAN

Command Name	vlan set mgmtvlan
Description	Sets a Vlan as a management vlan. User can connect and monitor the device activity from this VLAN.
Syntax	vlan set mgmtvlan <vlan-id>
Parameters	<p>vlan-id Vlan id of the vlan, which has to be set as management vlan.</p>
Examples	<pre>N-TRON/Admin#[1]> vlan set mgmtvlan 2</pre>
NOTES	Please ensure that the vlan with that vlan id already exists. Changing anything on a VLAN will turn on RSTP on all VLANS as a precautionary measure.

Set VLAN to defaults

Command Name	vlan set default
Description	Removes all the configured vlans and add all the ports under the Default vlan.
Syntax	vlan set default
Parameters	None
Examples	N-TRON/Admin#[1]> vlan set default
NOTES	Changing anything on a VLAN will turn on RSTP on all VLANS as a precautionary measure.

Set VLAN Ingress Filter

Command Name	vlan set ingressfilter
Description	Enables or Disables an inbound filter on specified ports that will throw out any packet with the wrong VID in the VLAN tag on the packet.
Syntax	vlan set ingressfilter <enable disable> <port-list all>
Parameters	enable disable Enable or Disable the filter on the a specified port. port-list all Enter a specific port number list or specify all ports
Examples	N-TRON/Admin#[1]> vlan set ingressfilter enable 1-6 N-TRON/Admin#[2]> vlan set ingressfilter enable all
NOTES	The ingressfilter will automatically be turned on for tagged ports.

Get VLAN Ingress Filter

Command Name	vlan get ingressfilter
Description	Gets inbound filter info on specified ports.
Syntax	vlan get ingressfilter <all port-list>
Parameters	all port-list Enter a specific port number list or specify all ports
Examples	N-TRON/Admin#[1]> vlan get ingressfilter 1-6
NOTES	

Get VLAN info

Command Name	vlan get info
Description	Displays the current state of the configured vlans.
Syntax	vlan get info <vlanid>
Parameters	vlanid Enter a specific Vlan ID
Examples	N-TRON/Admin#[1]> vlan get info 1
NOTES	

Eventlog Related Commands

Get Eventlog count

Command Name	eventlog get count
Description	To display the logged events count
Syntax	eventlog get count
Parameters	None
Examples	N-TRON/Admin#[1]> eventlog get count No. of events logged : 14
NOTES	

Get Eventlog level

Command Name	eventlog get loglevel
Description	To display the present log level
Syntax	eventlog get loglevel
Parameters	None
Examples	N-TRON/Admin#[1]> eventlog get loglevel Present log Level: 1
NOTES	There are 5 levels or categories that events are classified as. Level 1 will log all 5 types into the event log. Level 5 will log on the highest level “Critical” in the event log. The log levels in order from least severe to most critical are: Informational, Warning, Minor, Severe, & Critical.

Get Eventlog size

Command Name	eventlog get logsize
Description	To display the present log size
Syntax	eventlog get logsize
Parameters	None
Examples	N-TRON/Admin#[1]> eventlog get logsize Present Log Size: 100
NOTES	

Set Eventlog level

Command Name	eventlog set loglevel
Description	To set the log-level to a specified value for filter out the raised events.
Syntax	eventlog set loglevel <level>
Parameters	level The log level. The value is ranging from 1-5
Examples	N-TRON/Admin#[1]> eventlog set loglevel 3 N-TRON/Admin#[2]> eventlog set loglevel 1 N-TRON/Admin#[3]> eventlog set loglevel 2
NOTES	There are 5 levels or categories that events are classified as. Level 1 will log all 5 types into the event log. Level 5 will log on the highest level “Critical” in the event log. The log levels in order from least severe to most critical are: Informational, Warning, Minor, Severe, & Critical.

Set Eventlog size

Command Name	eventlog set logsize
Description	To set the maximum number of events to be stored in the list.
Syntax	eventlog set logsize <size>
Parameters	size The log size. Maximum number of events that can be stored.
Examples	N-TRON/Admin#[1]> eventlog set logsize 100 N-TRON/Admin#[2]> eventlog set logsize 20
NOTES	

Show Eventlog events

Command Name	eventlog show events
Description	To display the logged events
Syntax	eventlog show events
Parameters	None
Examples	N-TRON/Admin#[1]> eventlog show events
NOTES	

Bridging Related Commands

Add Multicast MAC Address

Command Name	bridge add multicastmac
Description	Adds a multicast mac address which is associated with a vlan.
Syntax	bridge add multicastmac <mac-address> <port-list>
Parameters	mac-address Multicast group address to be added to the bridge port-list Port numbers to which the multicast group is associated
Examples	N-TRON/Admin#[1]>bridge add multicastmac 01:00:5e:03:01:18 4
NOTES	If there are multiple ports on different VLANs, the 9000 will apply the static broadcast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. So if the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.

Delete Multicast MAC Address

Command Name	bridge delete multicastmac
Description	Removes an existing multicast mac address.
Syntax	bridge delete multicastmac <mac-address>
Parameters	mac-address Multicast group address to be removed to the bridge
Examples	N-TRON/Admin#[1]> bridge delete multicastmac 01:00:5e:03:01:18
NOTES	

Add a Unicast MAC Address

Command Name	bridge add unicastmac
Description	Adds a unicast mac address.
Syntax	bridge add unicastmac <mac address> <port number> [-cpubit <0 1>] [-mirror <disable enable>]
Parameters	mac-address Unique unicast mac address. port number port number on which this mac is learned. The port number must range between 1 and maximum port numbers in switch. cpubit if this bit is set the packet is sent to one of the CPU priority queue.
Examples	N-TRON/Admin#[1]> bridge add unicastmac 00-a0-ae-60-3a-70 3 N-TRON/Admin#[2]> bridge add unicastmac 00-10-a1-33-49-b5 6
NOTES	

Delete Unicast MAC Address

Command Name	bridge delete unicastmac
Description	Delete an existing unicast mac address.
Syntax	bridge delete unicastmac <mac-address>
Parameters	mac-address Unique unicast mac address.
Examples	N-TRON/Admin#[1]> bridge delete unicastmac 00-a0-ae-60-3a-70
NOTES	

Display List of Configured Static MAC Addresses

Command Name	bridge show staticmac
Description	To view the list of configure static mac addresses
Syntax	bridge show staticmac <all multicast unicast>
Parameters	<all multicast unicast> which set of static mac addresses to show
Examples	N-TRON/Admin#[1]> bridge show staticmac all N-TRON/Admin#[2]> bridge show staticmac multicast N-TRON/Admin#[3]> bridge show staticmac unicast
NOTES	

Set Aging Time

Command Name	bridge set agingtime
Description	Sets the aging time for dynamically learned MAC addresses of the chipset.
Syntax	bridge set agingtime <aging-time>
Parameters	aging-time aging time to be set for stp. Minimum aging time can be 5 seconds. Default aging time is 20 seconds. Maximum aging time is 1000000 seconds.
Examples	N-TRON/Admin#[1]> bridge set agingtime 200
NOTES	

Display Current Aging Time

Command Name	bridge show agingtime
Description	Displays the current aging time.
Syntax	bridge show agingtime
Parameters	None
Examples	N-TRON/Admin#[1]> bridge show agingtime
NOTES	

Display Mac Address by port

Command Name	bridge show machyport
Description	Displays all the mac address which are associated with the given port.
Syntax	bridge show machyport <port-number>
Parameters	port-number The port number must range between 1 and maximum port numbers in the switch.
Examples	N-TRON/Admin#[1]> bridge show machyport 6
NOTES	

Display port by Mac Address

Command Name	bridge show portbymac
Description	Display the port number to which the mac is associated.
Syntax	bridge show portbymac <mac-address>
Parameters	mac-address Unique unicast mac address.
Examples	N-TRON/Admin#[1]> bridge show portbymac 00-a0-ae-60-3a-70
NOTES	

Display Mac count

Command Name	bridge show maccount
Description	Displays the total count of the static mac addresses.
Syntax	bridge show maccount
Parameters	None
Examples	N-TRON/Admin#[1]> bridge show maccount
NOTES	

IGMP Related Commands

Enable IGMP

Command Name	igmp set enable
Description	The igmp status is made to enable .
Syntax	igmp set enable
Parameters	None
Examples	N-TRON/Admin#[1]> igmp set enable igmp status is Enabled N-TRON/Admin#[2]> igmp show config Igmp : Enabled Query Mode : auto Router Mode : auto Router Ports (Manual) :
NOTES	The status can be viewed through the igmp show config command

Disable IGMP

Command Name	igmp set disable
Description	The igmp status is made to disable
Syntax	igmp set disable
Parameters	None
Examples	N-TRON/Admin#[1]> igmp set disable igmp status is Disabled N-TRON/Admin#[2]> igmp show config Igmp : Disabled Querier : Enabled Query Mode : auto Router Mode : auto Router Ports (Manual) :
NOTES	The status can be viewed through the igmp show config command

Show IGMP config

Command Name	igmp show config
Description	The igmp configuration is displayed
Syntax	igmp show config
Parameters	None
Examples	N-TRON/Admin#[1]> igmp show config Igmp : Disabled Querier : Enabled Query Mode : auto Router Mode : auto Router Ports (Manual) :
NOTES	This command is used to see the config previously set by the user

Show IGMP group

Command Name	igmp show group
Description	The igmp show group command is used to display the groups present in the group list
Syntax	igmp show group
Parameters	None
Examples	N-TRON/Admin#[1]> igmp show group GroupIp PortNo VlanID ----- 224.0.0.2 6 1 224.0.1.24 6 1
NOTES	The group display is used to check that the group ip, port no & vlan id were received correctly.

Show IGMP router

Command Name	igmp show router
Description	The igmp show router command is used to display the auto-detected routers at present.
Syntax	igmp show router
Parameters	None
Examples	N-TRON/Admin#[1]> igmp show router RouterIp PortNo ----- 192.168.1.150 5
NOTES	The router display is used to check that the router ip & port number was received correctly.

Set IGMP query mode

Command Name	igmp set qmode
Description	Set the query mode of the switch to either on, off, or automatic.
Syntax	igmp set qmode <off on auto>
Parameters	off on auto There are three different query modes; off, on, and auto.
Examples	N-TRON/Admin#[1]> igmp set qmode auto
NOTES	Default: Auto

Set IGMP router port

Command Name	igmp set rtrport
Description	Enable or disable a router port based on a port-range.
Syntax	igmp set rtrport <port-range> <enable disable>
Parameters	port-range enter a range of port numbers. enable disable enable or disable the router port.
Examples	N-TRON/Admin#[1]> igmp set rtrport 1-4 enable
NOTES	

Set IGMP router mode

Command Name	igmp set rtrmode
Description	The igmp show router command is used to display the router group present in the group list
Syntax	igmp set rtrmode <none manual auto>
Parameters	none manual auto There are three different router modes available; none, manual, and auto.
Examples	N-TRON/Admin#[1]> igmp set rtrmode auto
NOTES	Default: Auto

Show IGMP rfilter mode

Command Name	igmp show rfilter
Description	The igmp show rfilter command is used to display the rfilter status by port(s).
Syntax	Usage: igmp show rfilter <all port-list>
Parameters	port-list all Enter a specific port number list or specify all ports
Examples	<pre>N-TRON/Admin#[22]> Igmp show rfilter all N-TRON/Admin#[22]igmp/show> igmp show rfilter 5 Port No. IGMP RFilter ----- 5 DISABLE N-TRON/Admin#[6]igmp/show> igmp show rfilter 5-7 Port No. IGMP RFilter ----- 5 DISABLE 6 DISABLE 7 DISABLE N-TRON/Admin#[7]igmp/show></pre>
NOTES	Default: disable

Set IGMP rfilter mode

Command Name	igmp set rfilter
Description	The igmp set rfilter command is used to enable or disable rfilter based on a port-range.
Syntax	Usage: igmp set rfilter <enable disable> <port-list all>
Parameters	enable disable Enable or Disable the filter on the a specified port. port-list all Enter a specific port number list or specify all ports
Examples	<pre>N-TRON/Admin#[35]igmp/set> igmp set rfilter enable 5 IGMP RFilter enabled for port 5. N-TRON/Admin#[36]igmp/set></pre>
NOTES	Default: disable

N-Ring Related Commands

N-Ring get agingtime

Command Name	n-ring get agingtime
Description	To display the N-Ring Agingtime of the device
Syntax	n-ring get agingtime
Parameters	None
Example	N-TRON/Admin#[1]> n-ring get agingtime N-Ring Aging Time : 20
NOTES	Default: 20 seconds and is separate from the Bridging Aging Time. N-Ring Aging time is used for the whole switch if the switch is an N-Ring Manager or becomes an active N-Ring Member.

N-Ring set agingtime

Command Name	n-ring set agingtime
Description	Sets the aging time for dynamically learned MAC addresses of the chipset when in N-Ring Manager or Active N-Ring Member modes.
Syntax	n-ring set agingtime <aging-time>
Parameters	aging-time aging time to be set for N-Ring. Minimum N-Ring agingtime can be 5 seconds. Default N-Ring aging time is 20 seconds. Maximum aging time is 1000000 seconds.
Examples	N-TRON/Admin#[1]> n-ring set agingtime 200
NOTES	Is separate from the Bridging Aging Time. N-Ring Aging time is used for the whole switch if the switch is an N-Ring Manager or becomes an active N-Ring Member.

N-Ring get webfault

Command Name	n-ring get webfault
Description	To display the browser N-Ring fault reporting mode.
Syntax	n-ring get webfault
Parameters	None
Example	N-TRON/Admin#[1]> n-ring get webfault N-Ring faults will be shown on N-Ring Web Pages only
NOTES	

N-Ring set webfault

Command Name	n-ring set webfault
Description	Sets the browser N-Ring fault reporting mode.
Syntax	n-ring set webfault <ring/all>
Parameters	<i>Ring or all</i>
Examples	N-TRON/Admin#[1]> n-ring set webfault all N-Ring faults will be shown on All Web Pages
NOTES	

N-Ring get interval

Command Name	n-ring get interval
Description	To display the Self-Health Packet interval and missed threshold.
Syntax	n-ring get interval
Parameters	None
Example	N-TRON/Admin#[1]> n-ring get interval Self Health Packet interval is 1 Maximum Missed Packets is 2
NOTES	Default: interval=1, missed=2

N-Ring set interval

Command Name	n-ring set interval
Description	Sets the Self-Health Packet interval and missed threshold.
Syntax	n-ring set interval <interval> [missed]
Parameters	interval and missed
Examples	N-TRON/Admin#[36]n-ring/set> n-ring set interval 1 3 Self Health Packet interval set to 1 Maximum Missed Packets set to 3
NOTES	The interval is in 10 millisecond increments. The missed threshold sets how many missed Self-Health Packets constitute a fault.

N-Ring get mode

Command Name	n-ring get mode
Description	To display the current N-Ring Mode.
Syntax	n-ring get mode
Parameters	None
Example	N-TRON/Admin#[1]> n-ring get mode N-Ring Mode : AutoMember
NOTES	

N-Ring set mode

Command Name	n-ring set mode
Description	Sets the current N-Ring Mode, and ring ports if manager mode.
Syntax	n-ring set mode <manager/automember/disable> [-rp <A/E>]
Parameters	mode, and if mode=manager then -rp (ring ports)
Examples	N-Ring Mode set to automember Device is Going for Reboot.... N-TRON/Admin#[3]> n-ring set mode manager -rp A N-Ring Mode set to manager Port Set to be used is Slot A Device is Going for Reboot....
NOTES	NOTE: N-Ring Manager cannot have RSTP or Trunking enabled.

N-Ring show status

Command Name	n-ring show status
Description	Shows the current N-Ring status of the switch. If Manager, shows ring members. Shows if Automember or active member. If active (manager or member) shows N-Ring ports.
Syntax	n-ring show status
Parameters	None
Examples	<pre> On an N-Ring Manager: N-TRON/Admin#[1]> n-ring show status Switch is in N-Ring Manager Mode N-Ring OK Port 1 Port 2 ===== 1 2 No: MAC Address IP Address Subnet Mask Port 1 Port 2 ===== 1 00:07:af:ff:f6:40 192.168.1.233 255.255.255.0 1 2 ----- On an N-Ring Active Member: N-TRON/Admin#[1]> n-ring show status Switch is a N-Ring Member N-Ring Manager is 00:07:af:ff:f6:c0 Port 1 Port 2 ===== 1 2 ----- On an N-Ring AutoMember (not active): N-TRON/Admin#[2]n-ring/show> n-ring show status Switch is in Auto Member Detection Mode </pre>
NOTES	

N-Ring show switch

Command Name	n-ring show switch
Description	From the N-Ring Manager, shows info about a switch on the N-Ring.
Syntax	n-ring show switch <MAC ADDRESS>
Parameters	<MAC ADDRESS>
Examples	<pre> N-TRON/Admin#[12]n-ring/show> switch 00:07:af:ff:f6:40 Information for 00:07:af:ff:f6:40 Name : N-TRON Switch Location : Mobile, AL 36609 Product Name : N-TRON 9000 Series Product Version : 3.2.7t IP Address : 192.168.1.233 Subnet Mask : 255.255.255.0 N-Ring Port 1 : 1 N-Ring Port 2 : 2 N-TRON/Admin#[13]n-ring/show> </pre>
NOTES	

Configuration Related Commands

Save Configuration

Command Name	config save
Description	The configuration will be saved to the flash.
Syntax	config save
Parameters	None
Examples	N-TRON/Admin#[1]> config save
NOTES	

Load Default Configuration

Command Name	config erase
Description	This command is useful to erase the configuration data
Syntax	config erase
Parameters	None
Examples	N-TRON/Admin#[1]> config erase Load Factory Default Setting. [y/n]y Factory Default Configuration Successfully loaded Restart the switch to effect this change
NOTES	This command will reset all configurable fields back to the default settings that the switch shipped with. This will change the IP address back to 192.168.1.201 and will change the slot configurations of the 9000 to all 9006TX modules and no gigabit fiber ports.

Configuration Upload

Command Name	config send
Description	The configuration on the flash is grouped into a file and sent to the tftp server.
Syntax	config send <Server-IpAddress> <File-Name>
Parameters	Server-IpAddress IP Address of the TFTP Server, to where the switch configuration data will be uploaded. File-Name Name of the file to be saved as.
Examples	N-TRON/Admin#[1]> config send 10.1.6.151 config
NOTES	The ip address should be the valid tftp server ip address ,and the target tftp server should be running.

Configuration Download

Command Name	config receive
Description	The file name mentioned will be downloaded from the server and the same configuration is overwritten to the flash.
Syntax	config receive <Server-IpAddress> <File-Name>
Parameters	Server-IpAddress IP Address of the TFTP server, from where the configuration data to be retrieved. File-Name Name of the file to be retrieved.
Examples	N-TRON/Admin#[1]> config receive 10.1.6.151 config
NOTES	The ip address should be the valid tftp server ip address, and the target tftp server should be running.

Rapid Spanning Tree Protocol Related Commands

Set RSTP Admin Edge

Command Name	rstp set adminedge
Description	Sets the Adminedge value of a port in a Vlan.
Syntax	rstp set adminedge <vlan id> <port no> <status>
Parameters	vlan id Vlan Id containing the port for which the adminedge is to be set. port no Port number in the Vlan to be set. status Status of the adminedge of the port to be set. Values of “enable” and “disable” are valid
Examples	N-TRON/Admin#[1]> rstp set adminedge 1 1 disable N-TRON/Admin#[2]> rstp set adminedge 2 2 enable
NOTES	

Get RSTP Admin Edge

Command Name	rstp get adminedge
Description	Gets the Adminedge value of the given port in the given Vlan-Id.
Syntax	rstp get adminedge <vlan id> <port>
Parameters	vlan id Vlan Id containing the port for which the adminedge is to be viewed . port Port for which the adminedge value is to be viewed .
Examples	N-TRON/Admin#[1]> rstp get adminedge 1 1 N-TRON/Admin#[2]> rstp get adminedge 2 2
NOTES	

Set RSTP Auto Edge

Command Name	rstp set autoedge
Description	Sets the Autoedge value of a port in a Vlan.
Syntax	rstp set autoedge <vlan id> <port-no> <status>
Parameters	vlan id Vlan Id containing the port for which the autoedge is to be set. port-no Port number in the Vlan to be set. status Status of the autoedge of the port to be set. Values of “enable” and “disable” are valid
Examples	N-TRON/Admin#[1]> rstp set autoedge 1 1 disable N-TRON/Admin#[2]> rstp set autoedge 2 2 enable
NOTES	

Get RSTP Auto Edge

Command Name	rstp get autoedge
Description	Gets the Autoedge value of the given port in the given Vlan-Id.
Syntax	rstp get autoedge <vlan id > <port>
Parameters	vlan id Vlan Id containing the port for which the autoedge is to be viewed . port Port for which the autoedge value is to be viewed .
Examples	N-TRON/Admin#[1]> rstp get autoedge 1 1 N-TRON/Admin#[2]> rstp get autoedge 2 2
NOTES	

Set RSTP Bridge Admin Status

Command Name	rstp set bridgeadminstatus
Description	Sets the Bridge Admin Status of the given Vlan-ID.
Syntax	rstp set bridgeadminstatus <vlan id > <bridge adminstatus >
Parameters	vlan id Vlan Id for which the priority to be set. bridge adminstatus Status of the Bridge to be set. Values of “fast”, “forcestp” and “disable” are valid
Examples	N-TRON/Admin#[1]> rstp set bridgeadminstatus 1 disable N-TRON/Admin#[2]> rstp set bridgeadminstatus 2 fast
NOTES	

Get RSTP Bridge Admin Status

Command Name	rstp get bridgeadminstatus
Description	Gets the Bridge Admin Status of the given Vlan-Id.
Syntax	rstp get bridgeadminstatus <vlan-id >
Parameters	vlan-id Vlan Id for which the admin status is to be viewed .
Examples	N-TRON/Admin#[1]> rstp get bridgeadminstatus 1 N-TRON/Admin#[2]> rstp get bridgeadminstatus 2
NOTES	

Set RSTP Bridge Forward Delay

Command Name	rstp set bridgeforwarddelay
Description	To set the forward delay time for a given Vlan-Id. Forward Delay in STP is the time a switch waits after connecting to a root bridge, before he changes the port state to forwarding from the listening and learning states. RSTP only uses this as a backup feature for legacy STP device support.
Syntax	rstp set bridgeforwarddelay <vlan-id > <forwarddelay >
Parameters	vlan-id Vlan Id for which the forward delay time to be set. forwarddelay Forward delay Time to be set. The valid range of the Forward delay time is (4.0 – 30.0) secs.
Examples	N-TRON/Admin#[1]> rstp set bridgeforwarddelay 1 6 N-TRON/Admin#[2]> rstp set bridgeforwarddelay 2 10
NOTES	Please ensure that the forwarddelay time and vlan id values are valid. STP switches can take up to 2x this figure before both the root switch and the STP switch changes the port modes into forwarding states.

Get RSTP Bridge Forward Delay

Command Name	rstp get bridgeforwarddelay
Description	To get the Forward Delay Time of a given Vlan Id.
Syntax	rstp get bridgeforwarddelay <vlan-id>
Parameters	vlan-id Vlan Id for which the forward delay time is to be viewed.
Examples	N-TRON/Admin#[1]> rstp get bridge forwarddelay 1 N-TRON/Admin#[2]> rstp get bridge forwarddelay 2
NOTES	Please supply a valid Vlan Index (being greater than zero)

Set RSTP Bridge Hello Time

Command Name	rstp set bridgehellotime
Description	To set the HelloTime for a given Vlan-Id. With STP, Hello Time is the time intervals that the root bridge sends out new BPDUs to the rest of the network. Other STP capable switches will forward these BPDUs along. With RSTP every RSTP capable switch will generate new BPDUs and send them out on every Hello Time Interval.
Syntax	rstp set bridgehellotime <vlan-id> <hellotime>
Parameters	vlan-id Vlan Id for which the priority is to be set. hellotime Hello Time to be set. The valid range of the Hello Time is (1.0-10.0)secs.
Examples	N-TRON/Admin#[1]> rstp set bridgehellotime 1 2 N-TRON/Admin#[2]> rstp set bridgehellotime 2 5
NOTES	Please ensure that the hellotime and vlan id values are valid

Get RSTP Bridge Hello Time

Command Name	rstp get bridgehellotime
Description	To get the Hello Time of a given Vlan Id.
Syntax	rstp get bridgehellotime <vlan-id>
Parameters	vlan-id Vlan Id for which the hellotime is to be viewed.
Examples	N-TRON/Admin#[1]> rstp get bridge hellotime 1 N-TRON/Admin#[2]> rstp get bridge hellotime 2
NOTES	Please supply valid Vlan Index (being greater than zero)

Set RSTP Bridge Max Age

Command Name	rstp set bridgemaxage
Description	To set the Max Age for a given Vlan-Id. RSTP Max Age is the time the switch waits after receiving a BPDU from the root bridge before declaring that there is no longer a valid path to the root bridge (therefore he attempts to become the new root bridge on the network). RSTP will only use this as a backup feature, and to allow compatibility with older STP devices.
Syntax	rstp set bridgemaxage <vlan-id> <maxage>
Parameters	vlan-id Vlan Id for which the priority is to be set. maxage The Max Age to be set. The valid range for maxage is 6.0-40.0 secs. (IEEE 802.1D)
Examples	N-TRON/Admin#[1]> rstp set bridgemaxage 1 7 N-TRON/Admin#[2]> rstp set bridgemaxage 2 40
NOTES	Please ensure that the max age and vlan-id are valid.

Get RSTP Bridge Max Age

Command Name	rstp get bridgemaxage
Description	Gets the Bridge max age of the given Vlan-Id.
Syntax	rstp get bridgemaxage <vlan-id >
Parameters	vlan-id Vlan ID for which the maxage is to be viewed.
Examples	N-TRON/Admin#[1]> rstp get bridgemaxage 1 N-TRON/Admin#[2]> rstp get bridgemaxage 2
NOTES	Please supply valid vlan Index (being greater than zero)

Set RSTP Bridge Priority

Command Name	rstp set bridgepriority
Description	Sets the Bridge Priority. The root bridge on the network will be the one with the lowest bridge priority, or the lowest MAC address if the priorities are the same (as per IEEE 802.1D specification).
Syntax	rstp set bridgepriority <vlan-id> <bridge priority>
Parameters	vlan-id Vlan Id for which the priority to be set. bridge priority Priority of the Bridge to be set. The value should range between 0 and 65535. (as per IEEE 802.1D specification)
Examples	N-TRON/Admin#[1]> rstp set bridgepriority 1 1000 N-TRON/Admin#[2]> rstp set bridgepriority 2 2000
NOTES	Ensure to use a valid range of Bridge priority and Vlan Index (being greater than zero)

Get RSTP Bridge Priority

Command Name	rstp get bridgepriority
Description	Gets the Bridge Priority of the given Vlan-Id.
Syntax	rstp get bridgepriority <vlan-id>
Parameters	vlan-id Vlan Id for which the priority is to be viewed .
Examples	N-TRON/Admin#[1]> rstp get bridgepriority 1 N-TRON/Admin#[2]> rstp get bridgepriority 2
NOTES	

Set RSTP Port Path Cost

Command Name	rstp set portpathcost
Description	To set the port path cost for a given port in the given vlan id. STP and RSTP use the path cost to determine which path to use when there are 2 or more available paths that both have the same port priority.
Syntax	rstp set portpathcost <vlan-id> <port no> <pathcost>
Parameters	vlan-id Vlan Id for which the pathcost is to be set. port no The portnumber for which the path cost is to be set. pathcost The path cost value to be set (1-200000000).
Examples	N-TRON/Admin#[1]> rstp set portpathcost 1 4 100 N-TRON/Admin#[2]> rstp set portpathcost 2 6 200
NOTES	Please supply a valid Vlan Index (being greater than zero), a valid Port Number, and a valid path cost.

Get RSTP Port Path Cost

Command Name	rstp get portpathcost
Description	To get the port path cost for a given port in the given vlan id
Syntax	rstp get portpathcost <vlan-id> <port no>
Parameters	vlan-id Vlan Id to which the port belongs. port no The portnumber for which the path cost is to be viewed.
Examples	N-TRON/Admin#[1]> rstp get port pathcost 1 4 N-TRON/Admin#[2]> rstp get port pathcost 2 6
NOTES	Please supply a valid Vlan Index (being greater than zero)and Port Number

Set RSTP Port Priority

Command Name	rstp set portpriority
Description	To set the priority of the port for a given port in the given vlan-id. STP and RSTP use the port priority to determine which port to place into forwarding mode when there are 2 or more ports to choose from.
Syntax	rstp set portpriority <vlan-id> <port no> <port priority>
Parameters	vlan-id Vlan Id to which the port belongs. port no The portnumber for which the port priority is to be set. port priority The Port priority value to be set. The valid port priority is 0-255.
Examples	N-TRON/Admin#[1]> rstp set portpriority 1 4 100 N-TRON/Admin#[2]> rstp set portpriority 2 6 50
NOTES	Please supply a valid Vlan Index (being greater than zero)and Port Number. If the port priority is the same on both ports then the switch will resort to the path cost to determine the best path.

Get RSTP Port Priority

Command Name	rstp get portpriority
Description	To get the priority of the port for a given port in the given vlan-id
Syntax	rstp get portpriority <vlan-id> <port no>
Parameters	vlan-id Vlan Id to which the port belongs. port no The portnumber for which the port priority is to be set.
Examples	N-TRON/Admin#[1]> rstp get portpriority 1 4 N-TRON/Admin#[2]> rstp get portpriority 2 6
NOTES	Please supply a valid Vlan Index (being greater than zero)and Port Number

Broadcast Packet Count Limit Commands

Get the Broadcast Packet Count Limit for one port

Command Name	broadcast get percentage
Description	Displays the broadcast packet percentage for a particular port.
Syntax	broadcast get percentage <port-number>
Parameters	port-number The port number must range between 1 and the maximum port number in the switch.
Examples	N-TRON/Admin#[1]> broadcast get percentage 6 The BPCL for port number 6 is : 100
NOTES	

Get the Broadcast Packet Count Limit for all ports

Command Name	broadcast show percentage
Description	Displays the broadcast packet percentage for all ports.
Syntax	broadcast show percentage
Parameters	None
Examples	N-TRON/Admin#[1]> broadcast show percentage Broadcast Percentage Value for Ports Port # 1 : 100 Port # 14 : 100 Port # 2 : 100 Port # 15 : 100 Port # 3 : 100 Port # 16 : 100 Port # 4 : 100 Port # 17 : 100 Port # 5 : 100 Port # 18 : 100 Port # 6 : 100 Port # 19 : 100 Port # 7 : 100 Port # 20 : 100 Port # 8 : 100 Port # 21 : 100 Port # 9 : 100 Port # 22 : 100 Port # 10 : 100 Port # 23 : 100 Port # 11 : 100 Port # 24 : 100 Port # 12 : 100 Port # 25 : 100 Port # 13 : 100 Port # 26 : 100
NOTES	

Set the Broadcast Packet Count Limit

Command Name	broadcast set percentage
Description	Sets the broadcast packet percentage for a particular port
Syntax	broadcast set percentage <port-number> <%>
Parameters	port-number The port number must range between 1 and the maximum port number in the switch. % The count limit should be in the range 0 to 100 and represents the percentage.
Examples	N-TRON/Admin#[1]> broadcast set percentage 4 100
NOTES	

VLAN Configuration Examples

Example 1 – Basic understanding of port based VLANs

VLAN Configuration View							Ports Configuration View		
VLAN Status : Enable							Port No	Port Name	PVID
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port			
1	Default VLAN	A3-A6,B1-B6,C1-C6,D1-D6	--	YES	All	0	1	A1	2
2	VLAN -2	A1-A2	--	YES	All	0	2	A2	2
							3	A3	1
						
							23	D5	1
							24	D6	1

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
Port A1	Untagged	MAC on port 2	Port A2	Unicast Traffic
Port A1	Untagged	Unknown MAC	Port A2	Floods VLAN 2
Port A1	VID 4	MAC on port 2	Port A2	Strips VID off packet
Port A3	Untagged	MAC on port 5	Port A5	Unicast Traffic
Port A3	Untagged	Unknown MAC	Port A4-D6	Floods VLAN 1
Port A3	VID 4	MAC on port 6	Port A6	Strips VID off packet

Example 2 – Basic understanding of tagged VLANs (Admit – Tagged Only)

VLAN Configuration View							Ports Configuration View		
VLAN Status : Enable							Port No	Port Name	PVID
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port			
1	Default VLAN	--	A3-A6,B1-B6,C1-C6,D1-D6	YES	Tagged Only	0	1	A1	**
2	VLAN -2	--	A1-A2	YES	Tagged Only	0	2	A2	**
							3	A3	**
						
							23	D5	**
							24	D6	**

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
Port A1	Untagged	MAC on port A2	--	Packet Discarded
Port A1	VID 2	MAC on port A2	Port A2	Unicast Traffic
Port A1	VID 4	MAC on port A2	--	Packet Discarded
Port A1	VID 2	MAC on port A5	Port A2	Floods VLAN 2
Port A3	Untagged	MAC on port A1	--	Packet Discarded
Port A3	VID 1	MAC on port A6	Port A6	Unicast Traffic
Port A3	VID 1	Unknown MAC	Port A4-D6	Floods VLAN 1
Port A3	VID 4	MAC on port A8	--	Packet Discarded

Example 3 – Basic understanding of tagged VLANs (Admit – All)

VLAN Configuration View							Ports Configuration View		
VLAN Status : Enable							Port No	Port Name	PVID
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port			
1	Default VLAN	--	A3-A6,B1-B6,C1-C6,D1-D6	YES	All	0	1	A1	**
2	VLAN -2	--	A1-A2	YES	All	0	2	A2	**
							3	A3	**
						
							23	D5	**
							24	D6	**

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
Port A1	Untagged	MAC on port A2	Port A2	Adds VID 2 to packet
Port A1	VID 2	MAC on port A2	Port A2	Unicast Traffic
Port A1	VID 4	MAC on port A2	--	Packet Discarded
Port A1	VID 2	Unknown MAC	Port A2	Floods VLAN 2
Port A3	Untagged	Unknown MAC	Port A4-D6	Adds VID 1 to packet & Floods VLAN 1
Port A3	VID 1	MAC on port A6	Port A6	Unicast Traffic
Port A3	VID 1	Unknown MAC	Port A4-D6	Floods VLAN 1
Port A3	VID 4	MAC on port B2	--	Packet Discarded

Example 4 – Basic understanding of Hybrid VLANs

VLAN Configuration View							Ports Configuration View		
VLAN Status : Enable							Port No	Port Name	PVID
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port			
1	Default VLAN	A3-A6,B1-B6,C1-C6,D1-D6	--	YES	All	0	1	A1	2
2	VLAN -2	A1-A2	A3-A4	YES	All	0	2	A2	2
							3	A3	1
						
							23	D5	1
							24	D6	1

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
Port A1	Untagged	MAC on port A2	Port A2	Unicast Traffic
Port A1	Untagged	MAC on port A3	Port A3	Adds VID 2 in the packet
Port A1	VID 4	MAC on port A2	--	Packet Discarded
Port A1	VID 4	MAC on port A3	--	Packet Discarded
Port A1	VID 2	MAC on port A2	Port A2	Strips VID off packet
Port A3	Untagged	MAC on port A6	Port A6	Unicast Traffic
Port A3	Untagged	Unknown MAC	Port A4-D6	Floods VLAN 1
Port A3	VID 4	MAC on port A5	--	Packet Discarded
Port A3	VID 4	MAC on port A4	--	Packet Discarded
Port A3	VID 2	MAC on port A4	Port A4	Strips VID off packet
Port A3	VID 2	MAC on port A1	Port A1	Strips VID off packet

Example 5 – Basic understanding of Overlapping VLANs

VLAN Configuration View

VLAN Status : Enable						
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port
1	Default VLAN	--	--	YES	All	0
2	VLAN -2	A1-A6,B1-B6,C1-C6,D1-D6	--	YES	All	0
3	VLAN -3	A2-A6,B1-B6,C1-C6,D1-D6	--	YES	All	0
4	VLAN -4	A1-A2	--	YES	All	0

Ports Configuration View

Port No	Port Name	PVID
1	A1	4
2	A2	2
3	A3	3
...
23	D5	3
24	D6	3

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
Port A1	Untagged	MAC on port A2	Port A2	Unicast Traffic
Port A1	Untagged	MAC on port A3	--	Packet Discarded
Port A1	VID 4	MAC on port A2	Port A2	Strips VID off packet
Port A1	VID 4	Unknown MAC	Port A2	Strips VID off packet & Floods VLAN 4
Port A2	Untagged	MAC on port A1	Port A1	Unicast Traffic
Port A2	Untagged	MAC on port A5	Port A5	Unicast Traffic
Port A2	VID 2 or 3	MAC on port A5	Port A5	Strips VID off packet
Port A2	Untagged	Unknown MAC	Port A1,B1-D6	Floods VLAN 2
Port A3	Untagged	MAC on port A1	--	Packet Discarded
Port A3	Untagged	MAC on port A2	Port A2	Unicast Traffic
Port A3	Untagged	MAC on port A5	Port A5	Unicast Traffic
Port A3	VID 2 or 3	MAC on port A2	Port A2	Strips VID off packet

Example 6 – Basic understanding of VLANs with Multicast Filtering

VLAN Configuration View

VLAN Status : Enable						
VLAN ID	VLAN Name	Untagged Port(s)	Tagged Port(s)	Mgmt Port	Admit	Mirror Port
1	Default VLAN	--	--	YES	All	0
2	VLAN -2	A1-A6,B1-B6,C1-C6,D1-D6	--	YES	All	0
3	VLAN -3	A2-A6,B1-B6,C1-C6,D1-D6	--	YES	All	0
4	VLAN -4	A1-A2	--	YES	All	0

Ports Configuration View

Port No	Port Name	PVID
1	A1	4
2	A2	2
3	A3	3
...
23	D5	3
24	D6	3

Display Static Multicast Group Address(es)

Multicast Address	Port List
01:00:00:00:00:01	1-24
01:00:00:00:00:02	1,6,8

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
Port 1	Untagged	01:00:00:00:00:01	Port 2	Goes to Ports 1-24, but port 1 can only send to Port 2 (VLAN 4)
Port 1	Untagged	01:00:00:00:00:02	--	Packet Discarded
Port 2	Untagged	01:00:00:00:00:01	Port 1,3-24	Goes to Ports 1-24, but won't go back out the port it came in on
Port 2	Untagged	01:00:00:00:00:02	Port 1,6,8	Goes to ports 1,6,8
Port 3	Untagged	01:00:00:00:00:01	Port 2,4-24	Goes to Ports 1-24, but can't talk to Port 1 since it is on a different VLAN
Port 3	Untagged	01:00:00:00:00:02	Port 6,8	Goes to Port 1,6,8, but can't talk to Port 1 since it is on a different VLAN

Note: If there are multiple ports on different VLANs, the 9000 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. If the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.

KEY SPECIFICATIONS

Switch Properties

Number of MAC Addresses: 4,096
Aging Time: Programmable
Latency Type: 2.9 μ s
Backplane Speed: 6.6Gb/s
Switching Method: Store & Forward

Physical

Height: 5.10"
Width: 8.98"
Depth: 5.2"
Weight (max): ~5 lbs
Din-Rail mount: 35mm

Electrical

Redundant Input Voltage: 10-30 VDC
Input Current (max): 2.5 A@24V (fully populated)
Inrush @ 24VDC: 16.0 A for 7.5 ms
Input Ripple: Less than 100 mV
N-TRON Power Supply: NTPS-24-5 (5 Amp@24VDC)

Environmental

Operating Temperature: -20°C to 70°C
Storage Temperature: -40°C to 85°C
Operating Humidity: 10% to 95%
(Non Condensing)
Operating Altitude: 0 to 10,000 ft.

Shock and Vibration (bulkhead mounting)

Shock: 200g @ 10ms
Vibration/Seismic: 50g, 5-200Hz, Triaxial

Reliability

MTBF: >1Million Hours



Connectors

10/100BaseTX: Up to Twenty-four (24) RJ-45 Copper Ports
100BaseFX: Up to Sixteen (16) SC or ST Duplex Ports
1000BaseSX/LX: Two (2) LC Duplex Ports as an option

Recommended Wiring Clearance:

Front: 4" (10.16 cm)
Side: 1" (2.54 cm)

Network Media

10BaseT: >Cat3 Cable
100BaseTX: >Cat5 Cable
100BaseFX, 1000BaseSX:
Multimode: 50-62.5/125 μ m
100BaseFXE, 1000BaseLX:
Singlemode: 7-10/125 μ m

100 Mb Fiber Transceiver Characteristics

Fiber Length	2km*	15km**	40km**	80km**
TX Power Min/Max	-19dBm/-14dBm	-15dBm/-7dBm	-5dBm/0dBm	-5dBm/0dBm
RX Sensitivity Max	-32dBm	-29dBm	-34dBm	-34dBm
Wavelength Min/Max	1310nm	1310dm	1310dm	1550nm

* Multimode Fiber Optic Cable

** Singlemode Fiber Optic Cable

Gigabit Fiber Transceiver Characteristics

Fiber Length	550m* with 50/125 µm	300m* with 62.5/125 µm	10km**	40km**	70km**
TX Power Min/Max	-9.5dBm/-4dBm	-9.5dBm/-4dBm	-5dBm/0dBm	-4dBm/1dBm	-3dBm/2dBm
RX Sensitivity Max	-17dBm	-17dBm	-20dBm	-21dBm	-23dBm
Wavelength	850nm	850nm	1310nm	1550nm	1550nm
Assumed Fiber Loss	-3.5 dB/km	-3.75 dB/km	-0.5 dB/km	-0.25 dB/km	-0.20 dB/km
Laser Type	VCSEL	VCSEL	FP	DFB	DFB

*SX Fiber Optic Cable

** LX Fiber Optic Cable

Regulatory Approvals:

Safety: UL 1604 (US and Canada) Hazardous Locations, Class I, Div 2, Groups A, B, C, D, T4A

EMI: EN61000-6-4, EN55011 – Class A
FCC Title 47, Part 15, Subpart B - Class A

EMS: EN61000-6-2
EN61000-4-2 (ESD)
EN61000-4-3 (RS)
EN61000-4-4 (EFT)
EN61000-4-5 (Surge)
EN61000-4-6 (Conducted Disturbances)

Conducted Low Frequency: IEC60533

Shock: IEEE 1613 (250 mm)
Vibration: IEEE 1613 (V.S.3 20 mm/s)
IEC60068-2-6 (Test Fc)
Cold: IEC60068-2-1
Dry Heat: IEC60068-2-2
Damp Heat: IEC60068-2-30 (Test Db)

N-TRON Limited Warranty

N-TRON, Corp. warrants to the end user that this hardware product will be free from defects in workmanship and materials, under normal use and service, for the applicable warranty period from the date of purchase from N-TRON or its authorized reseller. If a product does not operate as warranted during the applicable warranty period, N-TRON shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of N-TRON. Replacement products may be new or reconditioned. Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer. N-TRON shall not be responsible for any custom software or firmware, configuration information, or memory data of customer contained in, stored on, or integrated with any products returned to N-TRON pursuant to any warranty.

OBTAINING WARRANTY SERVICE: Customer must contact N-TRON within the applicable warranty period to obtain warranty service authorization. Dated proof of purchase from N-TRON or its authorized reseller may be required. Products returned to N-TRON must be pre-authorized by N-TRON with a Return Material Authorization (RMA) number marked on the outside of the package, and sent prepaid and packaged appropriately for safe shipment. Responsibility for loss or damage does not transfer to N-TRON until the returned item is received by N-TRON. The repaired or replaced item will be shipped to the customer, at N-TRON's expense, not later than thirty (30) days after N-TRON receives the product. N-TRON shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to N-TRON for repair, whether under warranty or not.

ADVANCE REPLACEMENT OPTION: Upon registration, this product qualifies for advance replacement. A replacement product will be shipped within three (3) days after verification by N-TRON that the product is considered defective. The shipment of advance replacement products is subject to local legal requirements and may not be available in all locations. When an advance replacement is provided and customer fails to return the original product to N-TRON within fifteen (15) days after shipment of the replacement, N-TRON will charge customer for the replacement product, at list price.

WARRANTIES EXCLUSIVE: IF AN N-TRON PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT N-TRON'S OPTION. TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS, OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS, OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. N-TRON NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. N-TRON SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO OPEN, REPAIR OR MODIFY THE PRODUCT, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, POWER CUTS OR OUTAGES, OTHER HAZARDS, OR ACTS OF GOD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW, N-TRON ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF N-TRON OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT N-TRON'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

DISCLAIMER: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

GOVERNING LAW: This Limited Warranty shall be governed by the laws of the State of Alabama, U.S.A.